


# Manual Instruction

## BCD - 300

### Element

1. CD-LCD-Display
2. Speaker
3. Radio tuning knob
4. FM Stereo LED indicator
5. Dial lens
6. Selector switch (Select AM/FM/BUZZER alarm)
7. Clock LCD display
8. Volume control
9. Selector switch (Select AUTO/AL,RADIO/CD)
10. Alarm button (Alarm setting)
11. Time button (Time setting)
12. Snooze/Light button
13. Minute button (Clock min setting)
14. Hour button (Clock hour setting)
15. Power off button
16. Power on button
17. Battery door
18. Program button
19. Repeat button
20. Skip/Search button
21. Stop button
22. Play/Pause button
23. Headphone jack
24. DC input jack 9 V
25. Power LED indicator
26. Speaker
27. CD-door open cover
28. CD compartment

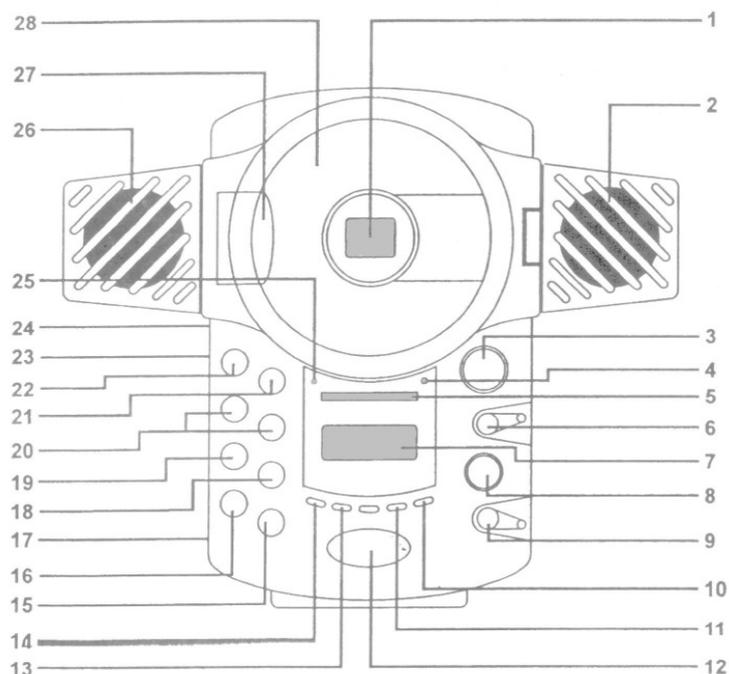

**SPLASH RESISTANT:** Do not use this unit under direct water flow. This unit splash resistant, meaning it can withstand small splashes of water.

### POWER SOURCES

This CD player requires either 6“C“ cell batteries (not included) or a 9 V DC 600mA adapter having a positive center (not included).

#### Batteries installation

1. Make sure that the unit is not on the base. Open the battery compartment door by rotating the tab, then lift the battery compartment off.
2. Insert (6) „C“ cell batteries (not included), one (1) „AAA“ size cell batteries (for clock) (not included) as shown in the illustration to the right. Alkaline batteries are recommended for the longest playing time.
3. Replace the battery compartment cover and rotate the tab so the compartment is secured.

## AC Operation

To operate the unit using AC power, connect a 9 V AC adapter (not included) to an AC outlet having 110V/220V AC only. Plug the small end into the DC 9V jack on the unit and connect the other end into the AC outlet. The batteries are automatically disconnected when the AC adapter is used.

**CAUTION:** When not using AC power, disconnect the AC adapter from the wall outlet by pulling the plug (not the cord). Do not touch the AC adapter with wet hands and plug fully inserted without exposing any part of the blade.

### Headphone jack

This unit will accept stereo headphones with a 3.5 mm plug. Before connecting the headphones set the volume to minimum level as not to damage your ears and the headphones. Connect the headphones to the headphone jack (23), the speakers will be automatically disconnected.

**Warning:** Prolonged exposure to high sound levels may permanently damage your hearing. You may not hear some warning signals while wearing these headphones.

### Volume

Adjust the volume control (8) to the desired level.

### Light

To light up the display, press the light button (12). (for clock LCD display)

### Listening to the radio

1. Press power button (16) on the unit
2. Slide selector switch (9) to select the radio.
3. Slide selector switch (6) to select AM or FM
4. Turn tuning knob (3) tune in desired radio station.
5. To turn off radio, press power button (15) to off the unit.

### Antennas

An AM/FM antennas is built into the unit.

## **Operation**

### Clock setting

Press and hold time button (11) to set the clock.  
Press hour (14) or min (13) button respectively.

### Alarm time setting

Press and hold Alarm button (10) to set the alarm time.  
Press hour (14) or min (13) button respectively.  
Press alarm button (10), once more to memorize the alarm time.

Slide selector switch (9) to select AUTO/AL, for alarm or AM or FM to wake to your desired radio station.

**Note:** Power button (16) must be on, for alarm to sound.

### Snooze – function

Snooze function works under alarm mode only.  
Press Snooze button (12).  
After 5 minutes alarm sounds again.  
To erase the Snooze function, press power button (15) off.

## **Operating of CD player**

### **Playing a CD**

1. Unfasten the buckle (27), to open the CD compartment.
2. Insert a CD with the label facing upward.
3. Close the CD compartment
4. Press power button (16) on the unit.
5. Press band switch (9) to select CD.
6. Press play/pause button (22) to start CD playback from the first track.
7. Press once more play/pause button (22) to momentarily pause playing track will flash. Press again play/pause (22) button to resume to playback.
8. To stop the playback, press stop button (21).

### **Skipping tracks**

Press during play.

Backward (20)

Forward (20)

Press Backward (20) twice to skip to the beginning of the previous track.

### **Searching through tracks**

Press and hold during play.

Backward (20)

Forward (20)

### **Operation of CD player**

Programmed playback

Up to 16 tracks can be programmed in to play in any desired sequence.

1. Press power button (16) on the unit.
2. Press Band switch (9) to select CD.
3. Unfasten the buckle (27), to open the CD compartment.
4. Insert a CD with the label side facing upward.
5. Close the CD compartment.
6. Press program button (18) until „program“ flashes in display (1)
7. Press skip forward or skip backward button to select a desired track to be memorized.
8. Press program button (18) to program the track
9. Repeat steps 7 and 8 to program tracks.
10. Press play/pause button (22) to start playing.

To cancel program play, press stop button (21) two times.

### **Repeat play**

#### **To repeat a single track**

Press repeat button (19) while the track you want to repeat is playing. The „RPT“ flashing will appear in display (1).

- to repeat another track, press backward or forward (20) button.
- To cancel repeat play, press repeat button two times.

#### **To repeat all the tracks**

Press Repeat button (19) twice during play. The „RPT“ indicator will appear in Display (1).

- All tracks will be played through in sequence and then the sequence will be repeated continuously.
- To cancel repeat play, press repeat button (19) one time.

## **SAFETY PRECAUTIONS**

Caution: To reduce the risk of electric shock, do not remove cover (or Back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

### **DANGEROUS VOLTAGE**

Uninsulated dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.

### **ATTENTION**

The Owner's manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual.

### **DANGER:**

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

### **FCC WARNING:**

This Equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### **LASER SAFETY:**

This unit employs a laser. Only qualified service personnel should attempt to service this device due possible eye injury.

**CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

**SPLASH RESISTANT:** Do not use this unit under direct water flow. This unit splash resistant, meaning it can withstand small splashes of water.