

 **soundmaster**®

CTV-3714 DVB-T

37cm/14" Colour TV / DVD Combo

Dual TV-Tuner (DVB-T + PAL BG)



	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>WARNING: SHOCK HAZARD - DO NOT OPEN AVIS: RISQUE DE CHOC ÉLECTRONIQUE - NE PAS OUVRIR WARNUNG: ELEKTROSCHOCK GEFAHR - NICHT ÖFFNEN</p>		

**LASERSCHUTZKLASSE 1 PRODUKT
CLASS 1 LASER PRODUCT
APPAREIL A LASER DE CLASSE 1**

Features

TV Mode:

Infrared remote control - Electronically locks in and memorizes available channels for perfect reception.

On-Screen 19 Language Display (Option)

This TV can display the onscreen language in English, Persian, Arabic, Turkish, France, Russia, Hungary, Spanish, Romanian, Croatia, Greece, Portuguese, Bulgaria, Serbia, Italian, Poland, German, Dutch, Swedish.

And these kinds of language can be selected or not but one must be selected at least.

Picture Adjustments Using The Remote Control -

The On-Screen display allows precise remote control adjustment of CONTRAST, BRIGHT, COLOR, TINT and SHARPNESS.

Sleep Timer - Operable from the remote control, this TV can be programmed up to 180 minutes to turn off automatically.

Memory Back Up - This system prevents loss of memorized channel selections in case a power interruption to the TV should occur.

TELETEX(OPTION)

Teletext system can decoder all Europe type teletext content. If TV program with teletext broadcast.

Auto Shut Off Function - When background is on. If there is no signal input from the antenna terminal or AV jacks and no operation for 5 minutes the TV will turn itself off automatically.

DVD Mode:

Randomly playback - You can play tracks randomly.

Programmable playback - You can program the order of the tracks/chapters to play them in any desired order.

DVD menus in a desired language - You can display DVD menus in a desired language, if available on a DVD.

Screen saver / Auto power - off functions - The screen saver program starts when is on input from the TV/DVD for 3 minutes in the stop mode. When the screen saver program is activated for 20 minutes, the power is automatically turned off.

Subtitles in a desired language for the display subtitles - You can select a desired language for the display subtitles, if the language is available on a disc.

Selecting a angle - You can select desired audio language and sound mode, if different languages and modes are available on a disc.

Search - Chapter search / Title search / Track search / Timesearch.

Repeat - Chapter / Title / Track / Group / All / A-B.

Resume Play - User can resume to playback from the part at which the play was stopped.

Dynamic range control - You can control the range of sound volume.

Choices for audio language and sound mode - You can select a desired audio language and sound mode, if different languages and modes are available on a disc.

Installation

Television Location


Follow these recommendations before deciding the location of your television.

1. Avoid excessive sunlight or bright lights, including reflections.
2. Keep away from excessive heat or moisture. Inadequate ventilation may cause internal component failure.
3. Fluorescent lighting may reduce remote control transmitting range.
4. Keep away from magnetic equipment, including motors, fans and external speakers.

WARNING: Use this television receiver only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the Cart / apparatus Combination to avoid injury from tip-over. In order to avoid injury to children, never place your television receiver on a piece of furniture that is capable of being tilted by a child leaning on it, pulling on it, standing on it, or climbing on it. A falling television can cause serious injury or even death.

Remote Control Battery Installation

Requires two AAA batteries(supplied).

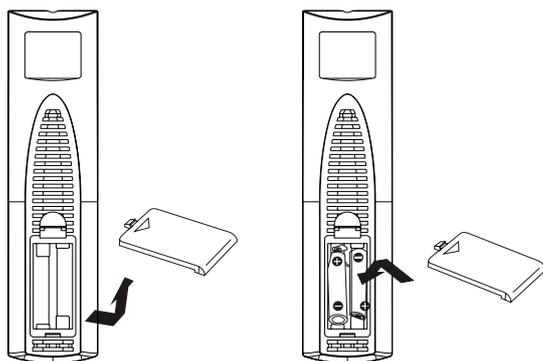**Procedure**

1. Turn the remote control face down. Remove battery cover by pressing down on the marking on the cover and sliding it off in the direction indicated.
2. Install batteries matching(+) and(-) polarity signs.
3. Replace the battery cover by sliding in reverse until the lock snaps.

Note: Incorrect installation can cause battery leakage and corrosion that will damage the Remote control.

Precautions

- Replace batteries in pair.
- Do not mix battery types(zinc carbon with alkaline).
- Do not recharge, heat, short-circuit, disassemble, or burn batteries.

4.If you cause a static discharge when touching the unit, and the unit fails to function, simply unplug the unit from the AC outlet, wait a few minutes, and plug it back in. The unit should return to normal operation.

TO USE AC POWER SOURCE

Use the AC polarized line cord provided for operation on AC. Insert the AC cord plug into a standard 110-240V 50/60Hz polarized AC outlet.

NOTE:


1. This TV can be connected to the specified voltage (AC 110-240V, 50/60Hz).
2. If the polarized AC cord does not fit into a non-polarized AC outlet, do not attempt to file or cut the blade. It is the user's responsibility to have an electrician replace the obsolete outlet.

Optional Equipment Connections


Connection Panels

The actual configuration on you TV maybe different, depending on your model.


Side AV

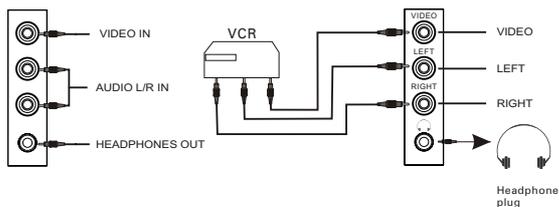

Rear of TV

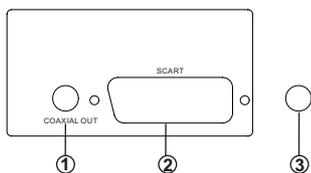

1. COAXIAL digital sound output for DOLBY 5.1 channel.
2. SCART AUDIO / VIDEO INPUT / OUTPUT Connector.
3. 75ohm coaxial Connect for AIRIAL / CABLE network.

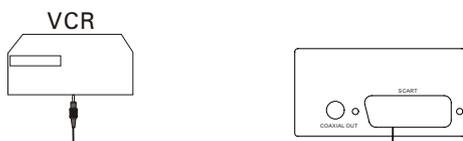

SCART Procedure


- Connect equipment as shown to rear SCART connect.
- TV will check SCART signal Automatically and change to SCART status.

COAXIAL Procedure

- Connect coaxial signal to sound equipment .
- Press AV/DVD on the remote control to change DVD status.

Note: Coaxial output is effective only DVD status.

Front Control Panel

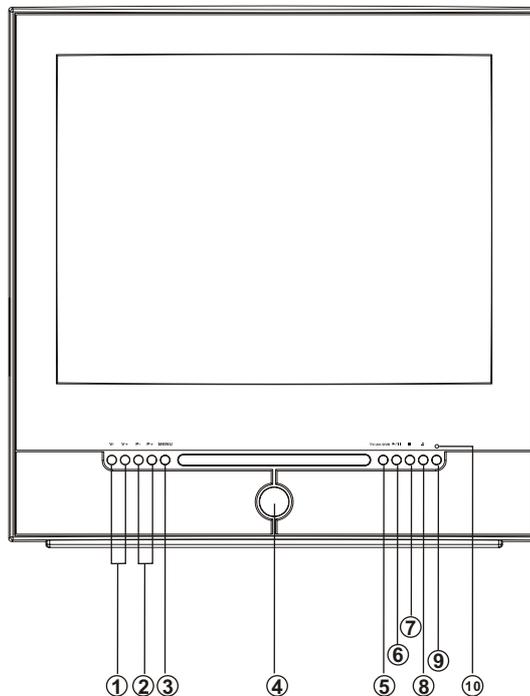

1. Volume adjustment.
2. Program selection.
3. Menu display.
4. Power
5. TV/AV/DVB change.
6. DVD player pause.
7. Stop.
8. Open/Close.
9. Remote control sensor.
10. Power indicator.

Remote Control Operation



TV MODE:

POWER BUTTON()

Press this button to turn the TV on/off. Press any Number Button or Program Up/Down Button, picture and sound will come on within a few seconds.

PROGRAM SELECTION BUTTONS(0-9)

Push the number for your desired program and the program indicator will be displayed on the screen.

Press number key 0-249 for program selection.

Press the number keys to select teletext pages in teletext mode.

DIGIT BUTTON(-/--)

Press this button to select program between 0-249 program.

For example, If you want to access program 8, press 8 key only, If you want to access program 88, you should press this "-/--" button twice the screen display "--", then press "8" "8" key, the TV set will switch to program 88; If you want to access program 188, you should press this "-/--" button three times the screen display "---" then press 1 "8" "8" key, the TV set will switch to program 188.

PICTURE MODE BUTTON(P.P)

Press this button to select the desired picture mode, DYNAMIC, USER MILD and STANDARD can be selected cyclically.

DISPLAY BUTTON()

Press this button sequential to recall for the program number, system, logo etc on the screen.

SLEEP BUTTON()

Press it on display and set the sleep timer in 10 minutes step up to three hours. When the preset timer runs to 0, the TV set will go into stand by mode.

*If no program received, the TV set will switch to stand by auto after 5 minutes.

Q.VIEW BUTTON

Press this button to return to the previously viewed program.

LOCK BUTTON

Press this buttons to enter LOCK menu.

Enter the 4 digits password to display the LOCK menu function.

Note: The Default password is 0000, If forget a password after changing Can use an all-powerful password 7038. this function is just for TV function, The DVD mode descends in valid.

MUTE BUTTON

Press once to mute the sound, press again to return to previously set sound level.

AV MODE BUTTON (TV/AV/DVD)

Press this button to switches for TV/AV/SCART/DVD/DVBT.

Remote Control Operation



PROG +/- BUTTON ()

Press the Program Up Button to select the program forwards.
Press the Program Down Button to select the program backwards.
(Use this button for Page Up/Down to increase/decrease page number in TELETEXT mode).

Pls Note:

By changing channels via remote handset in DVB-T or analog TV is differ as below:

By DVB-T mode: NARROW up/down

By analog TV mode: PROG +/-

VOL +/-BUTTONS ()

Press Volume Up/Down Buttons to adjust sound level.

MENU BUTTON ()

Press this button to display the On-Screen menu function.

SOUND SYSTEM BUTTON (SYS.) (OPTION)

When the sound system is incorrect, Press this button to select the correct sound system.

ZOOM BUTTON (OPTION)

1. Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture.

2. Each press of the ZOOM button changes the TV screen in the following sequence: 16 9 ZOOM NORMAL 4 3)

Note: Zoom not work on DVD mode

TELETEXT MODE

REVEAL BUTTON

Sometimes the answers of quizzes, jokes etc are hidden. Press REVEAL button to reveal the hidden information.

SIZE BUTTON

Press this button to change the Teletext screen display mode among the following: (1) Upper half screen enlarged; (2) Lower half screen enlarged; (3) Normal screen state.

STOP BUTTON

Press this button to stop teletext.

CLOCK BUTTON

Press this button to display teletext clock.

INDEX

Press this button to obtain the index page.

OFF BUTTON

Press this button to turn off the teletext.

ON/MIX BUTTON

Press this button to turn on the teletext. In TELETEXT mode, Press this button to turn on or off the teletext background.

SUB.PAGE BUTTON

Press this button to display sub pages.

Remote Control Operation



DVD MODE:

POWER

Press this button to switch television on or off.

OPEN/CLOSE Button

Press OPEN/CLOSE button to load disc on disc tray. Hold the disc without touching either of its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position. In case of interactive DVDs with playback control, a menu appears on the TV screen.

DVD MENU Button

If play some DVD discs, press this button back to root menu screen.

PROGRAM Button

SUBTITLE Button

To press this button, you can change the subtitle language from one selected to the initial settings to a different language, if available.

TITLE Button

Press PROGRAM button, then the PROGRAM will appear on TV screen now you can press > and ENTER button to select START option and enjoy the desired tracks.

DVD SETUP Button

You can enjoy picture frame forward by pressing this button.

AUDIO Button

To press this button, you can change the audio language from the one selected at settings to a different language, if available.

GOTO Button

Press this button to go to desired position. The player provides 3 search mode. When the above items are showed on TV screen, you can input number to locate desired sector, then press PLAY to commence play. The number you input is invalid if it is beyond the track's capacity.

DISPLAY Button

To display player OSD.

PREV/NEXT Button

Press these button to go to the previous/next chapter (DVD).

FR/FF Button

These buttons allow skipping ahead/back at 5-level speed. Press PLAY button to return to normal playback.

Remote Control Operation



DVD MODE:

REPEAT Button

To press this button you can repeatedly play a title(DVD) or all tracks(CD) when ALL appears on TVscreen, you can repeatedly play a chapter (DVD) or a single track(CD) when Repeat chapter appears on TVscreen, you can cancel repeat functions when no Repeat off appears on TVscreen.

PLAY/PAUSE Button ▶||

Press this button to start playback. Press this button again to pause playback.

STOP Button ■

When this button is pressed once, the unit records the stopped point, from where playback will resume (resume function) if

PLAY is pressed afterwards. But if STOP button is pressed again instead of PLAY button, there will be no resume function.

TITLE button

DVD disc:

Press TITLE button, then the DVD menu or titles available on the disc will be displayed. Then you can use "◀▶" and ENTER button to select programs.

ZOOM button

1. Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture.

2. Each press of the ZOOM button changes the TV screen in the following sequence:

2X size → 3X size → 4X size → 1/2 size → 1/3 size → 1/4 size → normal size

3. Use the ◀▶ buttons to move through the zoomed picture.

4. To resume normal playback, press ZOOM button until screen becomes 1X.

N Note: Zoom may not work on some DVDs.

ANGLE button

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback. Press ANGLE repeatedly during playback to select a desired angle. Note that the number of the current angle appears on screen.

N Note:

The angle indicator will blink on the TV screen during scenes recorded at different angles as an indication that angle switching is possible.

SLOW Button

Press this button during playback to activate the slow function.

Each press on this button change the TV screen in the follow sequence: 1/2 - 1/4 - 1/8 - 1/16 normal play

Remote Control Operation



DVBT MODE:

FORMAT: used to change the TV picture aspect

SUBTITLE used to switch subtitles on or off

INFO used to display information for the channel being viewed

RECALL reverts to previous channel

EXIT used to return to TV

DVBT-MENU: used to open and close the menu windows

TEXT: used to open the interactive digital text

PAGE</>: digital text page up and down

EPG: Electronic Programmer Guide used to open and close the EPG

FAV: Favorites Button used to open the favorites menu

RADIO: to switch between TV picture and FM audio signal

LANG: LANGUAGE to open or close the language menu

PAUSE: to pause or play the picture

ENTER: used to confirm a selection within a menu

AUDIO: used to set the sound output

* Pls Note:

By changing channels via remote handset in DVB-T or analog TV is differ as below:

By DVB-T mode: NARROW up/down

By analog TV mode: PROG +/-

Menu Navigation

TV PARTS:

Menu Navigation

WARNING: The Main Power Switch (of the Control Location page) is the Manually Operated Mechanical Switch is requested to Manually to turn On and Off the Main power. The Remote control can not cut off main voltage at the TV set. For safety purpose, turn off the Main Switch manually when long time not use the TV or for the long vacation. Press once will turn on the Main supply of the TV set. The Power indicator (of the Control Location page) will light up. To make sure the power is turn off, please fully press the Main switch and make sure the power indicator light off.


1. Press ..MENU.. button to select PICTURE..SOUND..TIME..SETUP..TUNE..EXCHANGE menu cyclically.
2. After entering an item, you can select the devised adjusting item by press the P +/- Buttons , Then you can adjust it by press V +/- Buttons.

Picture Menu



- 1 You can select the BRIGHTNESS.CONTRAST.COLOUR. SHARPNESS.
- 2 You can adjust the BRIGHTNESS.CONTRAST.COLOUR. SHARPNESS. Item by press V +/- buttons.

Sound Menu

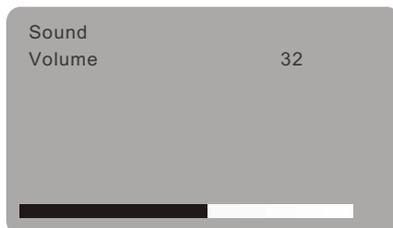

1. You can adjust VOLUME by press V +/- buttons.

Menu Navigation

Time Menu

Time	
Clock	-- --
On Time	-- --
On PROG	1
Off Time	-- --
Sleep Timer	0
Remind Time	-- --
Remind PROG	1

1. CLOCK

Press P +/- buttons to select hour or Minute. Press V +/- buttons to adjust CLOCK Time. You can press CLOCK buttons to display current clock time.

2. ON TIME

Press P +/- buttons to select hours Or minute. Press V +/- buttons to adjust ON TIME.

3. ON PROG.

Press V +/- buttons to select ONPROGRAM.

4. OFF TIMER

Press P +/- buttons to select hour or Minute. Press V +/- buttons to adjust OFF time.

5. SLEEP TIMER

Press V +/- buttons to set SLEEP TIME.

6. REMINDER TIMER

Press P +/- buttons to select hour or minute. Press V +/- buttons to adjust REMIND TIME.

7. REMIND PROG

Press V +/- buttons to select REMINDPROGRAM.

* Timer function will be reset when you switch off the TV set by the main power switch or unplugged, And which will be working normally when you are switch off the TV set by remote control.

Menu Navigation

Setup Menu

Setup	
Language	English
Colour system	Auto
Sound system	I
Blue back	ON
Black stretch	OFF
TXT language	Easteur
Calendar	
Game	

You can select the item by press P +/- buttons. then you can adjust it press V +/- buttons.

1. LANGUAGE

You can select the language what you want.

2. COLOUR SYSTEM

Press V +/- buttons to set the colour system.

3. SOUND SYSTEM

Press V +/- buttons to set the sound system.

4. BLUE BACK

Press V +/- buttons to select it ON or OFF, For BACKGROUND when no signal is input at TV or AV mode.

5. BLACK STRETCH

Press V +/- buttons to select it ON or OFF.

6. TXT LANGUAGE

You can select the TXT language what you want.

7. CALENDAR

Press VOL +/- buttons to enter CALENDAR menu..

8. GAME

Press VOL +/- buttons to enter GAME menu..

Calendar Menu

		2005		1		
SU	MO	TU	WE	TH	FR	ST
						1
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					

1. Press V +/- buttons to select YEAR, MONTH or DATA.


2. Press V +/- buttons to adjust YEAR, MONTH or DATA.

3. Press MENU Button to return.

*Calendar setting will be reset when you are switch off the TV set by main power switch or unplugged, And which will be working normally when you are switch off the TV set by remote control.

Menu Navigation

Game

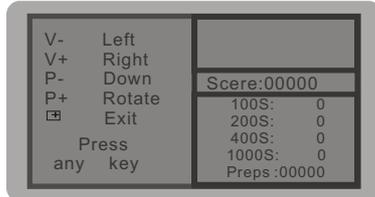

- 1.Press any key a beginning game.
- 2.VOL- is Used for shift left.
- 3.VOL+ is used for shift right.
- 4.PROG - its used for speed up.
- 5.PROG+ is used for rotate.
- 6.Press  button exit game.

You can select the item by press the P +/- buttons.

1.SKIP

Press V +/- buttonsto set skip on or off,when you set skip on.this program will auto hid.

2.PROGRAM

Press V +/- buttons to set the PROGRAM number.

3.MANUAL SEARCH

Press V +/- buttons to search for next or previous available program,the set will auto stop whitethe signal is received.

4.FINE TUNE

Press V +/- buttons can fine tune the current program forward or backward for better quality.

5.AUTO SEARCH


Press V +/- buttons ,the TV set will auto Search in 3 bands and store every program.

Note: In the Lock menu, when the options of GENERAL LOCK is an on, then have no Tune Menu.


In AV mode ,this item will not displayed.

- 1.Select the item by press the P +/- buttons .
- 2.Press V +/- buttons to select PROGRAM 1.
- 3.Press V +/- buttons to select PROGRAM 2.
- 4.Press V +/- buttons to select EXCHANGE PROGRAM 1 and PROGRAM 2.

Tune Menu

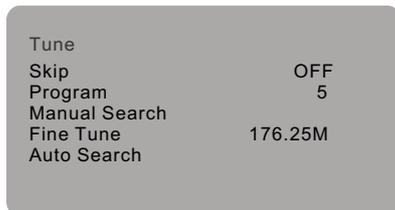

Exchange Menu

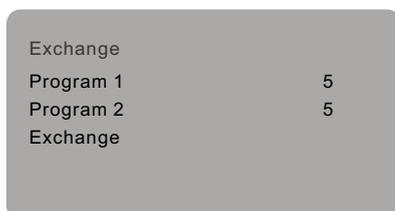

Menu Navigation

Lock Menu

Lock	
General Lock	OFF
Program No.	0
Child Lock	OFF
AV Lock	OFF
VOL Limit sw	OFF
VOL Limit	100
Change password	

In TV mode, Press lock buttons to enter LOCK menu. Enter the 4 digits password to display the LOCK menu function.
*The Default password is 0000, If forget a password after changing Can use an all-powerful password 7038

1. GENERAL LOCK

Press V +/- buttons to select it ON or OFF.

2. PROGRAM No.

Press V +/- buttons to set the PROGRAM number.

3. CHILD LOCK

Press V +/- buttons to select it ON or OFF.

4. AV LOCK

Press V +/- buttons to select it ON or OFF.

5. VOL LIMIT SW

Press V +/- buttons to select it ON or OFF.

6. VOL LIMIT

Press V +/- buttons to set the limit volume.

7. CHANGE PASSWORD

Press VOL +/- buttons to enter CHANGE PASSWORD menu.

Note: When the options of GENERAL LOCK is an ON, CHILD LOCK, AV LOCK, VOL LIMIT SW just valid.

When the options of GENERAL LOCK is an on, then have no Tune Menu and the DVD mode descends in valid.

Change Password Menu

Change Password	
New Password	----
Confirm	----

1 NEW PASSWORD

Enter the NEW password. Enter 4 digits from the remote control unit numeric buttons.

2 CONFIRM

Press P +/- buttons to select Confirm. Confirm the NEW password by entering it again. If the confirmation is incorrect, the cursor will stay in this column. After entering, the correct new password again, the cursor will jump automatically to exit.

DVBT SETUP MENU SETTING

Dolby Digital Setup


● System Setting

This function allows you to set up the normal aspect ratio (picture display shape) according to source signal and monitor format of your TV, or your own viewing preference.

● Regional Settings

This function allows you to set the time zone of your location and corresponding bandwidth of the digital signals all at once simply by selecting the country you are currently in.


- 1 Under Main Menu, press DOWN button/ UP button to select System Setting .
- 2 Under System Setting, press ENTER button to select Regional setting .
- 3 Press LEFT button/ RIGHT button/ ENTER button select the country where you' re in

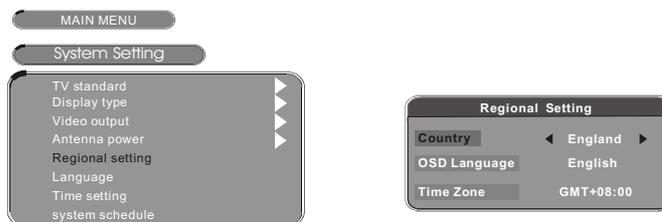

● OSD Language/Audio Language/Teletext language

This function allows you to set the language of your OSD (On-Screen Display) Menu.

- 1 Under Main Menu, press DOWN button/ UP button to select System Setting
- 2 Under System Setting, press ENTER button to select OSD Language 1st Audio language 2nd audio language DVB subtitle
- 3 Press UP button/ DOWN button and ENTER to select the preferred OSD language. Audio language/ DVB subtitle language.

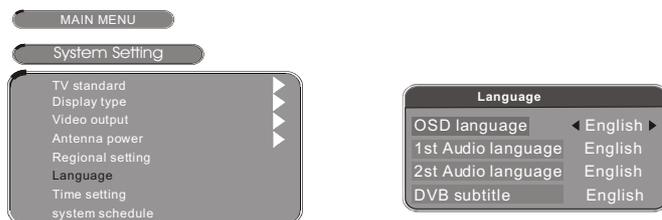

DVBT SETUP MENU SETTING


Speaker Setup Page

Program Search

To Enjoy the high quality of digital TV signals through the Set Top Box, you have to search for all the available TV program first. This unit provides you with 2 ways of program search, including Automatic Search and Manual Search

● Automatic Search

- 1 Under Main Menu, press **DOWN** button and **ENTER** to select **Program Search**.
- 2 Under Program Search, press **ENTER** to select **Automatic Search**.
- 3 An Automatic Search window appears on the screen. All the receivable TV/Music programs will be listed respectively in the TV List/Music boxes below. This process may take several minutes to be done

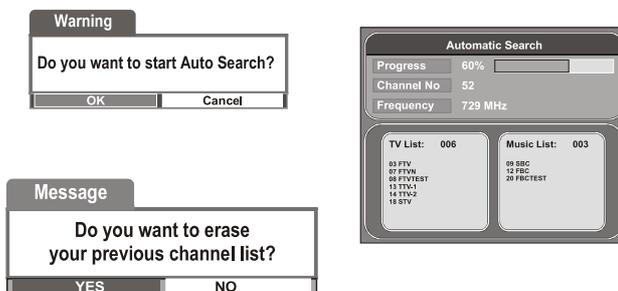


● In Advance:

After Program Search is done, you can start watching TV or listening to Music programs by pressing **UP** button / **DOWN** button.

● Manual Search

You can locate specific programs by selecting frequency numbers.


- 1 Under Main Menu, press **DOWN** button and **ENTER** to select **Program Search**.
- 2 Under Program Search, press **DOWN** button and **ENTER** to select **Manual Search**.
- 3 An Manual Search window appears on the screen. Press **RIGHT** button / **LEFT** button to select **Channel Number**, and the corresponding frequency number will show from down below.
- 4 Press **DOWN** button to highlight **ENTER**, and press **ENTER**.

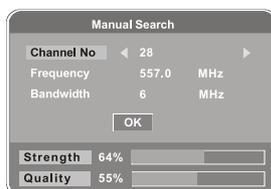

DVBT SETUP MENU SETTING

General Setup Page

- The following is the overview of the seven settings:

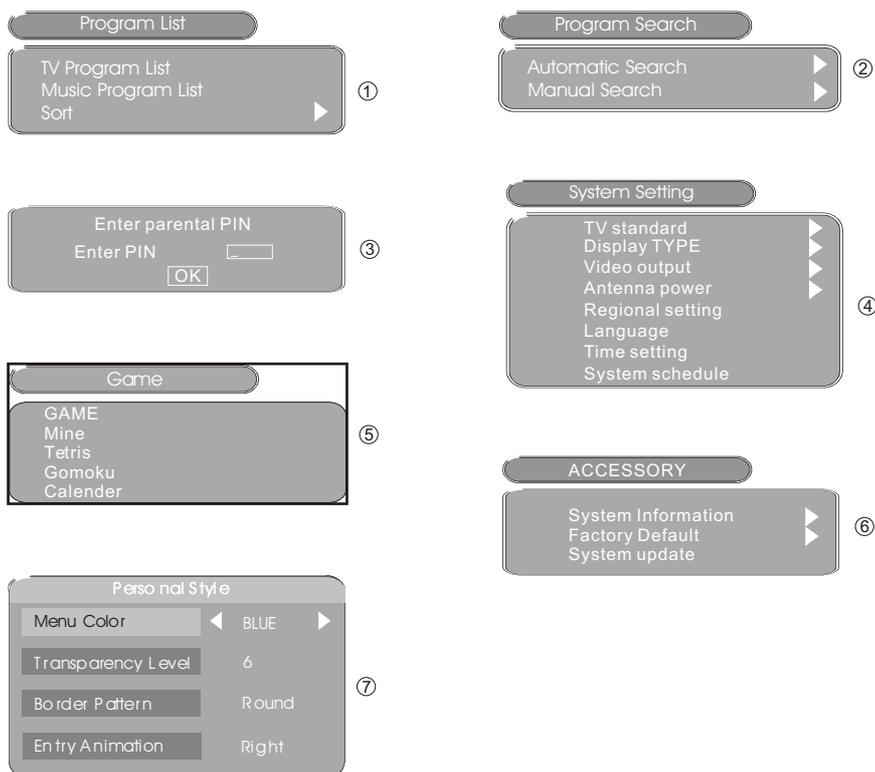

TV Program Editing

Before editing your TV program, make sure you have finished with program search, which should be done by completing the First Time Installation Wizard. If not, you have to set up your TV programs first.

Please refer to Program Search for details.

- Under Main Menu, press **ENTER** to select **Program List**.
- Under Program List, press **ENTER** to select **TV Program List**.
- A Program edit table Window appears. You can use this table to edit your Favorite TV Programs, re-arrange your TV program numbers and delete the TV programs you dislike.

Switch Program Setting

- Step 1.** In the Program edit table, press **RIGHT** button/ **LEFT** button to highlight **Move** section.
- Step 2.** Under **Move** section, press **UP** button/ **DOWN** button to highlight the corresponding program box you wish to change and press **ENTER**.
- Step 3.** Press **UP** button/ **DOWN** button to highlight the corresponding program box you wish to exchange, and then press **ENTER**. You will see a **Double-Arrows** icon appear on this box, representing that 2 program numbers are switched.
- Step 4.** Repeat Step 2 through Step 3 to switch more programs.

DVBT SETUP MENU SETTING

General Operation & General Setup Page

● First Time Installation



No channels are stored in your unit. A First Time Installation Wizard will appear automatically on the screen. Continue with the OSD (On-Screen-Display) to do the following setting.

- 1 A First Time Installation Wizard appears. Press **ENTER** to select **YES**.
- 2 Press **UP** button / **DOWN** button to select the item you wish to set up, and then press **LEFT** button / **RIGHT** button to switch to your preferred setting.
- 3 Press **UP** button / **DOWN** button to select **NEXT**, and then press **ENTER** to continue to the next page.
- 4 To start Auto Search, press **ENTER** to select **YES**. All the receivable programs (including TV and Music) will be listed respectively on the screen. This process may take a few minutes to be done.
- 5 After Program Search is done, press **UP** button / **DOWN** button to select and start watching TV programs.

*To return to the MAIN MENU

---Press **EXIT** button.

*To finish the setup operation

---Press **DVBT-MENU** to exit from Main Menu screen.

● Main Menu

Most of the Settings of your DVB player can be done by following the OSD instructions (*Main Menu). For details on how to set up by using your remote control.

In Advance: Press **DVBT-MENU** to display the Main Menu.



Menu Navigation

DVD Mode:

OPEN/CLOSE BUTTON

Press OPEN/CLOSE button to load disc on disc tray. Hold the disc without touching either of its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position. In case of interactive DVDs with playback control, a menu appears on the TV screen.


NUMERIC BUTTONS(0-9):

You can select desired titles(DVD) by pressing these buttons directly only if the title or track number is less than 10.

If the title or track number is over 10. For instance , if "28" is wanted, press "10+" twice, and then press the 2-digit number "8".

GO TO BUTTON

Press this button to go to desired position. The player provides 3 search mode.

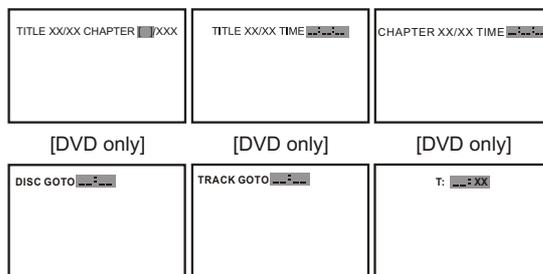

[CD]

When the above items are showed on TV screen, you can input numbers to locate desired sector, then press PLAY to commence play.

The number you input is invalid if it is beyond the track's capacity.

AUDIO BUTTON

To press this button, you can change the audio language from the one selected at the initial settings to a different language, if available.

SUBTITLE BUTTON

To press this button, you can change the subtitle language from the one selected at the initial settings to a different language, if available.

DISPLAY BUTTON

Press this button once to show main playback information on TV screen and press it again to show playback time. Press this button at the fifth time, and then the display will be cancelled.

DVD SETUP BUTTON

If playing some DVD discs, press this button back to root menu screen .

If playing DVDs you can use the functions of MENU, PROGRAM and RANDOM.

Menu Navigation

REPEAT BUTTON

To press this button you can repeatedly play a title(DVD) or all tracks(CD) when " ALL ↻ " appears on TV screen, You can repeatedly play a chapter(DVD) or a single track(CD) when " ↻ " appears on TV screen ,You can cancel repeat functions when no " ↻ " appears on TV screen .

DVD MENU BUTTON

DVD disc:

Press TITLE button, then the DVD menu or titles available on the disc will be displayed. Then you can use " ⏪ ⏩ " and ENTER button to select programs.

PROGRAM BUTTON

When you want to play only partial tracks/chapters of a disc(DVDs) or to arrange the tracks/chapters playback order, you need program functions. Do as following:

Press PROG button. Then "PROGRAM" will appear on TV screen.

Press the track number in the order you want. For example, if the track numbers you want to play are 1, 3 and 8, just input in the order of 1-3-8.

You can press CLEAR button to cancel and input again if you mis input track numbers.Now you can press " ⏪ ⏩ " and "ENTER" button to select START option and enjoy the desired tracks.

PLAY AND PAUSE BUTTON(▶/⏸)

Press this button to start playback. Press this button again to pause playback.

STOP BUTTON(■)

When this button is pressed once, the unit records the stopped point, from where playback will resume (resume function) if PLAY is pressed afterwards. But if STOP button is pressed again instead of PLAY button, there will be no resume function.

PREV/NEXT BUTTON(⏪/⏩)

Press these buttons to go to the previous/next chapter(DVD) When Playing CD disc ,Press ⏪ button twice to select previous song.

FR/FF BUTTON(⏮/⏭)

These buttons allow skipping ahead/back at 5-level speeds.Press PLAY button to return to normal playback.

Initial Settings(DVD)

COMMON PROCEDURES OF INITIAL SETTINGS

Press SETUP button to get the setup menu. Use direction buttons "◀▶" to select the preferred item. After finishing settings, press SETUP again to TV display.

The following menu items can be changed:


GENERAL: selects the GENERAL PAGE menu.

AUDIO: selects the Audio menu.

DOLBY: selects the DOLBY DIGITAL SETUP menu.

PREFERENCE: selects the PREFERENCE PAGE menu.

GENERAL SETUP PAGE

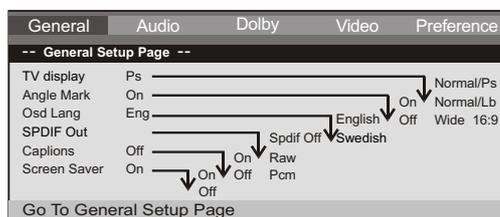

The following menu items can be changed:

TV DISPLAY: selects the aspect ratio of the playback picture.

NORMAL/PS: pan & scan display.

NORMAL/LB: letterbox display.

WIDE: widescreen display.

ANGLE MARK: viewing angles change option (if available). See changing the angles on page 10.

DIGITAL OUT: Set the SPDIF output according to your optional audio equipment connection.

SPDIF OFF: Turns off the SPDIF output.


SPDIF/RAW: If you have connected your DIGITAL AUDIO OUT to a multi-channel decoder/receiver.

SPDIF/PCM: Only if your receiver is not capable of decoding multi-channel audio.

CAPTIONS: Select caption ON or OFF.

SCREEN SAVER: this is to turn on/off screen saver.

AUDIO SETUP PAGE

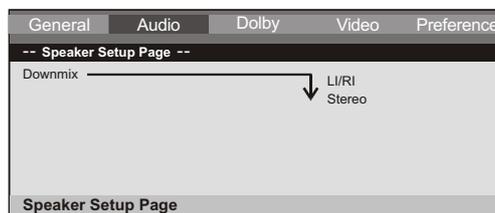

This page is for setup speaker output.


DOWNMIX

LT/RT: 2ch output, main channel with surround.

STEREO: 2ch output, main right channel with right surround; main left channel with left surround.

DIGITAL OUTPUT: select digital audio output: SPDIF OFF, SPDIF/RAW, SPDIF/PCM.

DOLBY DIGITAL SETUP PAGE

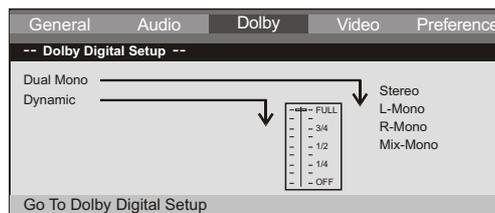

The following menu items can be changed:

DUAL MONO: Reproduction mode, used only when the input consists of two independent audio channels(1/1 mode). Possible selections are:

STEREO: Reproduce both channels as is.


L-MONO: Reproduce the left channel only.

R-MONO: Reproduce the right channel only.

The default is STEREO.

DYNAMIC: Dynamic range compression.

VIDEO DIGITAL SETUP PAGE

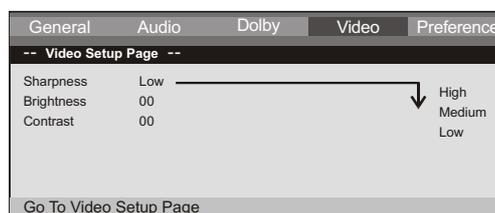

The following menu items can be changed:


Sharpness: sharpness value.

Brightness: brightness value.

Contrast: contrast value.

Initial Settings(DVD)

PREFERENCE SETUP PAGE

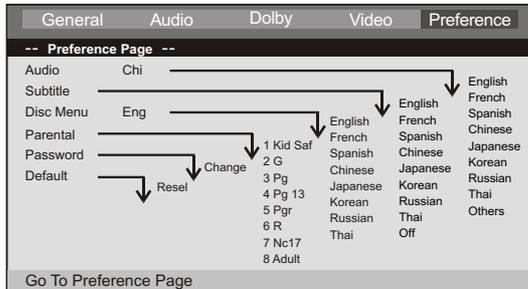

The following menu items can be changed:

AUDIO: Selects a language for audio(if available).

SUBTITLE: Selects a language for subtitles(if available).

DISC MENU: Selects a language for DISC menus (if available).

PARENTAL[DVD only]: This is to disable the playing of specified DVDs which are unsuitable for children. Some DVDs are encoded with specific rating level. If the rating level of the disc is higher than that preset in the setup operation, playback of the disc will be prohibited. After selecting one of the PARENTAL items the screen will change to the PASSWORD page, and password is required , The factory initial setting is 1369.

PASSWORD: Selects the menu setup PASSWORD CHANGE PAGE.

PASSWORD CHANGE PAGE

PASSWORD CHANGE PAGE

OLD PASSWORD		[XXXX]
NEW PASSWORD		[YYYY]
CONFIRM PASSWORD		[YYYY]

OK

OLD PASSWORD: Enter the OLD password, (Factory setting is 1369), and the cursor will jump automatically to NEW PASSWORD.

NEW PASSWORD: Enter the NEW password. Enter 4 digits from the remote control unit numeric buttons, and the cursor will automatically jump to CONFIRM PASSWORD.

CONFIRM PASSWORD: Confirm the NEW password by entering it again. If the confirmation is incorrect, the cursor will stay in this column. After entering, the correct new password again, the cursor will jump automatically to OK.

OK: When cursor is on this button, press ENTER key to confirm setting.

DEFAULT: Back to the factory setting.