


**Disc-3005**


**MICRO COMPONENT  
WITH  
MP3 / CD PLAYER & DIGITAL PLL RADIO**

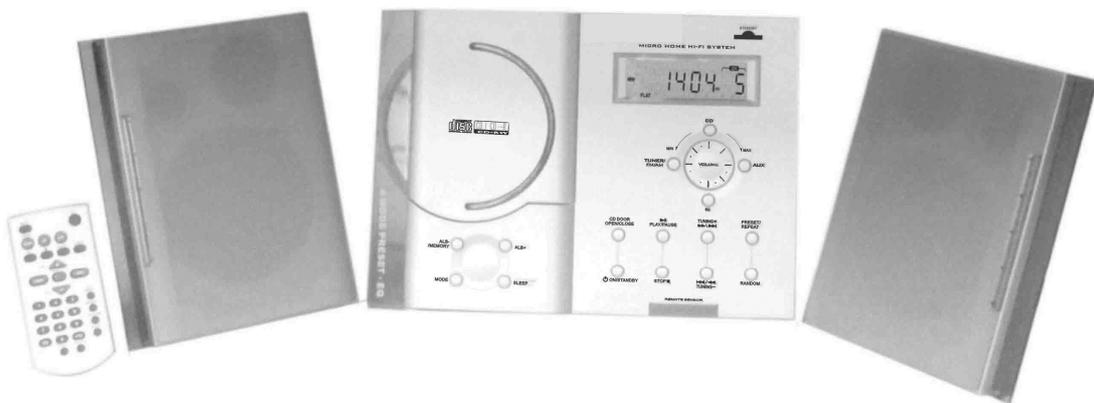

**INSTRUCTION MANUAL**


**Please read and follow this instruction manual carefully  
before using the unit and retain it for future reference**

## SAFETY INSTRUCTIONS

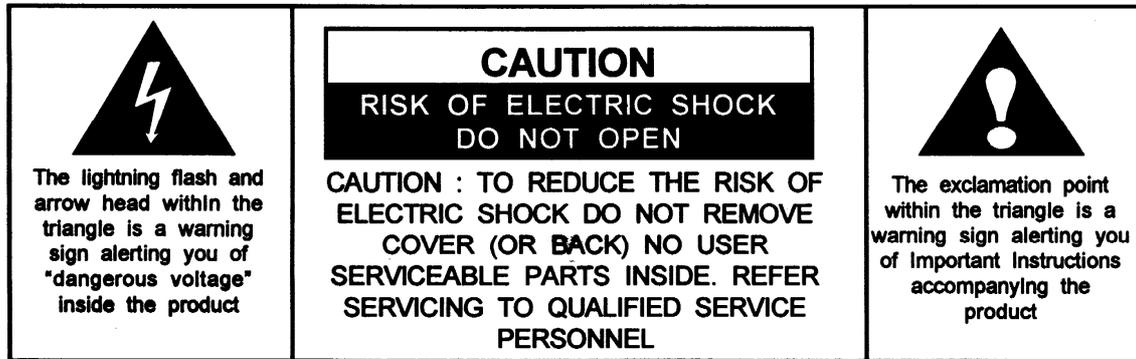

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

1. Read instructions - All the safety and operating instructions should be read before the appliance is operated
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Attachment – do not use attachment not recommended by the product manufacturer as they may cause hazards.
5. Water and Moisture - The appliance should not be used near water; or example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
8. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the appliance.
9. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

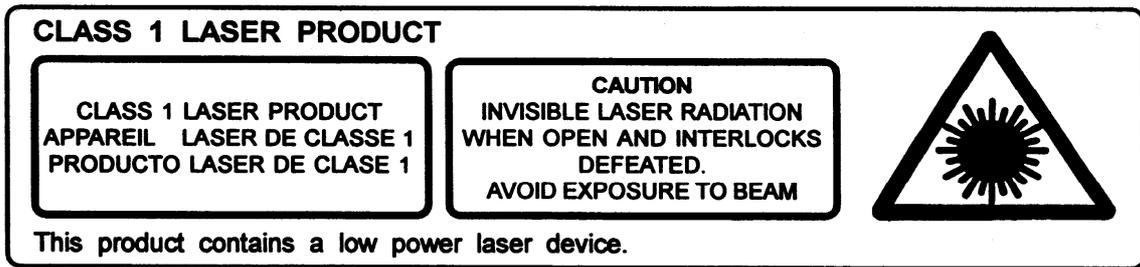

Follow the advice below for safe and appropriate operations.

### **ON PROTECTION AGAINST LASER ENERGY EXPOSURE**

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Make it a practice to remove the AC plug by grasping the main body and not by pulling the cord.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

### **ON PLACEMENT**

- Do not use the unit in places, which are extremely hot, cold, dusty or humid.
- Place the unit on a flat and even surface.
- Do not restrict the airflow of the unit by placing it in a place with poor ventilation, by covering it with a cloth or by placing it on a carpet.

### **ON CONDENSATION**

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the unit.
- When there is condensation inside the unit, the unit may not function normally.
- Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room up and dry the unit before use.

Should any trouble occurs, remove the power source and refer servicing to qualified personnel.

TABLE OF CONTENT

WELCOME! ..... 4

ABOUT THIS MANUAL ..... 4

INDEX TO PARTS AND CONTROLS ..... 4

    FRONT VIEW ..... 4

    TOP VIEW ..... 4

    SIDE VIEW ..... 5

    REMOTE CONTROL SECTION ..... 5

    DISPLAY SECTION ..... 5

INSTALLATION ..... 6

    FOR TABLE TOP ..... 6

    FOR WALL MOUNTING: ..... 6

GETTING STARTED ..... 7

    SPEAKER CONNECTION ..... 7

    LINE IN (AUX IN) CONNECTION ..... 7

    SUBWOOFER CONNECTION ..... 7

    POWER SUPPLY ..... 7

    AC POWER CONNECTION ..... 7

    REPLACING BATTERY FOR THE REMOTE CONTROL ..... 7

CLOCK SETTING ..... 8

    TO SET THE CURRENT TIME ..... 8

COMPACT DISC OPERATION ..... 9

    PLAYING A CD ..... 9

    PROGRAMMING CD TRACKS ..... 10

MP3 DISC OPERATION ..... 11

    PLAYING A MP3 CD ..... 11

    PROGRAMMING MP3 CD TRACKS ..... 12

NOTE ON CD-R/RW DISCS ..... 13

RADIO OPERATION ..... 13

    RADIO TUNING ..... 13

    TO PRESET CHANNELS ..... 13

    TO RECEIVE PRESET STATIONS ..... 14

AUX OPERATION ..... 14

PRESET EQ (PRESET EQUALIZATION SYSTEM) ..... 14

MODE FUNCTION ..... 14

USING HEADPHONES (NOT INCLUDED) ..... 14

MISCELLANEOUS OPERATIONS ..... 14

    SLEEP OPERATION ..... 14

    DECREASING THE SLEEP PERIOD ..... 15

TIMER OPERATION ..... 15

    SETTING TIMER ON ..... 15

    CLEARING TIMER ON SETTING ..... 15

CARE AND MAINTENANCE ..... 15

TROUBLE SHOOTING GUIDE ..... 16

SPECIFICATION ..... 17

**WELCOME!**


Thank you for purchasing the Music System.  
 Before operating the unit, please read this manual thoroughly and retain it for future reference.

**ABOUT THIS MANUAL**

- Instructions in this manual describe the controls on the remote.  
 You can also use the controls on the unit if they have the same or similar names as those on the remote.
- The icon  indicates the task can only be done on the unit.


**INDEX TO PARTS AND CONTROLS**

**FRONT VIEW**

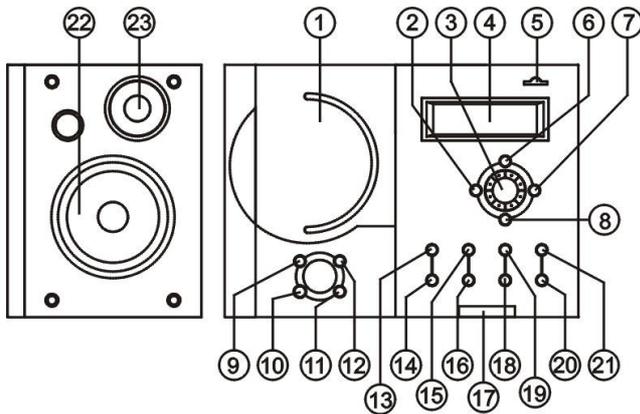


1. CD Door
2. TUNER/FM/AM Function Button
3. VOLUME
4. Multi-Function Display
5. STANDBY Indicator
6. CD Function Button
7. AUX Function Button
8. EQ Button
9. ALB-/MEMORY Button
10. MODE Button
11. SLEEP Button
12. ALB+ Button
13. CD DOOR OPEN/CLOSE Button
14.  ON/STANDBY Button
15.  PLAY/PAUSE Button
16.  STOP Button
17. Remote Sensor
18.  TUNING- Button
19.  TUNING+ Button
20. RANDOM Button
21. PRESET/REPEAT Button
22. Full Range Speaker
23. Tweeter Speaker

**TOP VIEW**

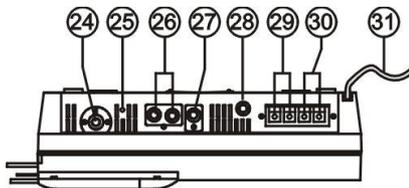

24. FM Antenna
25. RESET Switch-Reset unit with a sharp pin
26. AUX IN Socket
27. Subwoofer Socket
28. HEADPHONE Jack
29. Left Speaker Terminal
30. Right Speaker Terminal
31. AC Cord

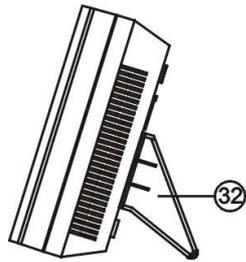


**SIDE VIEW**

- 32. Support Bracket


**REMOTE CONTROL SECTION**

- 33. STANDBY Button
- 34. PLAY/PAUSE Button
- 35. TUNER/BAND Button
- 36. CD Function Button
- 37. AUX Function Button
- 38. ST/MO Button
- 39. EQ Button
- 40. ALB UP Button
- 41. MUTE Button
- 42. Button
- 43. STOP Button
- 44. TIMER/PRESET/REPEAT Button
- 45. VOL + & VOL - Button
- 46. ALB DN/MEMORY Button
- 47. MODE Button
- 48. SLEEP Button
- 49. TUNING << >> Button
- 50. 0-9 Button
- 51. INTRO Button
- 52. RANDOM Button
- 53. Button

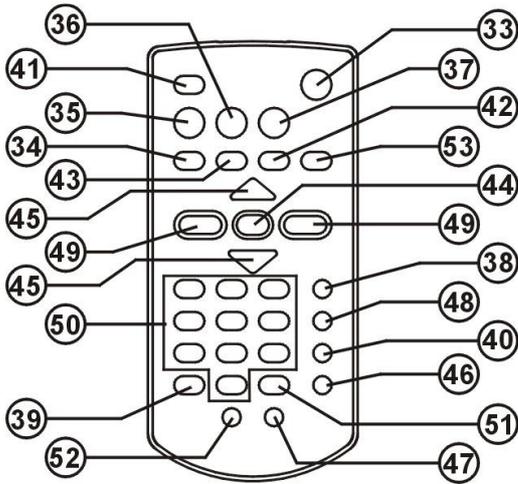

**DISPLAY SECTION**



- D1. Timer on / off indicator
- D2. Track / Preset station / frequency indicator
- D3. Proceeding indicator
- D4. Program (memory) indicator
- D5. Sleep indicator
- D6. Random indicator
- D7. Intro indicator
- D8. CD type indicator
- D9. Stereo indicator
- D10. Repeat indicator
- D11. Album indicator

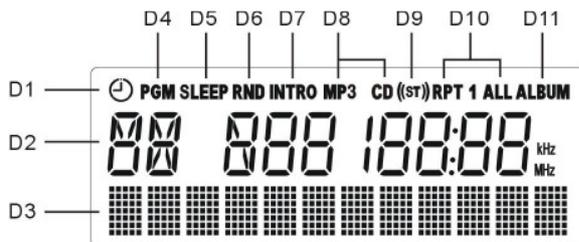

**INSTALLATION**


**FOR TABLE TOP**

- Lay the main unit and speakers face down on a soft surface to prevent scratching of the front panel.
- Insert the support bracket into the square holes at rear cabinet. Installing the support bracket into different square holes can adjust the unit angle to 45 or 20 degrees.
- Slide up the support plate until it is locked.
- This product is designed for placing vertically or horizontally. Remove the support plate for horizontal placement.

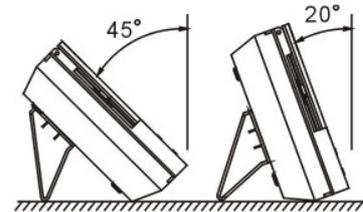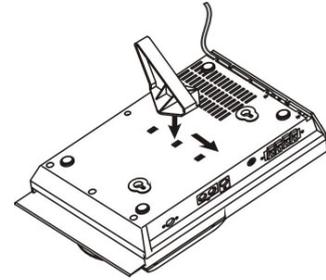

**FOR WALL MOUNTING:**

1. Use the wall-mounting template supplied with the unit to make anchor hole marks on the wall. Make sure the marks are level.
2. Drill 3/16" holes on the marks.
3. Insert the plastic anchor supplied with unit until it is flush with the wall.
4. Insert the screw and tighten the screw 4 mm away from the wall. (Approximately the width of 2 pennies)
5. Hang the main unit and the speakers to the screw as indicated below.

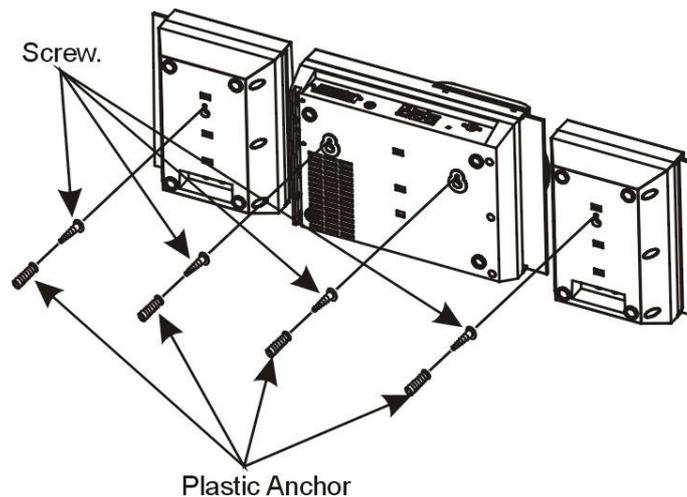

## GETTING STARTED

### SPEAKER CONNECTION

1. Insert the speaker cables by pushing down the terminal lever of the Left Speaker Terminal (#29) and the Right Speaker Terminal (#30).
2. Connect the left speaker to Left Speaker Terminals (#29), with the white wire to R+ and the black wire to R-.
3. Connect the right speaker to Right Speaker Terminals (#30), with the white wire to L+ and the black wire to L-.

### LINE IN (AUX IN) CONNECTION

1. Connect the left and right channel RCA plug (not included) into the Aux Input Socket (#26) and the other end to your home equipment. Make sure the polarity of the right and the left channel is correct.
2. Press the  $\odot$  ON/STANDBY (#14, #33) to switch on the unit
3. Press AUX (#7, #37) button. "AUX" (D3) will show in the display.
4. Play the auxiliary input source.

### SUBWOOFER CONNECTION

1. Connect one end of a RCA plug (not included) into the Subwoofer Jack (#27) and the other end of wire to your subwoofer.
2. Turn on the unit and your subwoofer.

### POWER SUPPLY

This Vertical Music System operates from AC230V~50Hz line power supply.


The remote control unit operates from 1 "CR 2025" lithium battery. To power up the remote control, remove the insulation tab from the back of unit.

### AC POWER CONNECTION

Connect the power cord to an AC230V~50Hz power source.

### REPLACING BATTERY FOR THE REMOTE CONTROL

1. Turn over the remote control, and remove the battery door.
2. Install 1 "CR2025" lithium battery according to the polarity diagram on the battery compartment.
3. Close the battery door.

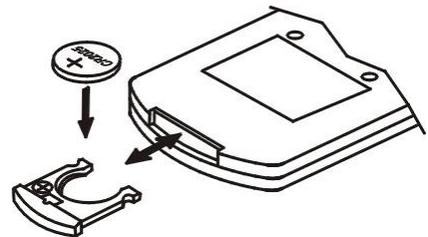

**IMPORTANT:** Be sure that the battery is installed correctly.  
Wrong polarity may damage the unit.

**NOTE:** For better performance and longer operating time, we recommend the use of alkaline-type batteries.

- (a) Do not mix old and new batteries.
- (b) Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- (c) If the unit is not to be used for an extended period of time, remove the battery. Old or leaking battery can cause damage to the unit and may void the warranty

**CLOCK SETTING**


The following procedures can be accomplished by using the remote or controls on the unit. Unless otherwise stated, the function numbers are for the remote. The icon  indicates the task can only be done on the unit.

**NOTE:** The clock has to be set the first time you use the unit. If the unit is disconnected from the mains for more than 1 minute, you will need to reset the clock.


**TO SET THE CURRENT TIME**

For example to set the clock at 7:30 AM

1. In STANDBY Mode, press ALB UP (#40) once. Hour digital flashes to prompt for input.

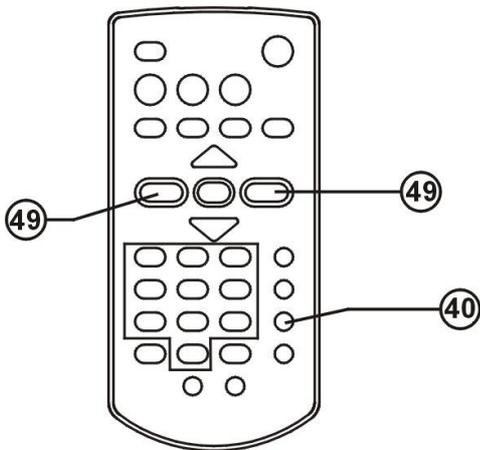


2. Press the TUNING << or TUNING >> button (#49) to adjust the hour.

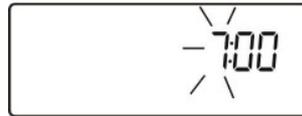

3. Press ALB UP (#40) to confirm the selection and the minute position flashes to prompt for input.



4. Press the TUNING << or TUNING >> button (#49) to adjust the minute.
5. Press ALB UP (#40) again to complete setting.

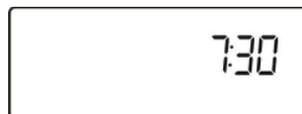


**COMPACT DISC OPERATION**

The following procedures can be accomplished by using the remote or controls on the unit. Unless otherwise stated, the function numbers are for the remote. The icon  indicates the task can only be done on the unit.

NOTE: This player plays not only commercial CDs but also home-recorded CD-R/RW music discs.


**PLAYING A CD**

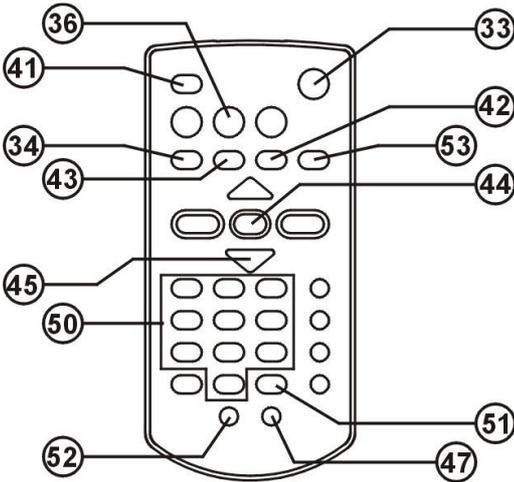

1. Press the  button (#33) to turn on the unit.
2. Press the CD Button (#36) to operate the unit in CD mode.
3. Press the OPEN/CLOSE button (#13) to open the CD door .
4. Place the CD, with label side outward, inside the CD compartment. Press the OPEN/CLOSE button (#13) again to close the CD door .

**IMPORTANT:** The CD door is a motorized door. DO NOT PUSH WITH HAND OR ANY OTHER MEANS TO OPEN OR CLOSE IT.

5. After reading the TOC in a few seconds, the unit will automatically start playing the CD
6. Press  STOP button (#43) to stop playing, the total number of tracks and total playing time will appear in the unit Multi function Display (#4).

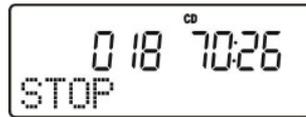

7. Press the  button (#34) to start playing the CD again.
8. You can key in directly the track number you wish to play by pressing the 0-9 buttons (#50).

For example to play track #12:

Press "1" Button followed by "2" Button, track #12 will start play back automatically.

<b>TO:</b>	<b>PRESS:</b>
Stop play	 (#43)
Pause play	 (#34) once
Resume play after pause	 (#34) again
Scan forward and backward	And hold  /  Skip(#42, #53)
Skip tracks	 /  Skip briefly (#42,# 53)
Repeat current track	REPEAT (#44)
Repeat all tracks	REPEAT twice (#44)
Random play	RANDOM (#52)
Intro play	INTRO (#51)
View current time	MODE Button (#47)
Control the volume	+/- Volume Control (#45)
Stop output from speakers	MUTE Button (#41)
Resume speaker output	MUTE Button (#41) again


NOTE:

- Press the ►|| button (#34), the track number blinks to indicate the CD is in the pause mode.
- Press the REPEAT button once (#44), “RPT 1” (D10) indicates in the display.
- Press the REPEAT button (#44) twice, “RPT ALL” (D10) indicates in the display.
- Press the RANDOM button (#52), “RND” (D6) indicates in the display. Press again to resume to normal play.
- Press the INTRO button (#51), “INTRO” (#D7) indicates in the display. Press again to resume to normal play.
- “NO DISC” will be displayed when a CD is loaded incorrectly, or there is no CD inside.

**PROGRAMMING CD TRACKS**

With this function you can program up to 20 titles in the order you desire.

1. Power on the unit and insert the CD.
2. Press the CD button (#36) to operate the unit in the CD mode.
3. Place the CD, with label side outward, inside the CD compartment. Press the OPEN/CLOSE button (#13) again to close the CD door. The unit will automatically start playing.
4. Press  STOP button (#43) to stop playing.
5. Press PRESET Button (#44) to start programming the tracks. “PGM” (D4) appears in top left corner of the display.

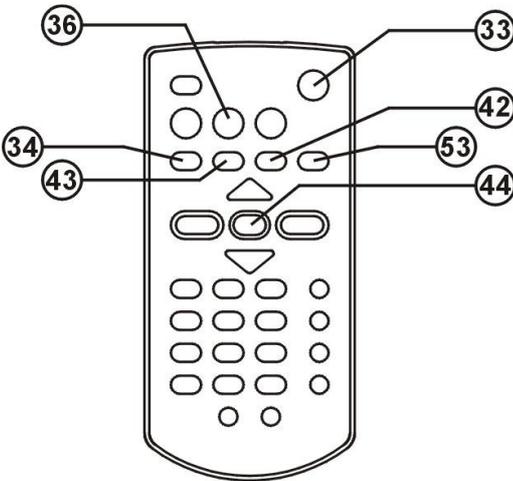


Press PRESET button

6. Search the desired track by pressing the CD skip buttons ◀◀/▶▶ (#42, #53) to select the track you want to program. The selected track blinks.



Press Skip buttons

7. Press the PRESET Button (#44) again to complete and program another track.

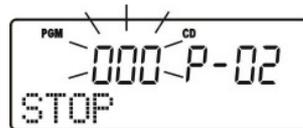


Press PRESET button again

8. Press ►|| button (#34) to start playing the tracks in your programmed order.
9. To clear the programmed tracks, press  STOP button (#43) twice.

**MP3 DISC OPERATION**

The following procedures can be accomplished by using the remote or controls on the unit. Unless otherwise stated, the function numbers are for the remote. The icon  indicates the task can only be done on the unit.

**NOTE:** This player plays not only commercial CDs but also self-complied CD-R/RW discs.

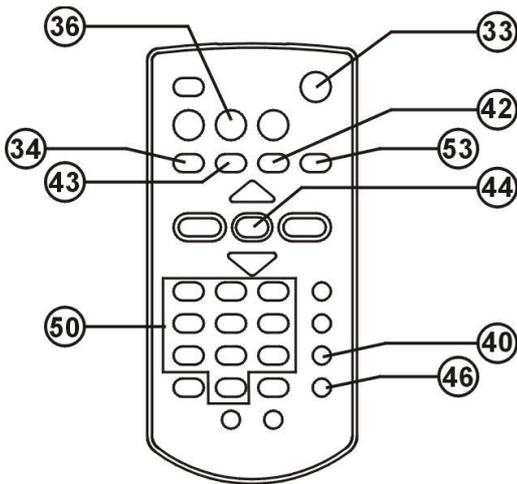**PLAYING A MP3 CD**


1. Press the  button (#33) to turn on the unit.
  2. Press the CD Button (#36) to operate the unit in CD mode.
  3. Press the OPEN/CLOSE button (#13) to open the CD door .
  4. Place the CD, with label side outward, inside the CD compartment. Press the OPEN/CLOSE button (#13) again to close the CD door .
- IMPORTANT:** The CD door is a motorized door. DO NOT PUSH WITH HAND OR ANY OTHER MEANS TO OPEN OR CLOSE IT.
5. After reading the TOC in a few seconds, the unit will automatically start playing the CD. While the CD is playing, the track name, artist name, etc. is rolling out in the lower side of the display.
  6. Press STOP button (#43) to stop playing, the total number of tracks and album will appear in the unit Multi function Display (#4).



7. Press the  button (#34) to start playing the CD again.
8. You can key in directly the track number you wish to play by pressing the 0-9 buttons (#50).  
For example to play track #12:  
Press "1" Button followed by "2" Button, track #12 will start play back automatically.
9. Press ALB UP button (#40) or ALB DN button (#46) skipping to the first track of next or previous album.
10. For using other CD control keys such as repeat, intro, random etc. Please reference to COMPACT DISC OPERATION section.

**PROGRAMMING MP3 CD TRACKS**

With this function you can program up to 20 titles in the order you desire.

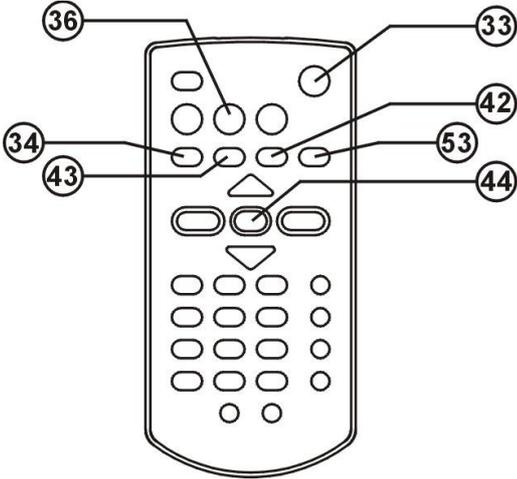

1. Power on the unit and insert the CD.
2. Press the CD button (#36) to operate the unit in the CD mode.
3. Place the CD, with label side outward, inside the CD compartment. Press the OPEN/CLOSE button (#13) again to close the CD door. The unit will automatically start playing.
4. Press  STOP button (#43) to stop playing.
5. Press the PRESET button (#44) to start programming the tracks. "PGM" (D4) appears in top left corner of the display and the album number blinks.



Press PRESET button

6. Search the desired track by pressing the CD skip buttons   (#42, #53) to select the album you want to program. The selected album blinks.



Press Skip buttons

7. Press the PRESET button (#44) again to select a desired track in the selected album. The track number blinks.



Press PRESET button again

8. Press the Preset button (#44) again to complete and program another album and track.



9. Press  button (#34) to start playing the tracks in your programmed order.
10. To clear the programmed tracks, press  STOP button (#43) twice.


**NOTE ON CD-R/RW DISCS**

- Because of non-standardized format definition / production of CD-R/RW, playback quality & performance are not guaranteed.
- Manufacture is not responsible for the playability of CD-R/RW due to recording conditions such as PC performance, writing software, media ability, etc.
- Do not attach a seal or label to either side of the CD-R/RW disc. It may cause a malfunction.

**RADIO OPERATION**

The following procedures can be accomplished by using the remote or controls on the unit. Unless otherwise stated, the function numbers are for the remote. The icon  indicates the task can only be done on the unit.

**RADIO TUNING**

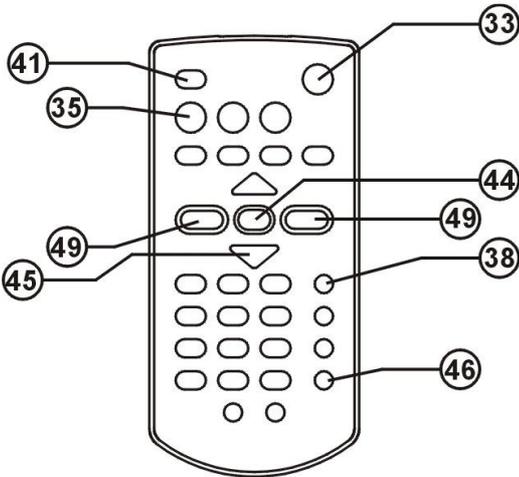

1. Press the  (#33) button to turn on the unit.
2. Press the TUNER button (#35) to operate the unit in the radio mode.

TO:	PRESS:
Switch between AM/FM band	TUNER (#35) repeatedly
Scan radio station automatically	<< / >> (#49) Tuning for 1 second
Stop auto-tuning	<< / >> (#49) Tuning again
Scan radio station manually	<< / >> (#49) Tuning
Control the volume	+/- VOL (#45)
Stop output from speaker	MUTE (#41) once
Resume speaker output	MUTE (#41) again.

**NOTE:**

1. When listening to FM program, extend the antenna to insure maximum tuner sensitivity.
2. As automatic tuning depends on the signal strength of the broadcasting station, weak stations are sometimes skipped. Tune manually to find the weak stations. On the other hand, with a strong signal, the tuner may stop before it reaches optimum setting. Tune manually for the best reception.
3. For FM stereo reception, the unit provides FM MONO/STEREO selection. In stereo mode, the unit will automatically switch to stereo when a FM stereo broadcast is received and will indicate “((ST))” in the display.
4. To receive a weak (noisy) FM station, press ST/MO Button (#38) to switch to MONO mode. The reception may be improved, but the sound is monaural (MONO).

**TO PRESET CHANNELS**

This unit is equipped with 10 preset memories for AM and 20 preset memories for FM. Once they are preset, they can be instantly accessed by pressing PRESET button (#44) repeatedly to select the preset station.

1. Press  button (#33) to turn on the unit.
2. Press the TUNER button (#35) to operate the unit in the radio mode.
3. Tune to a desired station.
4. Press the MEMORY Button (#46). The indicator “PGM” (D4) blinks.

5. While the indicator “PGM” is blinking, press the TUNING << or >> button (#49) to select the desired preset channel.
6. Press the MEMORY Button (#46) again to save the preset channel.
7. Tune to another station and repeat steps 3 to 5 to store the station in another preset channel.

### **TO RECEIVE PRESET STATIONS**

1. Press  button (#33) to turn on the unit.
2. Press the TUNER button (#35) to operate the unit in the radio mode.
3. Press PRESET button (#44) to select the preset channels.

### **AUX OPERATION**

You can connect the TV or VCR audio left and right outputs to the AUX inputs (#26) at the rear of the system. To use this Vertical Hi-Fi System to amplify your TV or VCR audio signal,

1. Press the AUX button (#37) to operate the unit in AUX mode. Indicator “AUX” (D3) appears in the display.
2. Start playing your TV or VCR.
3. Adjust the Volume Control to obtain the desired sound level.

### **PRESET EQ (PRESET EQUALIZATION SYSTEM)**

The sound equalization can be adjusted for optimum sound reproduction depending on the style of music you are playing. By pressing the EQ button (#39), you can switch between FLAT, POP, ROCK, JAZZ or CLASSIC.

### **MODE FUNCTION**

By pressing the MODE Button (#47) repeatedly, you can view the status of current function mode, current time, sleep time in the display.

### **USING HEADPHONES (NOT INCLUDED)**

Inserting the plug of your headphones into the Headphone jack (#28) will enable you to listen in private. When using headphones, the speakers will be disconnected .

#### **NOTE: READ THIS IMPORTANT INFORMATION BEFORE USING YOUR HEADPHONES**

1. Avoid extended play at very high volume as it may impair your hearing.
2. If you experience ringing in your ears, reduce the volume or shut off your unit.
3. Keep the volume at a reasonable level even if your headset is an open-air type designed to allow you to hear outside sounds. Please note that excessively high volume may still block outside sounds.

### **MISCELLANEOUS OPERATIONS**

The following procedures can be accomplished by using the remote or controls on the unit. The icon  indicates the task can only be done on the unit.

#### **SLEEP OPERATION**

When the unit is ON, press the SLEEP button (#11, #48). The display (#4) shows 120 minutes of playing time momentarily and then returns to the current function mode. The unit will automatically turn off after 120 minutes.



## DECREASING THE SLEEP PERIOD

1. When the unit is ON, press the sleep button repeatedly until the desired sleep period is reached. The time decreases to 90 → 60 → 45 → 30 → 20 → 10 → 0 minutes and can be set from 120 minutes down to 0 minutes.
2. The unit will automatically turn off after the set time has elapsed.
3. To cancel the Sleep operation, press the SLEEP button repeatedly and release when "0" is displayed or simply switch the unit to standby.

## TIMER OPERATION

Your unit can be set to turn on at predetermined times in any function mode. To set the TIMER ON proceed as follows:

### SETTING TIMER ON

**The following procedure shows the setting of TIMER to on at 7:30 (in CD mode).**

1. In STANDBY Mode, press TIMER Button (#44) once, "⊕" (D1) indicates in the display top left corner.
2. Press and hold TIMER Button (#44) again over 1 second. Hour position flashes.




3. Press the TUNING << or >> buttons (# 49) to adjust the hour.
4. Press TIMER Button (#44) to confirm hour setting. Minute position flashes.
5. Press the TUNING << or >> buttons (# 49) to adjust the minute.
6. Press the TIMER Button (#44) to complete setting. TIMER ON time is displayed with icon "⊕" and the display would resume to indicate the current time.

### CLEARING TIMER ON SETTING

When the timer on function is activated, "⊕" indicates in the display top left corner. You can press the TIMER button (#44) repeatedly to activate or disable the timer on function.

## CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. If drop-outs or interruptions occur in the music during play, or if the disc fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.

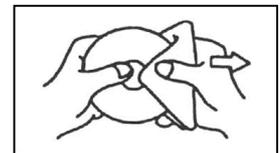

**TROUBLE SHOOTING GUIDE**

If you experience difficulties in the use of this music system, please check the followings.

Symptom	Possible Cause	Solution
<b>Radio</b>		
Noise or sound distorted on AM or FM broadcasts.	Station not tuned properly for AM or FM	Retune the AM or FM broadcast station.
	FM: Wire antenna is not extended.	Extend FM Wire antenna.
	AM: The bar antenna is not positioned correctly.	Reposition the unit until best reception is obtained.
FM STEREO does not appear on display.	You have tuned to a mono station or station too weak.	Select another FM station.
AM or FM, no sound.	Unit not at Tuner function, AM or FM band.	Press Tuner Function button to select AM or FM.
	Volume at minimum.	Increase Volume.
<b>Compact Disc Player</b>		
CD Player will not play.	Unit not in CD function mode.	Press CD Function button.
	CD is not installed incorrectly.	Insert CD with label side up.
CD skips while playing.	Disc is dirty or scratched.	Wipe disc with cloth or use another disc.
Function inoperative and jammed	Built-in microcomputer needs to be reset.	Use a sharp tip to press into the reset hole (#25) to reset the built-in microcomputer.
Display no indication or abnormal indication	Built-in microcomputer needs to be reset.	Use a sharp tip to press into the reset hole (#25) to reset the built-in microcomputer.
Intermittent sound	Dirty or defective disc Dirty Pick Up lens Player is subject to excessive shock or vibration	Clean or replace the defective disc Use a CD-lens cleaning disc to clean the lens Relocate the player away from shock or vibration
No sound when played in the AUX Mode	Power to external source (CD, VCR etc) not switched on Connection to external source (CD, VCR etc) is incorrect: e.g. RCA plug may have been inserted to AUDIO IN of external source. Master Volume is at minimum.	Switch on the power of the external source. Reconnect the RCA Plug to the AUDIO OUT of the external source. Adjust the master volume
No sound from Subwoofer	Subwoofer not switched on Subwoofer input is not connected to RCA jack of System's Subwoofer Out MUTE function is activated System volume is at minimum	Switched the Subwoofer on Connect System's Subwoofer Out to Subwoofer's input of external equipment Switch MUTE function off Adjust volume control

**SPECIFICATION**

Power Source	-----	AC230V ~50 Hz DC 3V, 1 x “CR2025” size lithium battery for Remote Control (included).
Power Consumption	-----	28 Watts
Dimension	-----Unit	290 (W) x 84 (D) x 208 (H) mm Speaker 160 (W) x 84 (D) x 208 (H) mm
Tuning Range/Sensitivity	-----	AM 522 ~ 1629 kHz/2000 $\mu$ V/m FM 87.5 – 108 MHz/18 $\mu$ V
Playback System	-----	Ball clip CD mechanism
Frequency Response	-----	100 – 18,000 Hz
Power Output	-----	5 Watts RMS per channel
Speaker Impedance	-----	4 ohms
Headphone Impedance	-----	8 – 32 ohms
AUX Input Sensitivity	-----	300 mV

**ACCESSORIES:**

Instruction Manual	1 set
Remote Control Handset	1 pc
Support Bracket	3 pcs
Wall Mounting Template	1 pc
Screw	4 pcs
Plastic Anchor	4 pcs



This symbol on the product or on its packaging means that your electrical and electronic equipment should be disposed of at the end of its useful life separately from your household wastes. There are separate collection systems for recycling in the EU.

For more information, please contact your local authority or the dealer from whom you purchased the product.