


RADIO CONTROL CLOCK

INSTRUCTION MANUAL

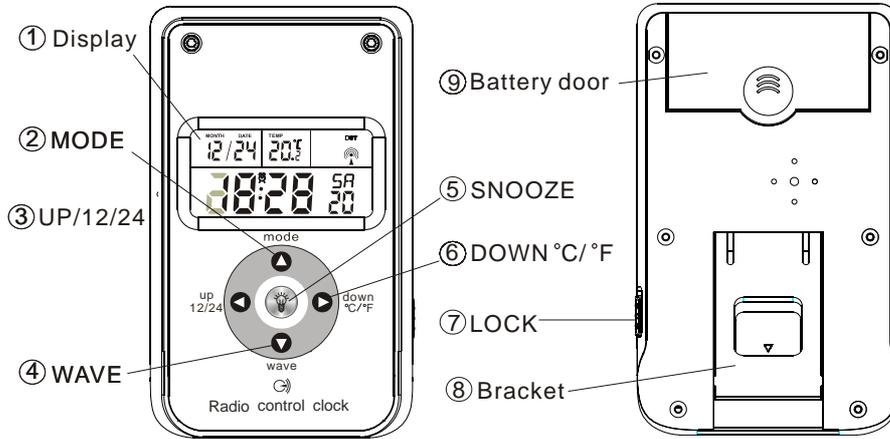

FUNCTIONS AND CONTROLS

- | | |
|----------------|----------------|
| . DISPLAY | . DOWN / KEY |
| . MODE KEY | . LOCK SWITCH |
| . UP/12/24 KEY | . BRACKET |
| . WAVE KEY | . BATTERY DOOR |
| . SNOOZE KEY | |

OPERATION

1. Open the battery door[9] and insert two AAA batteries, then the Hour, Minute, Second, Month, Date, Weekday and temperature will be shown on LCD screen.
2. When you just inserted the batteries into the battery compartment, it will automatically detect the temperature once and the RCC will automatically receive the signal once.
3. At this mode, press UP/12/24 key[3] to switch between the 12-hour system and 24-hour system.
4. Press DOWN key[6] to switch between the and .
5. Press MODE key [2] to view the preset alarm time.
6. At any mode (except ALARM mode), press SNOOZE key[5] once, the LED will be light up for five seconds. Press the button when unit is sounding at alarm time to stop the alarm immediately, but after five minutes, the unit will sound again.
7. You can press any key to stop the alarm except the SNOOZE button[5]. If the unit is receiving the wave at preset alarm time, then it will stop receipt of wave automatically.
8. The unit will detect the temperature once a minute.

9. Press and hold the WAVE key[4] to receive the wave compulsively, if the tower icon is flashing that means it is receiving signal. If the unit doesn't receive the signal (i.e. there isn't tower icon above the black line).
10. The unit will automatically receive the local signal at 00:00AM, 02:00AM, 04:00AM and 06:00AM in a day. If the unit has successfully received the time signal once (i.e. the tower icon won't flash), it won't receive again until next day (but you can press WAVE key[4] to receive compulsively again). The approximate maximum receiving time is 10 minutes. If failed in receipt within 10minutes, then stop receipt immediately.
11. When you are setting the alarm time or clock time, the unit can also receive the wave.

Note: When the unit received DST signal, DST icon will be display at top right corner of the screen.

ALARM MODE

1. At normal display mode, press MODE key[2] to enter the alarm mode, you can press UP/DST[3] or DOWN key[6] to start the alarm function or not. You can see if there is a bell icon between the HOUR and MINUTE or not.
2. Press MODE key[2] for 3 seconds to set the alarm, first the HOUR is flashing, press UP[3] or DOWN key[6] to adjust the value, press MODE key [2]again to set the minute, and press UP or DOWN to adjust the value.
3. If any button weren't pressed within 10seconds, it would return to the normal time display.

TIME AND DATE MODE

1. At normal time mode, press MODE key[2] for 3 seconds to set the HOUR that is flashing by pressing UP[3] or DOWN key[6]. If you confirm the set value, press MODE key[2] to set the next one that will be flashing, you can also set the minute-year-month-date by analogy. When you adjust the value by pressing UP[3] or DOWN key[6], if you hold the key, the value adjusted will be fast increased or fast decreased.
2. If any button weren't pressed within 10 seconds, it would return to the normal time display.

LOCK FUNCTION

When you push the LOCK Switch [7] at the right side of the unit close to the place with LOCK silkscreen, which means all functional keys are locked.