


soundmaster®

Modell MCD-700

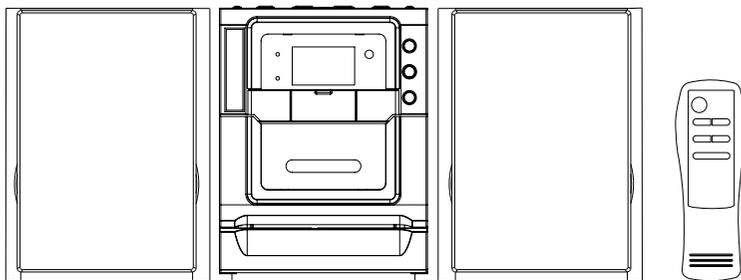


**Bitte vor Inbetriebnahme sorgfältig durchlesen.
Read instructions carefully before using the unit.
Avant de metre en service votre appareil, lisez attentivement ce instructions**



<p>LASERSCHUTZKLASSE 1 PRODUKT CLASS 1 LASER PRODUCT APPAREIL A LASER DE CLASSE 1</p>

WARNING

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

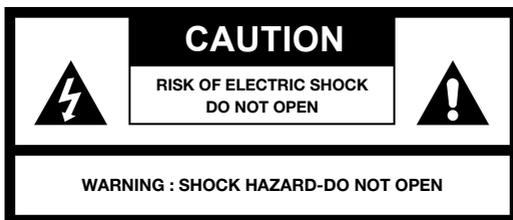

LIGHTNING FLASH WITH ARROWHEAD SYMBOL -
within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



EXCLAMATION POINT - within an equilateral triangle, is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reason.

The following label has been affixed to the unit, listing the proper procedure for working with the laser beam:



CLASS 1 LASER PRODUCT LABEL -

This label is attached to the place as illustrated to inform that the apparatus contains a laser component.



WARNING LABEL INFORMING OF RADIATION -

This label is placed inside the unit. As shown in the illustration. To warn against further measures on the unit. The equipment contains a laser radiating laser rays according to the limit of laser product of class 1.

SAFETY INSTRUCTIONS

1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundrytub, swimming pool or in a wet basement.
6. **VENTILATION** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. Do not place on bed, sofa, rug or similar surface that may block the ventilation openings, in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **HEAT** - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
8. **POWER SOURCE** - The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
9. **GROUNDING** - Precautions should be taken to ensure that the grounding means of an appliance is not defeated.
10. **POWER CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
11. **POWER LINES** - An outdoor antenna should be located away from power lines.
12. **OBJECT and LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
13. **ESD WARNING** - The display does not function properly or no reaction to operation of any the control may due to the electrostatic discharge. Switch off and unplug the set. Reconnect after a few seconds.
14. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service personnel when:
 - a. The power-supply cord or plug has been damaged.
 - b. Objects have fallen into, or liquid has been spilled into the appliance enclosure.
 - c. The appliance has been exposed to rain.
 - d. The appliance has been dropped, or the enclosure damaged.
 - e. The appliance does not appear to operate normally.
15. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user operating instructions. All other servicing should be referred to qualified service personnel.

Notes:

- a. Dirty or scratched CD may cause a skipping problem. Clean or replace the CD.
- b. If an error display or malfunction occurs, disconnect the AC cord and remove all the batteries. Then turn the power back on.

BEFORE OPERATION

Notes: CONCERNING COMPACT DISCS.



Since dirty, damaged or warped discs may damage the appliance, care should be taken of the followings items:

- a. Usable compact discs. Use only compact disc with the mark shown below.
- b. CD compact disc only with digital audio signals.




LOCATION OF CONTROL

- 1) POWER INDICATOR
- 2) LCD DISPLAY
- 3) REMOTE SENSOR
- 4) MINUTE
- 5) HOUR
- 6) TIME SET
- 7) FUNCTION SELECTOR
- 8) FM STEREO INDICATOR
- 9) BAND SELECTOR
- 10) TUNING CONTROL
- 11) CASSETTE DOOR
- 12) CASSETTE RECORD ●
- 13) CASSETTE PLAY ►
- 14) CASSETTE REWIND ◀◀
- 15) CASSETTE FORWARD ▶▶
- 16) CASSETTE STOP / EJECT ■/▲
- 17) CASSETTE PAUSE ||
- 18) CD DOOR
- 19) CD DOOR OPEN / CLOSE
- 20) PROGRAM
- 21) REPEAT
- 22) PLAY / PAUSE
- 23) SKIP-
- 24) SKIP+
- 25) STOP
- 26) VOLUME-
- 27) VOLUME+

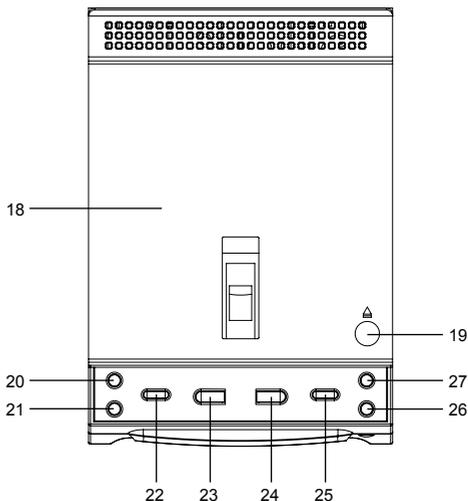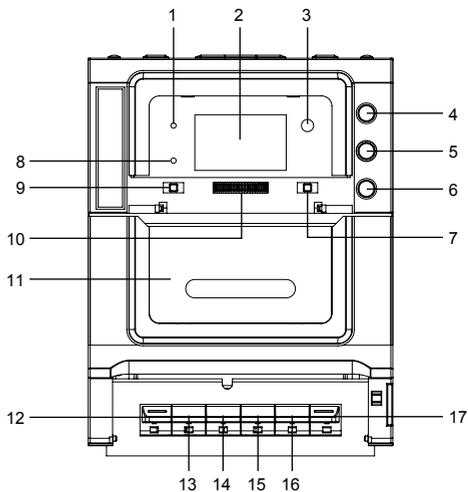

LOCATION OF CONTROL

- 28) BATTERY BACKUP
- 29) SPEAKER JACK L / R
- 30) BEAT CUT
- 31) FM ANTENNA
- 32) HEADPHONE JACK
- 33) AC CORD

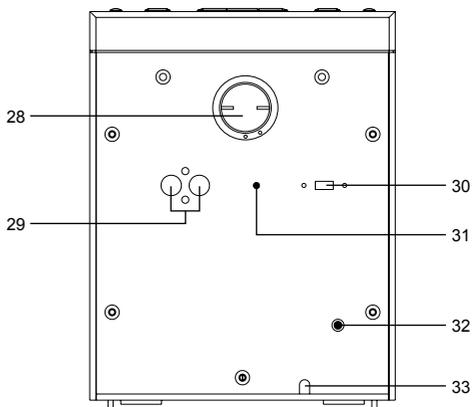


POWER SOURCE

AC POWER

You can power your appliance by plugging the AC power cord at the back of the appliance into a wall AC power outlet. Check that the rated voltage of your appliance matches your local voltage.

REMOTE CONTROL

1. PLAY / PAUSE
2. SKIP -
3. PROGRAM
4. STOP
5. SKIP +
6. REPEAT

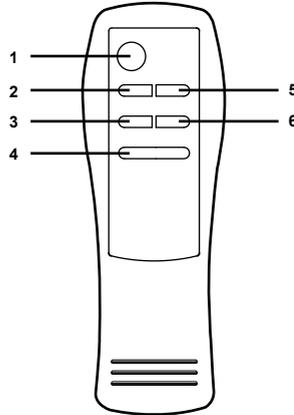

BATTERY INSTALLATION

Insert 2 x “AAA” size batteries into the battery compartment. Be sure that the batteries are inserted correctly to avoid damage to the remote control. Always remove the batteries when the remote control will not be used for a long period of time, as this will cause leakage to the batteries and subsequently damage to your set.

Notes:

- Use batteries of the same type. Never use different types of batteries together.
- If the distance required between the remote control and the appliance decreases, the batteries are exhausted. In this case replace the batteries with new one.

SENSOR WINDOW OF THE RECEIVER

- Even if the remote control is operated within the effective range, its operation may be impossible if there are any obstacles between the appliance and the remote control.
- If the remote control is operated near other appliances which generate infrared rays, or if other remote control devices using infrared rays are used near the appliance, it may operate incorrectly.

RADIO OPERATION

GENERAL OPERATION

1. Set the "FUNCTION" selector to "RADIO" mode.
2. Select desired band by using the "BAND" selector.
3. Adjust radio frequency to your desired station by using the "TUNING" control.
4. Adjust the "VOLUME" control to the desired level.

FM / FM-STEREO RECEPTION

- Set the "BAND" selector to FM mode for MONO reception.
- Set the "BAND" selector to FM ST. mode for FM STEREO reception. The Stereo indicator light up to show FM ST. mode.

FOR BETTER RECEPTION

FM - This appliance has a FM antenna located at the rear cabinet. This wire is completely unraveled and extended for better reception.

AM - This appliance is equipped with a built - in directional ferrite AM antenna. Rotate the appliance to get better reception.

TAPE OPERATION

GENERAL OPERATION

- PAUSE** **||** Press to stop playing tape operation temporarily.
Press again to resume tape operation.
- STOP / EJECT** **■▲** Press to stop tape operations.
Press again to open the cassette door after the tape spools stop turning.
- FAST FORWARD** **▶▶** & **REWIND** **◀◀** Press to start rapid tape winding either forward or reverse direction.
- PLAY** **▶** Press to start playing tape.
- RECORD** **●** Press it together with "PLAY" button to start recording.

PLAYBACK

1. Set the "FUNCTION" selector to "TAPE" mode.
2. Press the "STOP / EJECT" button to open the cassette door and insert your tape.
3. Close the cassette door.
4. Press the "PLAY" button to start playing tape.
5. Adjust the "VOLUME" control to the desired level.
6. Press the "PAUSE" button when you want to stop playing tape operation temporarily.
7. Press the "STOP / EJECT" button when finished.

RECORDING

1. Press the "STOP / EJECT" button to open the cassette door and insert a blank tape.
2. Select the source you want to record.
To record from radio - Set the "FUNCTION" selector to "RADIO" mode and adjust the desired station.
To record from CD - Place a disc on the CD compartment. Set the "FUNCTION" selector to "CD" mode and select the desired track.
3. Press the "RECORD" button together with the "PLAY" button to start recording.
4. Press the "STOP / EJECT" button when finished.

CD OPERATION

GENERAL OPERATION

- PLAY / PAUSE ►|| Press to start playing CD disc.
Press again to stop playing CD operation temporarily.
Press again to resume playback.
- SKIP + ►► &
SKIP - ◀◀ Press to go to the next track or back to the previous track.
Press and hold while playing until you find the point of the sound.
- STOP ■ Press to stop all CD operation.

PLAYBACK

1. Set the "FUNCTION" selector to "CD" mode.
2. Open the CD door and place a CD disc with the label up in the CD compartment.
3. Close the CD door.
4. Focus search is performed if disc is inside. Total number of tracks is read and appears on the display.
5. Press the "PLAY / PAUSE" button to start playing CD disc.
6. Adjust the "VOLUME" control to the desired level.
7. Press the "PLAY / PAUSE" button again when you want to stop playback temporarily.
8. Press the "STOP" button when finished.

CD OPERATION

PROGRAM

Up to 20 tracks can be programmed for disc play in any order.


Be sure to press the "STOP" button before use.

1. Press the "PROGRAM" button, the display will show "P01" and flash.
2. Select desired track by using the "SKIP +" or "SKIP -" button.
3. Press the "PROGRAM" button again to confirm desired track into the program memory.
4. Repeat step 2 and 3 to enter additional tracks into the program memory.
5. When all the desired tracks have been programmed, press the "PLAY / PAUSE" button to play the disc in the order you have programmed.
6. Press the "STOP" button twice to terminate programmed playback.

MODE

Press the "REPEAT" button before or during playing CD disc, each press switches the mode function as follows:

- 1 - REPEAT 1
- 3 - REPEAT ALL
- 4 - RANDOM
- 5 - NORMAL PLAYBACK

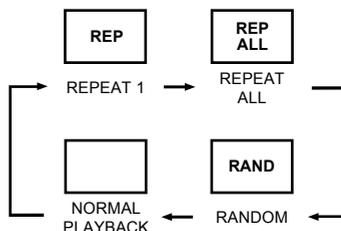

OTHER FEATURES

CLOCK SETTING

1. Press the "TIME SET" button. (Do not release "TIME SET" button during time setting)
2. Press the "HOUR" button to set hour.
3. Press the "MINUTE" button to set minute.
4. Release all button to confirm setting. Confirmed setting will on the display.