



**DEUTSCH**  
**ENGLISH**  
**FRANÇAIS**  
**NEDERLANDS**

**ITALIANO**  
**SVENSKA**  
**DANSK**  
**ČEŠTINA**

**Hersteller**

Wörlein GmbH  
Gewerbestr. 12  
D 90556 Cadolzburg  
GERMANY

Tel.: +49 9103/71670  
Fax.: +49 9103/716712  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Web: [www.woerlein.com](http://www.woerlein.com)



**ENVIRONMENTAL PROTECTION**



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.

	<b>WARNING</b> Risk of electric shock Do not open!	
Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.		



This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.



This symbol indicates the presence of important operating and maintenance instructions for the device



Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are legally obligated to return all batteries for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances\*)

Return batteries free of charge to public collection points in your community or shops selling batteries of the respective kind.

Only return fully discharged batteries

\*) **marked Cd = cadmium, Hg = mercury, Pb = lead**

- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!!
- Keep batteries away from children. Children might swallow batteries.
- Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION: Danger of explosion if battery is incorrectly replaced
- Replace only with the same or equivalent type

	<b>WARNING</b>
<b>DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD</b>	
This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.	
Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.	
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.	

	<b>CAUTION - INVISIBLE LASER RADIATION WHEN OPENING THE COVER OR PRESSING THE SAFETY INTERLOCK. AVOID EXPOSURE TO THE LASER BEAM.</b>
--	---

	<b>To prevent possible hearing damage, do not listen at high volume levels for long periods</b>
--	---


- Use the device in dry indoor environments only.
- Protect the device from humidity.
- This apparatus is for moderate climates areas use, not suitable for use in tropical climates countries.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug or an appliance coupler is used as the disconnect device, the disconnect devices shall remain readily operable.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
- Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- When you are necessary to ship the unit store it in its original package. Save the package for this purpose.
- In case of malfunction due to electrostatic discharge or fast transient (burst), remove and reconnect the power supply.
- If the unit is not using for a long period of time, disconnect it from the power supply by unplugging the power plug. This is to avoid the risk of fire.
- The device is equipped with a "Class 1 Laser". Avoid exposure to the laser beam as this could cause eye injuries.

## PREPARATION FOR USE

### UNPACKING AND SET UP

- Carefully remove the unit from the display carton and remove all packing materials from the unit.
- Unwind the AC power cord and extend it to its full length.
- Unwind the UKW Antenna wire and extend it to its full length.
- Place the unit on a stable, level surface, convenient to an AC outlet, out of direct sunlight and away from sources of excess heat, dust, moisture, humidity or strong magnetic fields.
- Connect the plug to your AC outlet.

### Horn Installation Guide

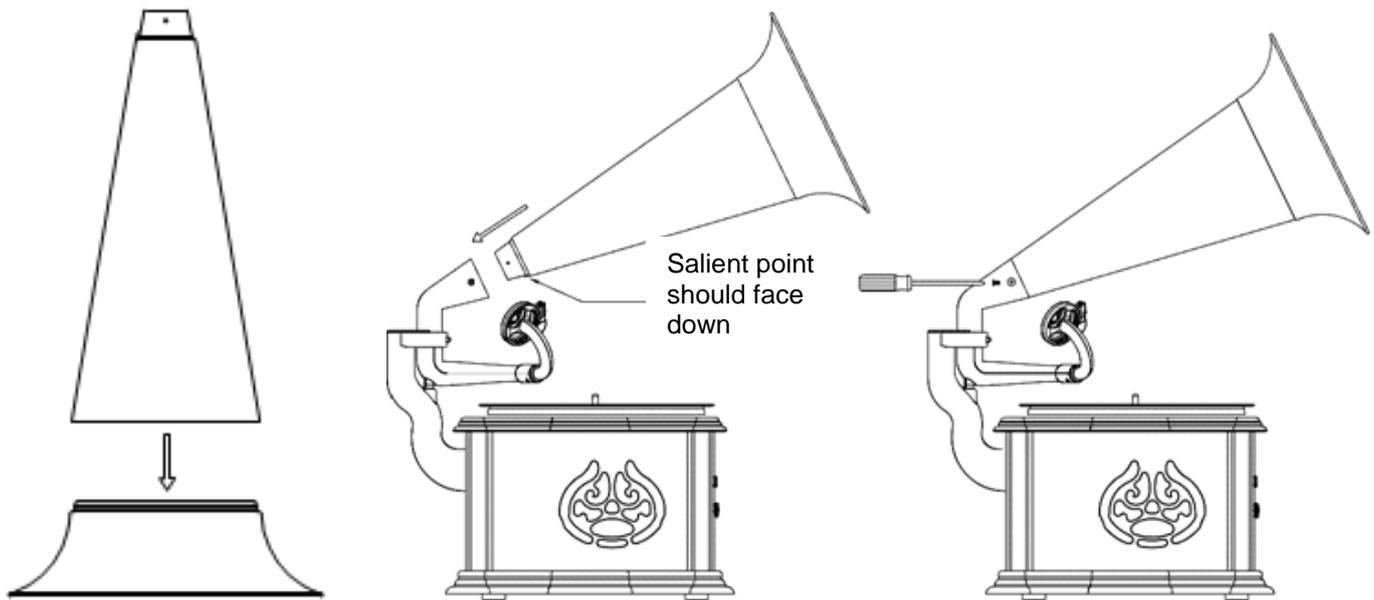

Step1: Press the main part of the horn to insert the horn ring.

Step2: Insert the horn into the twisted pipe. Pay attention to the positioning point.

Step3: Install 2pcs of screw to fasten the horn with the twisted pipe.

### PROTECT YOUR FURNITURE


This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These feet are made from non-migrating rubber mate specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polish, wood preservatives, or cleaning sprays may use the rubber 'feet' too soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

### CARE OF THE CABINETS:

You should care for the cabinet as you would care for any piece of the furniture. When the cabinet becomes dusty wipe it with a soft, non-abrasive dust cloth. If the cabinet becomes smudged with fingerprints you may use any good quality commercial dusting and polishing spray cleaner, however avoid spraying the plastic or metal parts of this system.

We recommend that you spray the cleaner on your dust cloth, not directly on the cabinet, to avoid getting any of the spray the plastic or metal parts.

## LOCATION OF CONTROLS AND INDICATORS

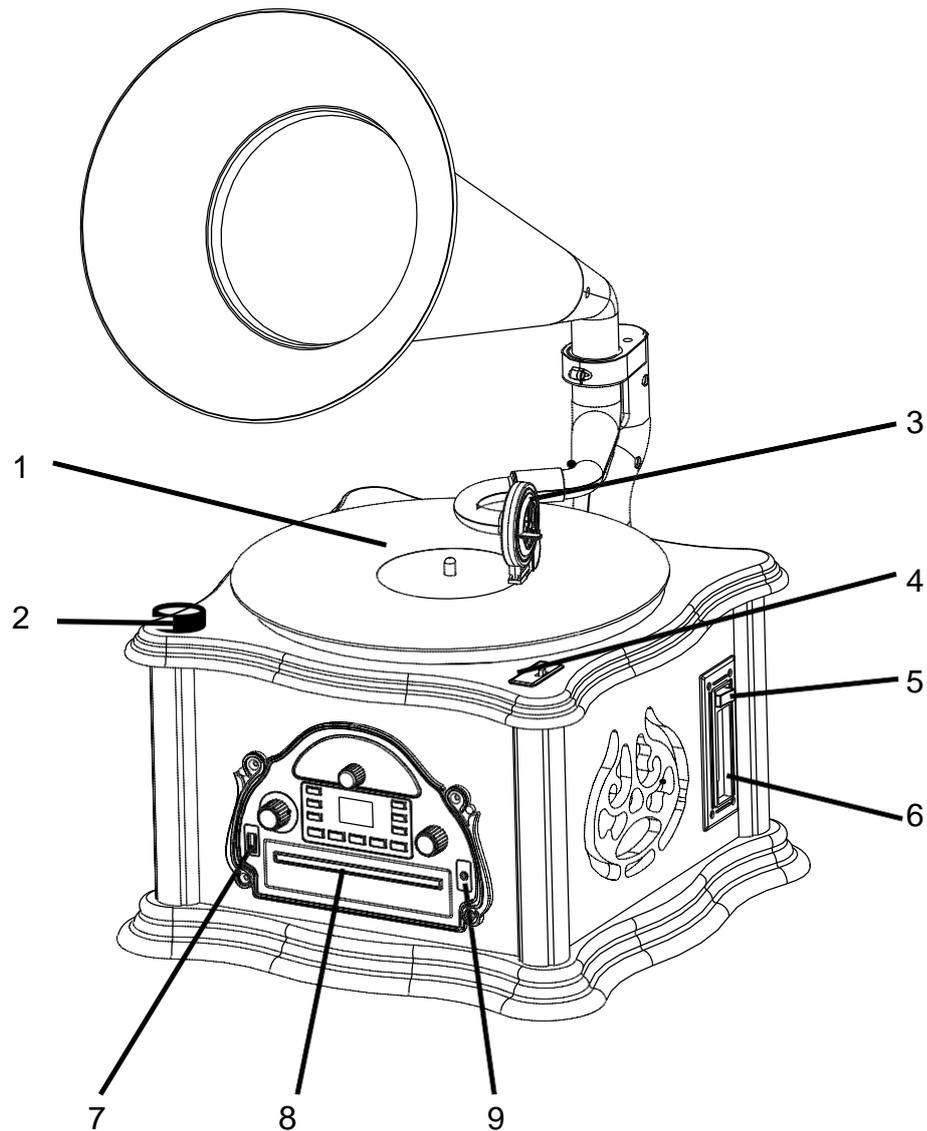

1. TURNTABLE

2. SPINDLE ADAPTOR

3. TONE ARM

4. 33/45/78 RPM SPEED SELECTOR


5. FFD/EJ

6. CASSETTE MECHANISM

7. USB SOCKET

8. CD DOOR


9. EARPHONE OUTPUT

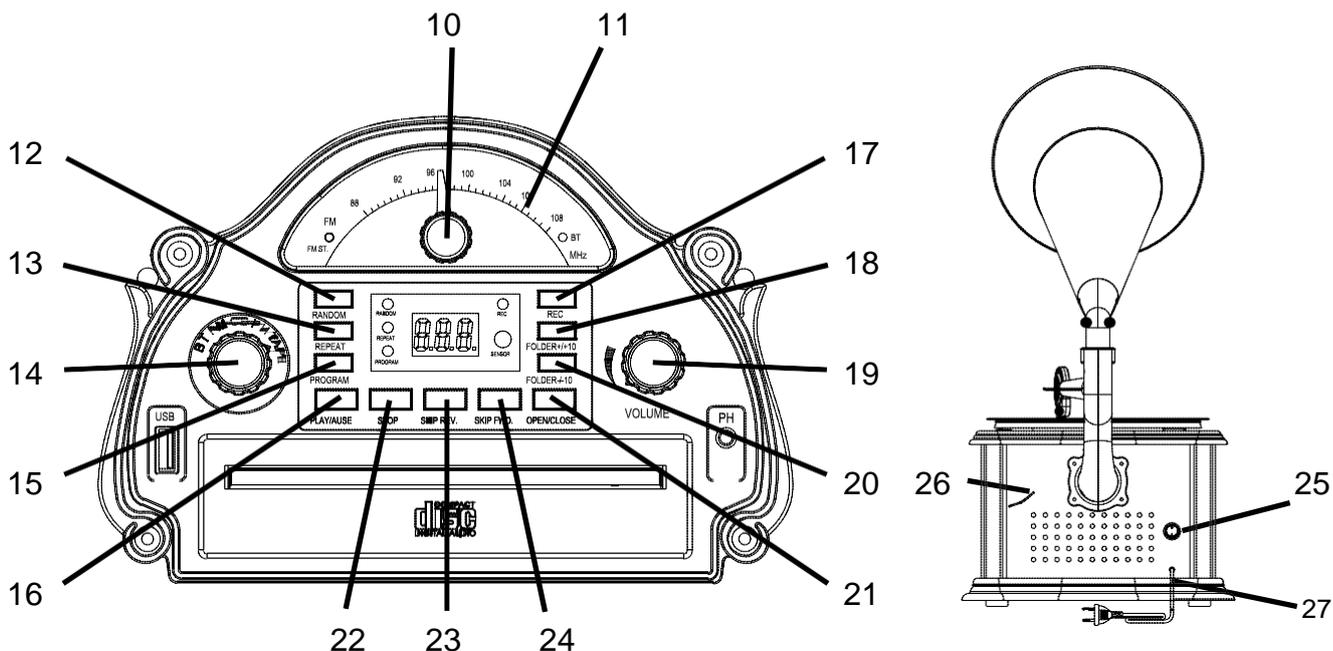

- |                        |                               |
|------------------------|-------------------------------|
| 10. TUNING KNOB        | 19. VOLUME KNOB               |
| 11. DIAL SCALE         | 20. TITEL -10 / ALBUM-        |
| 12. RANDOM             | 21. CD DOOR OPEN/CLOSE BUTTON |
| 13. REPEAT BUTTON      | 22. STOP BUTTON               |
| 14. FUNCTION SELECTOR  | 23. SKIP- BUTTON              |
| 15. PROGRAM BUTTON     | 24. SKIP+ BUTTON              |
| 16. PLAY/PAUSE BUTTON  | 25. ON/OFF SWITCH             |
| 17. RECORD BUTTON      | 26. FM ANTENNA                |
| 18. TITEL +10 / ALBUM+ | 27. AC CORD                   |

**REMOTE CONTROL**

1. CD DOOR OPEN/CLOSE BUTTON
2. PLAY/PAUSE BUTTON
3. SKIP- BUTTON
4. STOP BUTTON
5. TITEL -10 / FOLDER-
6. RANDOM
7. RECORD BUTTON
8. REPEAT BUTTON
9. SKIP+ BUTTON
10. TITEL +10 / FOLDER+
11. DELETE BUTTON
12. PROGRAM BUTTON

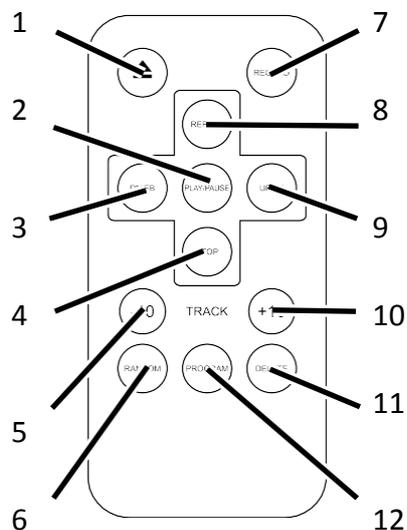


## POWER SUPPLY

This unit operates from a main supply of 230V ~ 50Hz. Connect the AC power cord to the AC household main outlet. Ensure that the voltage is as indicated on the rating plate on the rear of the unit.

This system is designed to operate on normal 230V 50Hz AC only. Attempting to operate this system from any other power source may cause damage to the system and such damage is not covered by your warranty.

Press ON/OFF (25) to turn the unit ON. Press and hold ON/OFF (25) for 1 second to turn the unit OFF.

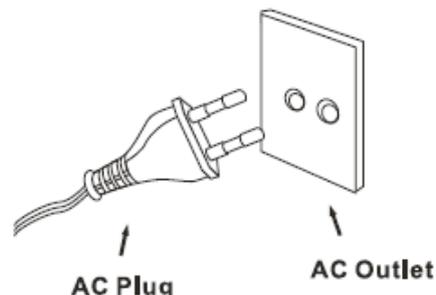

When no sound is produced, the unit will switch OFF automatically after 10 minutes.

## FM RADIO OPERATIONS

1. Select FM mode using "FUNCTION" SELECTOR (14).
2. Turn "TUNING" KNOB (10) to select your favourite radio station.
3. Turn the "VOLUME" KNOB (19) to the desired volume level.

### Antenna Information

For FM reception there is a built-in FM antenna wire (26) at the rear of the unit. Move the wire around to obtain the best reception.

## LISTENING TO RECORDS

1. Select PHONO mode using "FUNCTION" SELECTOR (14).
2. Remove the stylus protector and select the correct stylus type 33/45 for vinyl or 78 for shellac records by the flip over function of the cartridge.
3. Place a record on the turntable, over the central spindle. Place the EP adapter over the central spindle when playing 17cm EP records.
4. Set 33/45/78 RPM SPEED SELECTOR (4) to 33 / 45 / 78 rpm according to the record.
5. Move the tonearm to the beginning of the record, or to the start of a particular track. Gently lower the tone arm onto the record to start playing.
6. To stop manually, lift the tonearm from the record and turn it back.
7. Replace the protective cap on the stylus when not in use.

## TAPE OPERATIONS

1. Select TAPE mode using "FUNCTION" SELECTOR (14).
2. Load a cassette tape into the unit. The system will start playback automatically after inserting the cassette tape.
3. Press FF/EJ (5) half inwards during playback mode. The tape will wind forward. Slightly press FF/EJ (5) again to resume playback.
4. Press FF/EJ (5) completely inwards and the cassette tape will be ejected through the CASSETTE MECHANISM (6).

## PLAYING COMPACT DISC

1. Select CD mode using "FUNCTION" SELECTOR (14).
2. Press CD DOOR "OPEN/CLOSE" BUTTON (21) (1 on remote) to open the cd door. Place a CD with the printed side facing up inside the tray, then close the cd door. The first track will start playback.
3. Press "SKIP -/+ " (23/24) (3/9 on remote) to select your favorite tunes. If you hold "SKIP -/+ " (23/24) (3/9 on remote), the playing track will go fast backward or forward until you release the button.
4. Press "PLAY/PAUSE" (16) (2 on remote) to pause the playback. The track number will start blinking. Press "PLAY/PAUSE" (16) (2 on remote) again to resume the playback.
5. Press "STOP" (22) (4 on remote) to stop the playback.

### REPEAT MODE

During playback, repeatedly press "REPEAT" (13) (8 on remote) to select:

**Repeat 1:** The current track is played repeatedly (REPEAT LED is flashing fast).

**Repeat All:** All tracks are played repeatedly (REPEAT LED is lighting constant).

**Repeat Folder:** The current folder is played repeatedly (REPEAT LED is flashing slowly).

**Random:** Press "RANDOM" (12) (6 on remote) to select RANDOM-mode: The tracks are played in casual order (RANDOM LED is lighting up).

### TITEL OR FOLDER SELECTION

Press the "+10" or "-10" button (18 or 20 respectively 5 or 10 on the remote control) to skip 10 titles forwards or backwards.

If you have a media storage e.g. MP3 CD with folders structure on it , press and hold the button 18 or 20 (respectively 5 or 10 on the remote control) to select the next or the previous folder.

## **CD PROGRAMMING**

You can program up to 99 tracks for MP3 disk and 20 tracks for CD disk to play in any desired order.

1. Insert a disc and press “STOP” (22) (4 on remote) when it starts playing.
2. Press “PROGRAM” BUTTON (15) (12 on remote). “P01” will be shown on the display.
3. Press “SKIP -/+” (23/24) (3/9 on remote) to select your favorite tunes.
4. Press “PROGRAM” BUTTON (15) (12 on remote) to store the track in the program memory. “P02” will be shown on the display.
5. Repeat steps 3-4 to select and store all desired tracks.
6. Press “PLAY/PAUSE” (16) (2 on remote) to start program play.
7. Press “STOP” (22) (4 on remote) once to stop the program play.
8. Press “STOP” (22) (4 on remote) twice to clear program.

## **PLAYBACK FROM USB**

1. Insert the USB device's plug into the USB socket.
2. Select CD mode using “FUNCTION” SELECTOR.
3. Press and hold “PLAY/PAUSE” for 2 seconds to switch to USB mode.
4. Use the same procedure as CD to listen to your USB device.

## **DELETE USB**

1. During playback, press “DEL” (11) on remote.
2. Press “DEL” (11) on remote again to confirm.

## **RECORDING FUNCTION**

1. While listening to PHONO/TAPE/CD/BT, press “REC” (17 or 7 on remote). “REC” will be shown on the display. The “REC” indicator will light up.
2. Press “REC” (17 or 7 on remote) again to confirm. Encoding is performing now. Note that the encoding speed is 1:1.
3. Press “STOP” (22) (4 on remote) to stop recording.
4. The unit will create a folder in the USB device, that contain all recorded tracks.

## BLUETOOTH FUNCTION

1. Select BT mode using "FUNCTION" SELECTOR.
2. Search "NR916" from your mobile device and connect to play.

## HEADPHONE




Connect your headphone cable to the headphone jack and play.


While the headphone jack is in use, the internal speaker will be off until the headphone cable is unmounted.

To prevent possible hearing damage, do not listen at high volume levels for long periods.


## STEPS OF REPLACING THE CATRIDGE

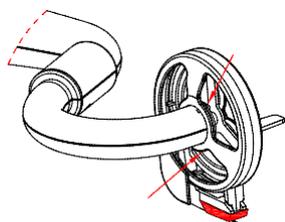

1. Use a small flat screw driver to move the buckle (see the arrow), then take out the cartridge holder.

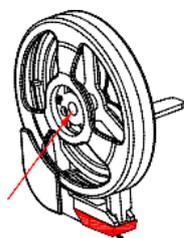

2. Loose the screw.

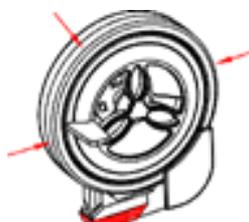

3. Open the cartridge holder from the middle gap by using flat screw driver.



4. Replace the cartridge and restore the cartridge holder. Please note that cartridge holder must be opened before replacing the cartridge.



## TECHNICAL SPECIFICATIONS

(UKW) FM Frequency: 87,5 - 108 MHz  
 Operation voltage: 230V ~ 50Hz  
 Power consumption: 19 W

Features and specifications are subject to change without prior notice.

## IMPORTER

Wörlein GmbH  
 Gewerbestrasse 12  
 D 90556 Cadolzburg  
 Deutschland

Tel.: +49 9103 71 67 0  
 Fax.: +49 9103 71 67 12  
 E-Mail: [service@woerlein.com](mailto:service@woerlein.com)  
 Web: [www.woerlein.com](http://www.woerlein.com)

Technische Änderungen und Druckfehler vorbehalten  
 Urheberrecht Woerlein GmbH, 90556 Cadolzburg, [www.woerlein.com](http://www.woerlein.com)  
 Vervielfältigung nur mit ausdrücklicher Genehmigung der Woerlein GmbH

