



Installing the Batteries

Your new Pix Jr. camera is powered by four AA batteries (not included).

To install the camera batteries, have an adult:

1. Use a Phillips head screwdriver to unscrew the two screws on the bottom of the camera. Remove the battery door.
2. Insert the batteries as shown by the + and - signs on the battery door.
3. Replace the battery door and screw it back into place.
4. Press any button to turn on the camera. The camera is ready to take lots of fun pictures!



Turning on your Camera

Once the batteries are installed, the camera can be turned on by pressing any button.

The camera does not have an "Off" button. If the camera remains inactive for one minute, it will turn off automatically.

Installing the Software

To install the Pix Software to your computer:

1. Insert the Pix CD-ROM into your computer's CD/DVD-ROM drive.
2. The program should automatically begin. If it doesn't, select My Computer from the Desktop and then double-click on the CD Drive. If the application still doesn't start, open the Setup folder and double-click setup.exe
3. Follow the instructions on the screen.

Camera Components

Snapshot button - Use the Snapshot button to take pictures.

Camera Lens - Keep the lens clean and avoid putting hands and fingers near it so that your pictures are clear.



Wrist Strap - Use the Wrist Strap to keep your Pix Jr. camera safe.

USB Connection - Connects the camera to your computer.

SD Card Slot - The SD Card Slot is located inside the battery compartment. Have an adult help you put in an SD Card so that you can take more pictures!

Magic Wand button - Add fun Disney PhotoFriends to your pictures!

Left button - Scroll back through your pictures.

Right button - Scroll forward through your pictures.

Display Screen - Look at the Display Screen to see the picture you want to take, or to look at pictures you have taken.

Trash Can button - Delete one of your photos or all of them.



Display Screen

Your new Pix Jr. camera uses simple icons to help you take great photos.

The USB Connection icon shows when your camera is connected to your computer.

The Memory Full icon shows when you have filled your camera's memory. Connect the camera to your computer to download your photos. This icon will also appear if there is a problem with the SD card.

This icon shows that one photo is about to be deleted.

This icon shows that all the pictures on the camera are about to be deleted.

You will see this icon if your SD card is locked. In order to save any pictures to the card, it must be removed and unlocked.

This icon shows when the batteries in your camera need to be replaced.


Camera Memory

Your new Pix Jr. camera can store pictures on either its on-board memory or, for expanded storage, on an SD Card. The Pix Jr. camera comes with 32 MB, approximately 140 photos, of on-board memory and can use SD Cards up to 2 GB.

To Insert an SD Card:

1. Open the battery compartment on the bottom of the camera. A grown-up should remove the screws using a Phillips head screwdriver.
2. Remove the battery door and locate the SD Card slot.
3. Insert the card into the slot as shown below. The card will click into place.
4. Replace the battery door and tighten the screws.

To remove the SD Card, re-open the battery door and press gently on the exposed edge of the SD Card. You should hear a click, and the card will spring up slightly. Gently grasp and pull the card out of the slot.

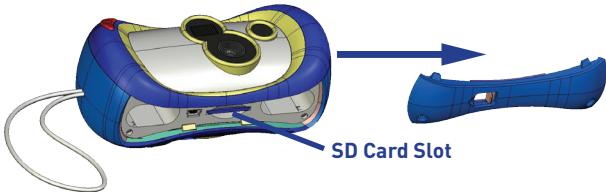

Camera Memory

Your new Pix Jr. camera can store pictures on either its on-board memory or, for expanded storage, on an SD Card. The Pix Jr. camera comes with 32 MB, approximately 140 photos, of on-board memory and can use SD Cards up to 2 GB.

To Insert an SD Card:

1. Open the battery compartment on the bottom of the camera. A grown-up should remove the screws using a Phillips head screwdriver.
2. Remove the battery door and locate the SD Card slot.
3. Insert the card into the slot as shown below. The card will click into place.
4. Replace the battery door and tighten the screws.

To remove the SD Card, re-open the battery door and press gently on the exposed edge of the SD Card. You should hear a click, and the card will spring up slightly. Gently grasp and pull the card out of the slot.

Mass Storage Mode

If you want to download pictures from your Pix Jr. camera without the Disney Pix software, you can use the camera in mass storage mode. Because your camera is a USB Mass Storage Device, your computer will recognize the camera as an external hard drive.

To use the camera as a mass storage device:

1. Connect the camera to your computer with the provided USB Cable.
2. Go to the Desktop and double-click on My Computer.
3. You will see a list of drives connected to your computer, including the hard drive, CD drives and other mass storage devices.
4. Double-click on the Pix Jr. Camera in the list. Choose the folder labeled DCIM and then choose 100 COACH. Your pictures will be located in this folder.

Taking Pictures With The Camera

Taking pictures with your new Pix Jr. is a great way to share memories with your friends and family!

Taking pictures is fun and easy!

1. Turn the camera on by pushing any button.
2. Use the Display Screen to locate the subject of your picture.
3. Hold the camera steady!
4. Press the Snapshot button.

Note: Pix Jr. will show the number of pictures you have taken in the upper right-hand corner of the display.

Adding PhotoFriends

Using the Magic Wand button, you can add PhotoFriends to your pictures. PhotoFriends are some of your favorite Disney characters and special props that make your photos even more fun!

To add a PhotoFriend to your picture:

1. Turn the camera on by pressing any button.
2. Press to turn on the PhotoFriends option.
3. Use or to choose a PhotoFriend.
4. Pose your subject with the PhotoFriend.
5. Press the Snapshot button to take the picture.



Note: PhotoFriends are permanently part of the picture. If you decide you don't want to use a PhotoFriend, press the to take a regular picture instead.

Reviewing your Pictures

To see pictures you have taken, just press the and on either side of the display screen.

Deleting Pictures

If you take a picture you don't want to keep, deleting it is easy.

1. Find the photo using and .
2. Press once to delete one picture.

When you see on the screen, press again to confirm.

If you want to delete all the pictures on your camera, press and hold for three seconds.

When you see on the screen, press again to confirm.

Need Additional Help?

For additional product support visit www.digiblue.com and select Customer Service.

If you are still having problems with the product, contact customer support at 888-800-0502.