



# soundmaster®

## Instruction Manual Model PL 710

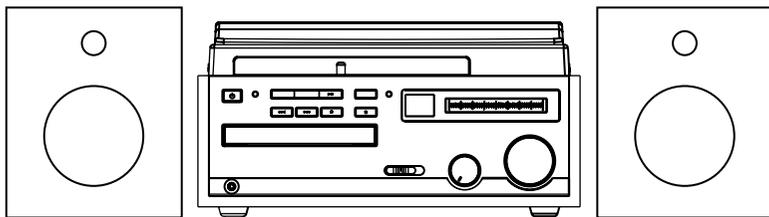

**Turntable Radio**

## LOCATION OF CONTROLS

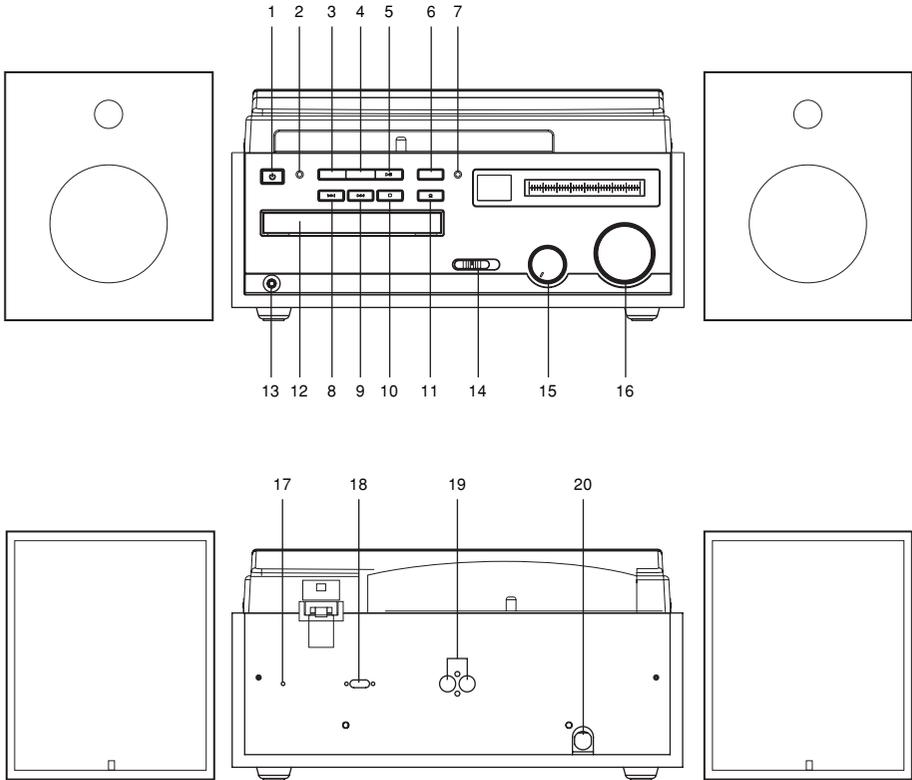

- |                        |                           |
|------------------------|---------------------------|
| 1) POWER KNOB          | 11) OPEN / CLOSE          |
| 2) POWER INDICATOR     | 12) CD COMPARTMENT        |
| 3) REPEAT FUNCTION     | 13) PHONE JACK            |
| 4) PROGRAM FUNCTION    | 14) FUNCTION KNOB         |
| 5) PLAY / PAUSE        | 15) VOLUME KNOB           |
| 6) MONO / ST.          | 16) TUNING KNOB           |
| 7) FM STEREO INDICATOR | 17) FM ANTENNA            |
| 8) SKIP DOWN           | 18) AUTO STOP SWITCH      |
| 9) SKIP UP             | 19) EXTERNAL SPEAKER JACK |
| 10) STOP               | 20) AC POWER CORD         |

## CONNECTIONS

### POWER CONNECTION

Connect the power cord to AC Outlet only.

### SPEAKER JACK

Connect the SPEAKER PLUGS to the EXTERNAL SPEAKER JACKS(20) located on the rear of the unit.

**This unit should not be connected to speakers with an impedance of less than 8 ohms, otherwise damage may result to the unit.**


### HEADPHONE JACK (PHONES)

This unit will accept stereo headphones (not included) with a 1/8" plug and an impedance of 32 ohms or greater.

The speakers are automatically disconnected when headphones are connected to the PHONES jack.

## TOP COVER ASSEMBLY

- 1) Push the metal bracket to rear side
- 2) Connect the metal bracket to the top cover
- 3) Connect the hinge of the top cover to the main unit

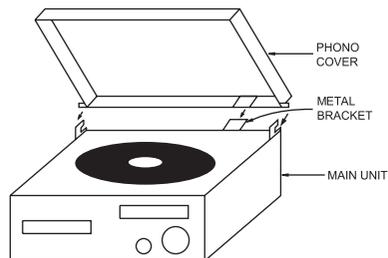

## GENERAL

**POWER(1)** – Press to turn unit ON or OFF. The Power Indicator LED(4) will light when the unit is on.

**VOLUME(15)** – Adjusts loudness of speaker or headphones.

**FUNCTION(14)** – Use to select desired source (AM/FM RADIO, PHONO or CD) to be listened to.

## RADIO

### OPERATION

- 1) Turn the unit "ON" using the POWER Knob(1).
- 2) Select the desired radio band by selecting FUNCTION Knob(14) to AM or FM position.
- 3) Turn the TUNING Knob(16) to select the station frequency as desired.
- 4) Adjust VOLUME Knob(15) for the desired volume level.

### FM & FM-STEREO RECEPTION

Set the FUNCTION Knob(14) at FM position. Programs are received in mono mode. When Stereo signals are weak, it is preferable to receive the program in mono. Press MONO/ST. Knob(6) at FM ST position for receiving stereo programs. The FM STEREO Indicator(7) lights up to show FM stereo programs. Press MONO/ST. Knob(6) again to clear stereo program.

### HINTS FOR BEST RECEPTION

FM: The receiver has a built-in FM wire antenna(17) hanging from the rear cabinet. This wire should be completely unraveled and extended for best reception.


AM : This unit is equipped with a built-in directional ferrite antenna. Rotate the unit to get the best reception.

## PHONO

### Note:

*Remove the stylus protector.*

*Be sure that the tone arm is detached from the tone arm rest before operation and re-secured again afterward.*

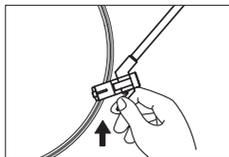

- 1) Press the POWER Knob(1) to ON.
- 2) Set the FUNCTION Knob(14) to the PHONO.
- 3) Set the speed selector to the proper position depending on the record to be played.
- 4) Place the record on the platter (if required, use the 35/45/78 rpm adaptor)
- 5) Lift the tone arm like the diagram shows from the rest and slowly move it to the record side. The platter will begin to rotate.
- 6) Place the tone arm on the desired position.
- 7) Adjust VOLUME controls(15) to the desired sound level.
- 8) At the end of the record, the platter will automatically stop rotation. Lift the tone arm from the record and return it to the rest.
- 9) To stop manually, lift the tone arm from the record, and return it to the rest.

**Remark:** As some kind of record the Auto-Stop area was out of the unit setting, so it will stop before the last track finish, in this case, select the Auto-Stop switch (18) to OFF position, then it will run to the end of the record but will not stop automatically (Turn off the unit by Power knob (1) or switch back the Auto-Stop switch (18) to ON position to stop the platter rotate), put back the tone arm to the rest.

**OPERATION**

- 1) Set the FUNCTION Knob(14) to CD position. Open the CD Compartment(12) by pressing the OPEN/CLOSE Button(11). Put a CD into the compartment and close the CD door.
- 2) Focus search is performed if disc is inside.Total no.of tracks is read.

**PLAY/PAUSE MODE ►||**

- 1) If PLAY/PAUSE Knob(5) is pressed during STOP mode, the first track will be played and “01” will appear on display.
- 2) If PLAY/PAUSE Knob(5) is pressed during PLAY mode, it will go into PAUSE mode, The track no. will be flashing. Press PLAY/PAUSE again, the CD playing will resume.

**STOP MODE ■**

- 1) If STOP Knob(10) is pressed during PLAY or PAUSE mode, it will go into STOP mode and display will show total number of tracks.

**SKIP MODE (SKIP UP ►► / SKIP DOWN ◀◀ )**

- 1) During PLAY or PAUSE mode, if SKIP UP Knob(9) is pressed, it will go to next track and display the track no. and then continue the PLAY or PAUSE mode.
- 2) During PLAY or PAUSE mode, if SKIP DOWN Knob(8) is pressed, it will go back to the beginning of the current track, the track no. is displayed and continue to play or remain at PAUSE mode.
- 3) After step “2”, press SKIP DOWN Knob(8) again will go to the previous track and continue to PLAY or PAUSE mode from that track.

**REPEAT MODE**

- 1) Press the REPEAT Knob(3) before or during play, a single track of all the tracks can be repeated. Each press switches the REPEAT mode
- (1) REPEAT 1 —————> (2) REPEAT ALL —————> (3) REPEAT OFF
- 

- For REPEAT 1 mode, a dot will be flashing on display
- For REPEAT ALL mode, a dot will keep on lighting
- For REPEAT OFF mode, the lighting dot will disappear

**CD PROGRAMMING**

Up to 20 tracks can be programmed for disc play on any order. Before use, be sure to press the STOP Knob(10).

- 1) Set in CD mode(14).
- 2) Press the PROGRAM Knob(4), “00” will be flashing on display.
- 3) Select a desired track by pressing SKIP UP Knob(9) or SKIP DOWN Knob(8), then press PROGRAM Knob(4) again to confirm that track is selected.
- 4) Repeat step “3” to select more tracks.
- 5) When all the desired tracks have programmed. Press PLAY/PAUSE Knob to play the disc in the order to play the program play.
- 6) Press STOP Knob(10) to terminal program play.

## TROUBLE SHOOTING

### Power switch on, but no power

- \* Check power to wall plug.
- \* Check AC cord connection to wall plug.

### Power Indicator is on, but no sound from speaker

- \* Check Function selector.
- \* Check VOLUME setting
- \* Make sure headphones are not plugged in.

### Tuner poor FM reception

- \* Unravel and fully extend FM wire antenna for best reception.

## MAINTENANCE

### Power switch

After using the unit, turn off the power by releasing the POWER switch.

### Cleaning the Unit

To retain the beauty of the unit, simply wipe with soft clean cloth moistened with plain lukewarm water.


### Safety Instruction:

- *Do not connect the power cord to the mains supply until all other connections have been made.*
- *Do not expose this apparatus to liquid.*

### Stylus (needle) Replacement

Replacement of a worn stylus can be easily accomplished as follows.

- 1) Raise the "Tone Arm".
- 2) To remove the old stylus, pull out the stylus assembly in direction shown, holding the head shell with your other hand.
- 3) Then install the new stylus by pushing it gently into the cartridge (hold by the edge to prevent damage to stylus) until it clicks into place.

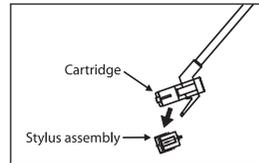

## SPECIFICATIONS

### Power Supply:

AC: 100V ~ 50/60Hz

### Radio Frequency Coverage:

AM: 540 - 1600 KHz  
FM: 76 - 108 MHz

Specifications subject to change without notice.

## MORE INFORMATION

### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**ATTENTION:** To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer all servicing to qualified personnel.

### WARNING:

- To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.
- Ventilation holes should not be covered.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.

The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

