

soundmaster®

Modell SCD 2400



LASERSCHUTZKLASSE 1 PRODUKT
CLASS 1 LASER PRODUCT
APPAREIL A LASER DE CLASSE 1



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: SHOCK HAZARD - DO NOT OPEN
AVIS: RISQUE DE CHOC ÉLECTRONIQUE - NE PAS OUVRIER
WARNUNG: ELEKTROSCHOCK GEFAHR - NICHT ÖFFNEN





Vor Inbetriebnahme sorgfältig lesen !

Read instructions carefully before using the unit !

Avant de mettre en service votre appareil, lisez attentivement ce instructions

1. ANTENNA
2. HANDLE
3. DISPLAY
4. SPEAKERS
5. CD PROGRAM BUTTON
6. BACKWARD SKIP / SEARCH BUTTON
7. CD REPEAT BUTTON
8. FORWARD SKIP / SEARCH BUTTON
9. RANDOM BUTTON
10. STOP BUTTON
11. PLAY/ PAUSE BUTTON
12. REPEAT LED INDICATOR
13. PROGRAM LED INDICATOR
14. PLAY/ PAUSE LED INDICATOR
15. AUX JACK
16. FUNCTION SWITCH(CD/OFF/RADIO)
17. VOLUME CONTROL
18. CD DOOR OPEN / CLOSE
19. AC MAINS SOCKET
20. CD DOOR
21. LASER
22. PIVOT FOR CD
23. TUNING FREQUENCY SCALE
24. TUNING KNOB
25. BAND SWITCH(AM/FM/FM ST.)

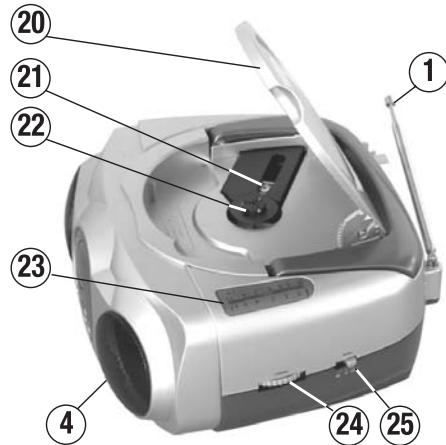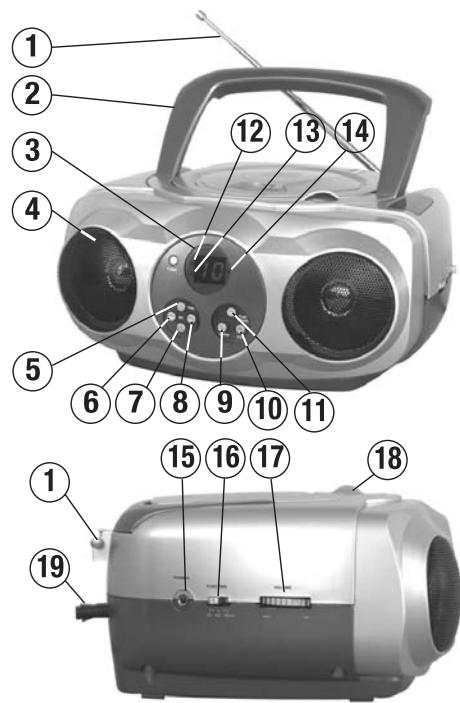

POWER SUPPLY

Operate by DC

Whenever convenient, use the power supply if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

Batteries (not included)

Open the battery compartment and insert eight batteries, type R-14, UM-2 or C-cells, (preferably Alkaline) with the correct polarity as indicated by the "+" and "-" symbols inside the compartment.

Batteries contain chemical substances, so they should be disposed of properly.

Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:

- Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- Remove the batteries if the set is not to be used for a long time.

Unit power supply (mains AC230V/50Hz)

1. Check if the power voltage, as shown on the type plate located on the bottom of the set, corresponds to your local AC power supply. If it does not, consult your dealer or service center.
2. Connect the power cord to the AC MAINS inlet and the wall outlet. The power supply is now connected and ready for use.
3. To switch off completely, unplug the power cord from the wall outlet.
 - Unplug the power cord from the wall outlet to protect your set during heavy thunderstorms.

General operation

1. To select your sound source adjust the source selector to CD/OFF/RADIO.
2. Adjust the sound with the VOLUME.
3. To switch off the set, adjust the source selector to off position.

RADIO OPERATION

Radio reception

1. Slide the FUNCTION selector to RADIO.
2. Slide the BAND selector to a desired setting - FM STEREO, FM, AM.
3. Rotate the TUNING control to find the desired stations.
NOTE: If the BAND selector is set to the FM stereo position and you have tuned to an FM stereo station, the FM stereo LED indicator will light.
4. When you have finished listening, slide the FUNCTION selector to the OFF position to shut the power off.

For better reception

For FM, pull out the telescopic antenna. Incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter).

– For AM the set is provided with a built-in antenna so the telescopic antenna is not needed. Direct the antenna by turning the whole set.

CD SECTION

Playing a CD

This CD-player can play Audio Discs, CD-R.

Do not try to play CD-ROM, CDi, VCD, DVD or computer CD.

1. Adjust the source selector to CD.
Display: shows "NO" Briefly.
2. To open the CD door, lift the CD door at the edge marked OPEN/CLOSE.
3. Insert a CD disc with the printed side facing up and press the CD door gently close.
4. Press >|| on the set to start playback.
5. To pause playback press >||. To resume, press again.
6. To stop CD playback, press STOP ■ .

Note: CD play will also stop when:

- you open the CD compartment;
- you select RADIO sound source;
- the CD has reached to the end.

Selecting a different track

During playback you can use |<< or >>| to select a particular track.

- If you have selected a track number in the stop or pause position, press >|| to start playback.
- Press >>| once briefly for the next track, or press repeatedly until the desired track number appears in the display.
- Press |<< once briefly to return to the beginning of current track.
- Press |<< more than once briefly for a previous track.

Finding a passage within a track

1. Press and hold down |<< or >>|. The CD is played at high speed and low volume.
2. When you recognize the passage you want release |<< or >>|. →Normal playback resumes.

Different play modes: Repeat

repeat – plays the current track continuously

repeat all – plays the entire CD continuously

Note: When the unit in repeat mode, there is a running sign rolling show on the LED display

Random Play

Press stop button to enter into stop mode, press Random button once then press play/pause button to carry out random play. “NOTE: “RANDOM” will not appear on the display.” All tracks on the disc will be played in random order, then will stop. During random playing. To cancel random play, press stop button twice.

Repeat Function

The Repeat Button can be used to repeat a single track. Repeat all tracks.

To repeat a single track.

Press the REPEAT Button once while in the play mode .The CD Repeat LED Indicator will flash.

To repeat all of the tracks on a CD.

Press the REPEAT Button twice while in the play mode. The CD Repeat LED Indicator will steadily be illuminated.

To exit the repeat mode.

Press the REPEAT Button a third time while in the play mode.

Programming track numbers

You may store up to 20 tracks in the desired sequence. If you like, store any track more than once.

1. In the STOP mode, press |<< or >>| for your desired track.
2. When your chosen track number appears, press PROG MODE once to store the track.
→PROG LED flashes and the display shows PROG briefly followed by your selected track number.
3. Repeat steps 1 to 2 to select and store all desired tracks in this way.
4. To play your program, press >||.

Erasing a program

You can erase the contents of the memory by:

- opening the CD door;
- selecting RADIO source;
- pressing STOP■ (twice during playback or in the stop Position)

The display shows your stored track numbers in sequence.

AUX INPUT JACK

1. Power on the unit.
2. Connect the AUX connect wire from the out jack of your Personal Player such as portable MP3 player to the AUX input jack.
3. Slide the Function Selector to “iPod”.
4. Push Start on your Personal Player.

Technical

FM frequency	87,5 – 108MHz
AM frequency	530 – 1600KHz
Powerconsumption	14W
DC	12V 8xUM-2/C 1,5V
AC	230V/50Hz
Power output	2 x 0,8W
Weight	approxm. 1,3KG (without batteries)