


soundmaster®


Tragbarer CD/MP3 Radio

Modell SCD-2500 MP3

BEDIENUNGSANLEITUNG

Bitte lesen Sie die Bedienungsanleitung vor Inbetriebnahme sorgfältig durch und heben Sie diese für einen eventuell notwendigen späteren Gebrauch gut auf.

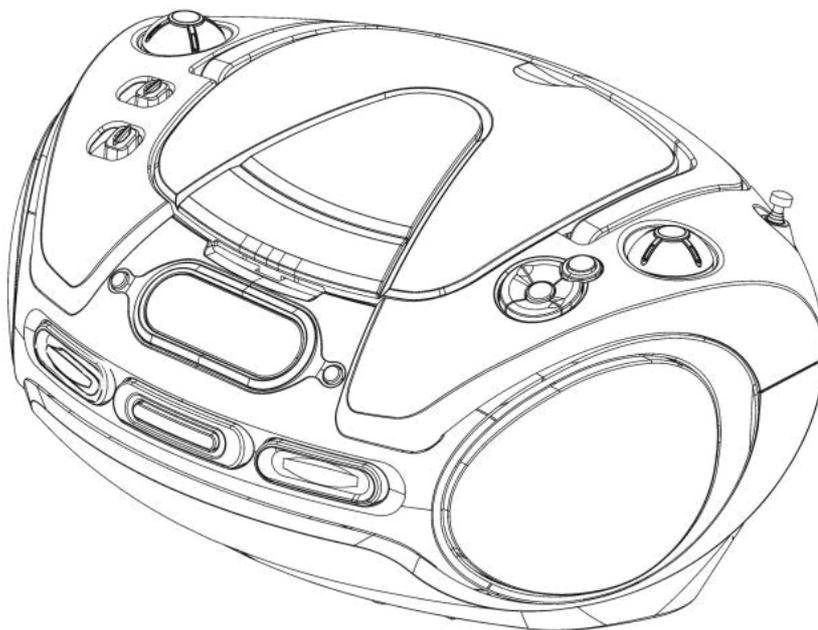

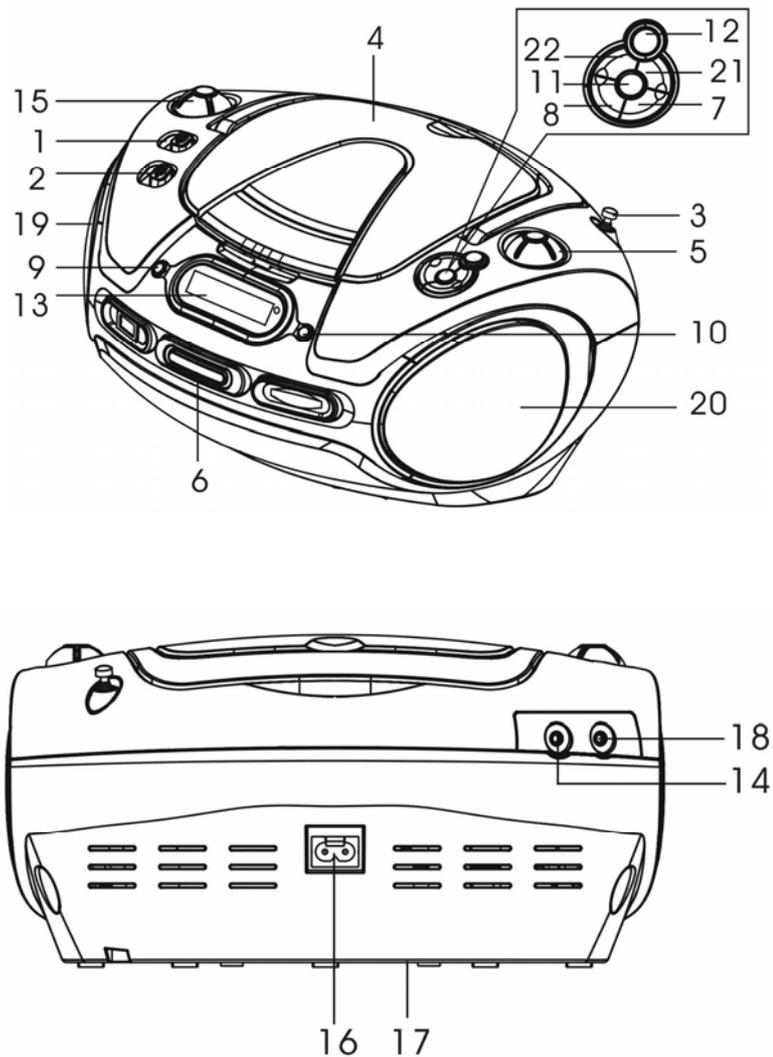

- | | |
|--|----------------------------|
| 1. FUNCTION SWITCH
AUX/CD/OFF/RADIO | 11. CD STOP BUTTON |
| 2. BAND SWITCH | 12. CD PLAY/PAUSE BUTTON |
| 3. FM ANTENNA | 13. LCD DISPLAY |
| 4. CD DOOR | 14. STEREO HEADPHONE JACK |
| 5. TUNING KNOB | 15. VOLUME CONTROL KNOB |
| 6. BASS BOOST BUTTON | 16. AC SOCKET |
| 7. CD SKIP/SEARCH FORWARD
BUTTON | 17. BATTERY DOOR |
| 8. CD SKIP/SEARCH BACKWARD
BUTTON | 18. AUX IN JACK |
| 9. CD PROGRAM BUTTON | 19. SPEAKER LEFT |
| 10. CD MODE BUTTON | 20. SPEAKER RIGHT |
| | 21. FOLDER UP BUTTON "+" |
| | 22. FOLDER DOWN BUTTON "-" |

AC OPERATION

Before operation please ensure that the voltage on the set corresponds to the voltage of your local area. Unravel the AC Line Cord. Insert one end into AC jack on the set and the other end into a standard AC outlet.

Remarks: 1) In case of malfunction due to electrostatic discharge (ESD), reset the unit by reconnecting the AC cord again to resume to normal operation.

2) When not in use – Unplug the AC power cord completely from the AC power socket.

BATTERY OPERATION

Disconnect the AC Cord Set completely. Open the BATTERY DOOR and insert UM-2/ "C" size x 8 batteries (not supplied) making sure that the indicated battery polarity is observed.

When not in use – Remove all the batteries if the unit will not be used for several months or more.

 
RADIO OPERATION

Slide the FUNCTION SWITCH to the "RADIO" position. Slide the BAND SWITCH to the desired waveband. Turn the TUNING KNOB to your desired radio station. Adjust the sound level by rotating the VOLUME CONTROL KNOB. To turn off the radio, simply slide the FUNCTION SWITCH to "OFF" position.

Note: Radio frequency is shown on the LCD DISPLAY.

FM STEREO INDICATOR

When tuned to a FM Stereo broadcast the FM stereo indicator ((**ST**)) will light up. In weak signal areas the FM Stereo signal may not be strong enough and can cause excessive background noise. In this case, slide the BAND SWITCH to "FM" position.



ANTENNAS

For best reception, fully extend the FM ANTENNA to receive FM stations. For AM reception, the unit has a built-in antenna, turn the whole unit for best reception.

BASS BOOST

For increased bass at all volume levels, push the BASS BOOST BUTTON to "ON" position to boost the low frequency tone for an emphasized bass sound. To release the super bass, simply push the button again.

AUXILIARY (AUX) MODE

1. Slide the FUNCTION SWITCH to the "AUX" position.
2. Connect the earphone socket from the Auxiliary unit (e.g. MP3 player or MD player) into AUX-IN jack on the rear of this product via an Audio Line Cord (3.5mm plug on both ends; not supplied).
3. Play the Auxiliary unit. Music from the Auxiliary unit can be listened through the speaker of this product.

STEREO HEADPHONE JACK

For private listening, insert the plug of a Stereo Headphone into the STEREO HEADPHONE JACK and adjust the VOLUME CONTROL KNOB accordingly. During the use of a headphone, the Speakers are automatically disconnected.

CD OPERATION

PLAYING COMPACT DISC (CD-R/RW PLAYBACK COMPATIBLE)

Getting Started


Note: Should skipping of tracks occur during CD playing try reduce the volume.

When CD is playing do not open the CD DOOR.

1. Open the CD DOOR by pulling up the CD DOOR. Put a CD disc into the CD Compartment and close the CD DOOR. Set the FUNCTION SWITCH to "CD" position.


Note: Ensure the CD DOOR is closed properly and locked in place.

2. When the CD DOOR is closed with a CD inside, total number of the tracks in the disc will be shown on the CD LCD DISPLAY and will go to stop mode. (ex. Total 17 tracks inside the disc). The "DISC" indicator will always be shown on the LCD DISPLAY.
3. If there is no disc inside, the LCD DISPLAY will show "NO" and go to stop mode.
4. If the CD DOOR is not closed, the DISPLAY will show " - - - ".

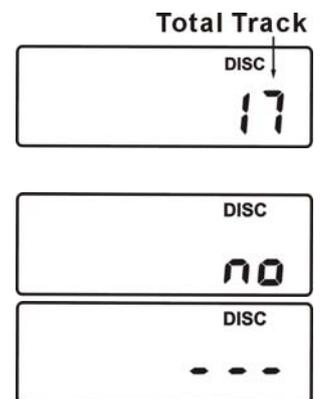


Play/Pause Mode

1. When the PLAY/PAUSE BUTTON is pressed during CD stop mode, the first track will be played. The Play Indicator " ▶ " will be shown on the LCD DISPLAY. The CD LCD DISPLAY will show the specific number of track being played.

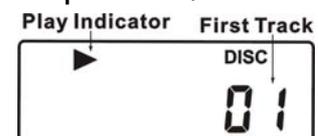

- For interruption while the CD is playing, press the CD PLAY/PAUSE BUTTON once. The Play Indicator "▶" will blink continuously on the LCD DISPLAY.
- Though the sound stops, the disc will continue to spin. To resume playback, press the CD PLAY/PAUSE BUTTON once again. The music will start from the exact position where it was interrupted.
- To stop the CD, press the CD STOP BUTTON once whether the CD is in Play or Pause mode. The LCD DISPLAY will show the total number of tracks of the disc again.
- To turn off the unit, slide the FUNCTION SWITCH to "OFF" position.

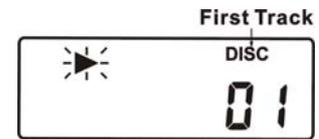


Skip and Search Mode

- During play or pause mode, when CD SKIP/SEARCH ►► or CD SKIP/SEARCH ◄◄ BUTTON is pressed once, it will go to the next track or go back to the beginning of the track.
- During play mode, when CD SKIP/SEARCH ►► or CD SKIP/SEARCH ◄◄ BUTTON is pressed and held, it will search the track with audible high-speed forward or backward playback.

Repeat Mode

- Repeat 1:

When the MODE BUTTON is pressed once, the Repeat Indicator "REP:" will be shown on the LCD DISPLAY. This single track of music will be repeated.

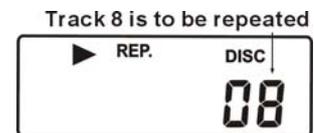

- Repeat All:

When the MODE BUTTON is pressed twice, the Repeat All Indicator "◀REP▶" will be shown on the LCD DISPLAY. The whole disc can be played continuously.



 
- To cancel the Repeat Function

Press the MODE BUTTON repeatedly until the Repeat Indicator disappears from the LCD DISPLAY.

Random Play Mode

This feature allows the track on the disc to be played in a random order.

- During the CD stop mode, press the MODE BUTTON three times, the "RANDOM" indicator will be shown on the LCD DISPLAY and all music will be played in random order automatically.



- To cancel the random play function, press the MODE BUTTON again, "RANDOM" Indicator will disappear from the LCD DISPLAY.

 
Program Mode

1. During the CD stop mode, press the PROGRAM BUTTON once. The "PROGRAM" indicator and the number of Program to be memorized starts from the first program "P01" will light up and blink continuously. Press the CD SKIP/SEARCH ►► or SKIP/SEARCH ◄◄ BUTTON to your desired musical track, the LCD DISPLAY will show the appropriate track number. Press the PROGRAM BUTTON to store this track in memory.
2. Repeat above procedure until all desired tracks have been programmed. A total of 20 tracks can be stored in memory.




Remarks:

Whenever CD SKIP/SEARCH FORWARD or BACKWARD BUTTON is pressed, it will always show the last programmed track first to recall your memory. After complete programming, LCD DISPLAY will show "PROGRAM_ _ _" and flash continuously.



3. Press the CD PLAY/PAUSE BUTTON once to start the program playback and the CD Play Indicator "▶" will light up.
4. To check the program you have stored after complete programming, press the PROGRAM BUTTON once during CD stop mode, then press the CD SKIP/SEARCH FORWARD BUTTON once, the LCD DISPLAY will show the first programmed track number. Repeat above procedure to read all the programmed memory.
5. To cancel the programmed memory:
 - During the CD stop mode, press the CD STOP BUTTON once.
 - OR
 - Open the CD DOOR during the CD stop mode.The Program Indicator will disappear from the LCD DISPLAY.

 

PLAYING MP3 DISC

Getting Started


Note: Should skipping of tracks occur during MP3 Disc playing try reduce the volume.

When MP3 disc is playing do not open the CD DOOR.

1. Open the CD DOOR by pulling up the CD DOOR. Put a MP3 disc into the CD compartment and close the CD DOOR. Set the FUNCTION SWITCH to "CD" position.

Note: Ensure the CD DOOR is closed properly and locked in place.

- When the CD DOOR is closed with a MP3 disc inside, total number of the tracks in the disc will be shown on the LCD DISPLAY and go to stop mode. The "DISC" indicator will always be shown on the LCD DISPLAY.
- If there is no disc inside, the DISPLAY will show "NO" and go to stop mode.
- If the CD DOOR is not closed, the DISPLAY will show "----".

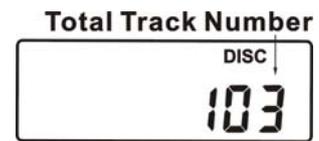

Play/Pause Mode

- When the PLAY/PAUSE BUTTON is pressed during CD stop mode, the first track will be played. The Play Indicator "▶" will be lighted. The "MP3" Indicator will be shown as well to indicate MP3 Disc is being played. The LCD DISPLAY will show the specific track number being played.
- To select the specific musical tracks inside the MP3 Disc. MP3 music can be stored into CD Disc with or without folders according to your "MP3 burning method".



- If the MP3 disc is downloaded without dividing into folder, all track number will be shown directly in the LCD DISPLAY. The Album number will only show "001" after pressing the FOLDER BUTTON.



- If the music is stored into different folders, then you've to select the specific Album number first by pressing the FOLDER UP/DOWN BUTTON; afterwards press the CD SKIP/SEARCH FORWARD or BACKWARD BUTTON to select the specific Track number music inside this Album.

Example: To select Album # 4, track # 3.

STEP – 1: Press the FOLDER UP/DOWN BUTTON to select the Album # 4.



STEP – 2: Press the CD SKIP/SEARCH FORWARD or BACKWARD BUTTON to select the Track # 3 inside this Album # 4.



3. For interruption while MP3 disc is playing, press the CD PLAY/PAUSE BUTTON once. The Play Indicator "▶" will blink continuously on the LCD DISPLAY.
4. Though the sound stops, the disc will continue to spin. To resume playback, press the CD PLAY/PAUSE BUTTON once again. The music will start from the exact position where it was interrupted.
5. To stop the MP3 disc, press the CD STOP BUTTON once whether the MP3 disc is in Play or Pause mode.
6. To turn off the unit, slide the FUNCTION SWITCH to "OFF" position.

Repeat Mode

1. Repeat 1:

When the MODE BUTTON is pressed once, the Repeat Indicator "**REP.**" will light. This single track of music will be repeated.



2. Repeat Folder:

When the MODE BUTTON is pressed twice, the "**REP.**" and "**ALBUM**" indicators will be shown. This specific folder will be played repeatedly.



Remarks: The folder number and the track number will be shown every 2 seconds alternatively.

3. Repeat All:

When the MODE BUTTON is pressed three times, the Repeat All Indicator "**REP.**" will be shown. The whole disc can be played continuously.



4. To cancel the Repeat Function

Press the MODE BUTTON repeatedly until the Repeat Indicator disappears from the LCD DISPLAY.

Random Play Mode

This feature allows the tracks on the disc to be played in a random order.

1. During the CD Stop mode, press the MODE BUTTON four times, the "**RANDOM**" Indicator will show on the LCD DISPLAY and all music will be played in random order automatically.



2. To cancel the Random Play function, press the MODE BUTTON again, "**RANDOM**" Indicator will disappear from the LCD DISPLAY.

Skip and Search

1. During play or pause mode, when CD SKIP/SEARCH ►► or CD SKIP/SEARCH ◀◀ BUTTON is pressed once, it will go to the next track or go back to the beginning of the track.
2. During play mode, when CD SKIP/SEARCH ►► or CD SKIP/SEARCH ◀◀ BUTTON is pressed once and held, it will search the track with audible high speed forward or backward playback.

Program Mode

1. During the CD stop mode, press the PROGRAM BUTTON once. The "PROGRAM" indicator and the number of Program to be memorized starts from the first program "P01" will light up and blink continuously. Press the FOLDER UP/DOWN BUTTON, then press CD SKIP/SEARCH FORWARD or BACKWARD BUTTON to select your desired musical track, CD LCD DISPLAY will show the track number of this specific Album to be programmed. Press the PROGRAM BUTTON to store this track in memory.




2. Repeat above procedure until all desired tracks have been programmed.

Remarks: Whenever the FOLDER UP/DOWN BUTTON is pressed, it will always show the last programmed Album number first to recall your memory.

A total of 20 tracks can be stored in memory. After complete programming, LCD DISPLAY will show "PROGRAM _ _ _" and blink continuously.

3. To start the Programmed playback, press the CD PLAY/PAUSE BUTTON once and the CD Play Indicator "▶", "PROGRAM" and the track number of the specific Album will light up.

Example: Album # 3, Track # 2.

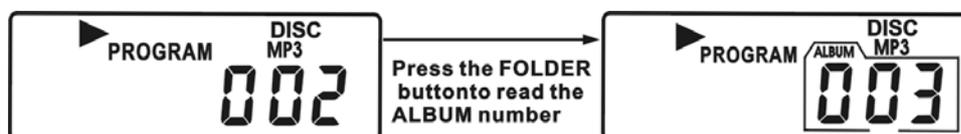

4. To check the program you have stored after complete programming, press the PROGRAM BUTTON once during the CD Stop mode. The LCD DISPLAY will show "P01" and blink continuously. Press the FOLDER UP/DOWN BUTTON to read the Album number, then press the CD SKIP/SEARCH FORWARD or BACKWARD BUTTON to read the specific track number of said Album. Press the PROGRAM BUTTON again, LCD

DISPLAY will show "P02" and blink continuously. Repeat above procedure to check all programs being stored.

5. To cancel the programmed memory:
 - During the CD stop mode, press the CD STOP BUTTON once.OR
 - Open the CD Door during the CD stop mode.The "PROGRAM" Indicator will disappear from the LCD DISPLAY.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER, PILOT LAMPS SOLDERED IN PLACE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>VENTILATION WARNING</p> <p>THE NORMAL VENTILATION OF PRODUCT SHALL NOT BE IMPEDED FOR INTENDED USE</p>		
<p>DRIPPING WARNING</p> <p>THE PRODUCT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE PRODUCT.</p>		

Instructions on environment protection



Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment.

Please inquire at the community administration for the authorized disposal location.