



**OVERVIEW OF THE PLAYER**

1. FOLDING HANDLE
2. FM TELESCOPIC ANTENNA
3. CD DOOR
4. CD DOOR OPEN AREA
5. VOLUME - BUTTON
6. PROG/MODE/MEM BUTTON
7. STANDBY INDICATOR
8. SOURCE BUTTON
9. LCD DISPLAY
10. ON/STANDBY BUTTON
11. FOLDER/10+ BUTTON
12. VOLUME + BUTTON
13. SPEAKERS
14. STOP/CH- BUTTON
15. SKIP/SEARCH DOWN BUTTON
16. USB PORT
17. SKIP/SEARCH UP BUTTON
18. PLAY/PAUSE/CH+ BUTTON
19. BATTERY COMPARTMENT
20. DC IN JACK
21. PHONE JACK
22. AUX IN JACK

**POWER SUPPLY**

**❑ BATTERY OPERATION**

1. Remove the battery compartment cover gently.
2. Install 6 x 'C' size batteries (UM-2 or equivalent) while observing the correct polarities.
3. Replace the battery compartment cover.

**NOTE:**

- The AC/DC adapter must be detached from the DC IN jack of the player for battery operation.
- Leaking batteries may damage the battery cabinet and the player as a whole, so they should be removed from the cabinet when becoming flat or when the player is not to be played on batteries for some time.

**❑ DC INPUT OPERATION**

Plug the supplied adapter to the DC IN jack on the unit and the main power

**NOTE:** If not any audio signal inputs to the unit in about one hour, the unit will enter to standby mode automatically (except at FM radio mode).

## FM RADIO

### TUNING THE FM RADIO

1. The standby indicator will light once connect the main unit to the main power. Press the ON/STANDBY button to turn the unit on (the standby indicator will be off).
2. Press the SOURCE button repeatedly to switch the unit to the FM radio mode.
3. To launch the auto-searching, press and hold the SKIP/SEARCH DOWN button or SKIP/SEARCH UP button several seconds and then release it.
4. Press the SKIP/SEARCH DOWN button or SKIP/SEARCH UP button to tune the radio stations manually.
5. Adjust the volume level to a comfortable listening level via pressing the VOLUME +/- buttons.
6. Press the ON/STANDBY button to turn off the unit.

#### NOTE:

- The FM TELESCOPIC ANTENNA is directional. When you are receiving an FM broadcast, fully extend the TELESCOPIC ANTENNA and rotate it for the best reception.

### STORING YOUR FAVORITE RADIO STATION

1. Tune to your favorite station first; press the PROG/MODE/MEM button for storing the current station until memory cell number flashes on the screen.
2. Use the STOP/CH- button or the PLAY/PAUSE/CH+ button to select the corresponding memory cell.
3. Confirm your selection by pressing the PROG/MODE/MEM button.
4. During radio playback, press the STOP/CH- button or the PLAY/PAUSE/CH+ button repeatedly to recall the preset stations.

## CD

1. Open the CD door by the Door open area.
2. Load a disc on the disc tray with the label side facing up.
3. Close the CD door.

### PLAY A DISC (CD/MP3)

1. Press the ON/STANDBY button to turn the unit on (the standby indicator will be off).
2. Press the SOURCE button repeatedly to switch to CD mode.
3. Follow the steps above to load a disc.
4. The player begins reading disc immediately.
5. When the disc is successfully read, the playback will start from the first track automatically.
6. Press the PLAY/PAUSE/CH+ button once to halt music playback, press the button again to resume the normal playback; press the STOP/CH- button to cease music playback.

### EXTERNAL MEMORY MEDIA OPERATION (USB)

1. Press the ON/STANDBY button to turn the unit on (the standby indicator will be off).
2. Insert an USB to the USB port.
3. Press the SOURCE button repeatedly to switch to USB mode.
4. When the inserted USB is detected and read, the first track will be played automatically.
5. Press the PLAY/PAUSE/CH+ button to pause or resume the playback.
6. Press the STOP/CH- button to cease the playback.

### SKIP TRACKS AND SEARCH FOR A SPECIFIC POINT TO PLAY (CD/MP3/USB)

1. Press once the SKIP/SEARCH UP button in music play to skip to the next track; press once the SKIP/SEARCH DOWN button in music play to go back to beginning of the current track, press the button twice continuously to skip to the previous track.
2. Press and hold the SKIP/SEARCH UP button or the SKIP/SEARCH DOWN button in music play to search at quick rate for a specific point to play.
3. Press the FOLDER/10+ button once in play to skip to the track 10 tracks ahead, twice to skip to the track 20 tracks ahead. You can reach the last track of the disc using this button.

### SKIP TO THE PREVIOUS/NEXT FOLDER (MP3/USB)

1. During playback, press and hold the FOLDER/10+ button until the folder number flashes on the screen.
2. Press the SKIP/SEARCH DOWN button or SKIP/SEARCH UP button to select the folder you want.
3. Once the selected folder number shows on the screen, press the FOLDER/10+ button to confirm.

### REPEAT PLAYBACK (CD/MP3/USB)

During playback, press the PROG/MODE/MEM button to repeat play a single track; press the button twice to repeat play all tracks; press the button three times to enter the introduction play mode; press the button four times to enter the random play mode; press the button five times to exit.

**PROGRAMMED PLAY (CD/MP3 DISC/USB)**

1. At stop mode, press the PROG/MODE/MEM button once, the program's icon shows with a program sequence indication "P01" first, then a track number flickers on the LCD with the program's icon.
2. Select the first track to be programmed using the SKIP/SEARCH UP button or the SKIP/SEARCH DOWN button, and then press the PROG/MODE/MEM button again to store and advance to the next programming step (If there are several folders on the MP3 disc or USB, it is necessary to program folders first and then the tracks. The method of the folders programming is the same as the tracks programming.).
3. Repeat the above steps to program more tracks. A maximum of 20 tracks for CD and 99 tracks for MP3 disc/USB can be programmed in memory in a preferred order. If the memory is full, the screen will show "FUL" for indicating.
4. Press the PLAY/PAUSE/CH+ button to begin programmed play in the preferred order after you are done with programming. The player stops automatically after all programmed tracks are played.
5. You may press the STOP/CH- button to terminate programmed playback. In program stop mode, press the PLAY/PAUSE/CH+ button to begin the programmed playback with the programming order identical with the previous one done; press the STOP/CH- button again to clear the programming.

**AUX IN**

1. Connect the Aux in jack on the unit to an audio source, for example, MP3 player with an audio cable.
2. Power on the unit following the corresponding instructions.
3. Press the SOURCE button repeatedly to switch to AUX mode.
4. Use the native controls on the connected audio device to begin playing music through the connected unit.

**STEREO PHONE JACK**

A stereo phone jack has been provided on the back side of the player so that you can listen without disturbing others. To use this jack, plug in the headphones/earphones (NOT INCLUDED) and adjust the volume level to a preferred level.

**NOTE:** When external headphones/earphones are connected, the speakers will be muted.

**CAUTION:** Listening at high power for a long moment could damage users' ears.

**SPECIFICATIONS**

Power supply:	DC 9V 1A (external adaptor)
Batteries:	DC 9V (6 x 1.5V (UM-2/C size, not included))
Radio frequency range:	FM 87.5 - 108 MHz
Dimensions (WxDxH):	232 x 228 x 113 mm

**Importer**

Wörlein GmbH  
Gewerbestr. 12  
D 90556 Cadolzburg  
GERMANY

Tel.: +49 9103 71 67 0  
Fax.: +49 9103 71 67 12  
Email: [service@woerlein.com](mailto:service@woerlein.com)  
Web: [www.woerlein.com](http://www.woerlein.com)

Specifications are subject to change without further notice.  
Copyright by Wörlein GmbH, D 90556 Cadolzburg.

