


 soundmaster®

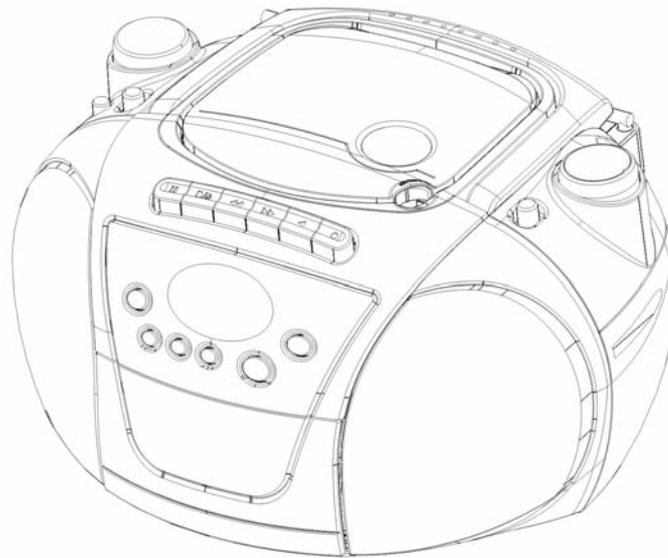

**DEUTSCH**

**FRANÇAIS**

**ROMÂNĂ**

**EESTI**

**ESPAÑOL**



**ENGLISH**

**NEDERLANDS**

**LIETUVIŠKAI**

**LATVIEŠU**

**SCD 5400 / 5401 / 5402**

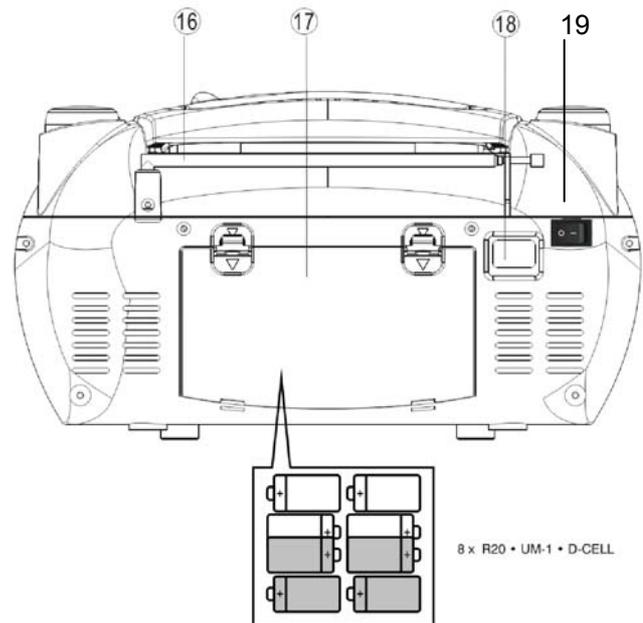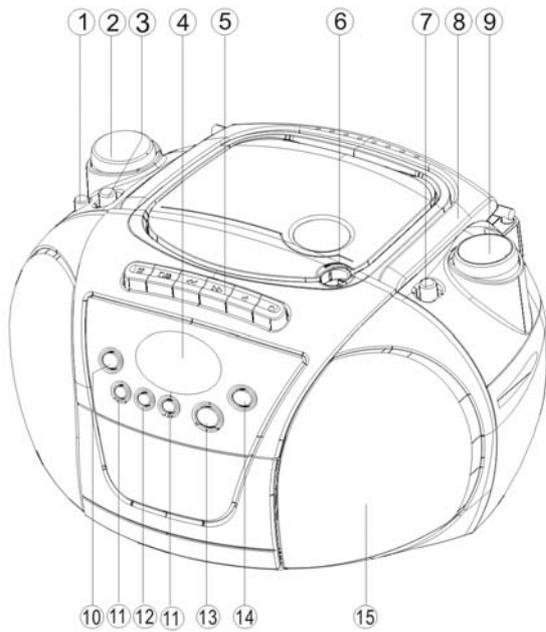

1. DBBS Bass Boost
2. Function Selector
3. Volume
4. Display
5. Cassette Recorder Keys
6. CD Door
7. Band Selector FM-ST/FM/AM
8. Handle
9. Tuning Control
10. CD Program

11. CD Skip/Search back-/forward |<< >>|
12. CD Stop
13. CD Play/Pause
14. CD repeat one/all
15. Speakers
16. FM Telescopic Antenna
17. Battery Compartment
18. AC Mains
19. Main power switch ON/OFF

**Specification:**

FM Frequency	87,5 – 108 MHz
AM Frequency	540 – 1600 KHz
Power Consumption	15 W
AC Power Supply	AC 230V / 50Hz
DC Power Supply	8x 1,5V Type UM-1/D

**Power Supply**

**AC Operation**

Before operation please ensure VOLTAGE on the set corresponds to VOLTAGE of your local area. Unravel AC Line Cord, insert one end into AC jack on the set and the other end into a standard AC outlet.

**Battery Operation (Batteries not incl.)**

Disconnect AC Cord Set completely. Open the Battery Compartment (17) and insert 8x R20/UM-1 "D" size batteries making sure the indicated battery polarity is observed.

- Do not mix old and new batteries, or different types of batteries.
- Always remove the batteries to prevent damage if there is a battery leakage.

**Volume and DBBS**

Adjust the sound with the Volume (3) and DBBS (1) controls.

**Headphone operation: (Headphone not incl.)**

Connect a headphone into the headphone jack (3.5mm Klinke). The sound output will be cut automatically.

## **Radio Operation**

1. Switch the main power switch (19) to ON position
  2. Slide the Function selector (2) to RADIO
  3. Slide the Band selector (7) to a desired setting FM-ST/FM/AM
  4. Rotate the Tuning control (9) to find the desired stations
  5. When you finish listening, switch the main power switch (19) to OFF position
- **FM operation:** Pull out the telescopic antenna. Incline and turn the antenna. Reduce its length if the signal is too strong.
  - **AM operation:** The item is provided with a built-in antenna. Direct the antenna by turning the whole set.

## **Cassette Operation**


1. Switch the main power switch (19) to ON position
2. Slide the Function Selector (2) to TAPE
3. Press STOP/EJECT ■ (5) to open the cassette door
4. Press PLAY ◀ (5) to start playback
5. To interrupt playback press || (5). To resume, press the key again
6. By pressing |<< or >>| on the set, fast winding of the tape is possible in both directions
7. To Stop the tape, press STOP/EJECT ■ (5)
8. When you finish listening, switch the main power switch (19) to OFF position

## **Recording from the radio**

1. Slide the Function Selector (2) to RADIO
2. Tune to the desired radio station
3. Insert a suitable cassette into the cassette deck
4. Press RECORD ● (5) to start recording
5. For brief interruptions, press PAUSE || (5). To resume press PAUSE again
6. To stop recording, press STOP/EJECT ■ (5)

## **Tape deck maintenance**

To ensure quality recording and playback of the tape deck, clean parts A, B and C shown in the diagram beside, after approx. 50 hours of operation. Use a soft cloth slightly moistened with alcohol or a special head cleaning fluid to clean the deck.

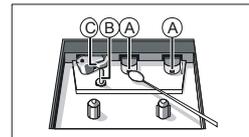

## **CD Operation**

1. Switch the main power switch (19) to ON position
2. Slide the Function Selector (2) to CD
3. Open the CD door (6) and insert a CD/-R/-RW with the printed side facing up and close the CD door
4. Press PLAY/PAUSE on the set to start playback
5. Press >>| (11) once briefly for the next track, or press repeatedly until the desired track number appears in the display
6. Press |<< (11) once briefly to return to the beginning of a current track
7. Press |<< (11) more than once briefly for a previous track
8. To pause playback press PLAY/PAUSE (13) again
9. To stop CD playback, press STOP (12)
10. When you finish listening, switch the main power switch (19) to OFF position

## **CD repeat**

Press 1x REPEAT (14) to repeat the current track

Press 2x REPEAT (14) to repeat all tracks

Press 3x REPEAT (14) to cancel the function

## **Programming CD track numbers**

1. In Stop mode press PROG (10), display shows „PROG“
2. Press |<< >>| (11) for select your desired track
3. When your chosen track number appears, press PROG (10) once to store the track. The display shows prog and prog briefly followed by your selected track number
4. Repeat steps 2 and 3 to select and store all desired tracks in this way
5. To play your program, press PLAY/PAUSE (13) button
6. To erase a program, press twice STOP (12) button