

ENVIRONMENTAL PROTECTION



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.

	WARNING Risk of electric shock Do not open!	
Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.		



This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.



This symbol indicates the presence of important operating and maintenance instructions for the device



Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are legally obligated to return all batteries for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*)

Return batteries free of charge to public collection points in your community or shops selling batteries of the respective kind.

Only return fully discharged batteries

*) marked Cd = cadmium, Hg = mercury, Pb = lead

- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!!
- Keep batteries away from children. Children might swallow batteries.
- Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION: Danger of explosion if battery is incorrectly replaced
- Replace only with the same or equivalent type

	CAUTION - INVISIBLE LASER RADIATION WHEN OPENING THE COVER OR PRESSING THE SAFETY INTERLOCK. AVOID EXPOSURE TO THE LASER BEAM.
--	---






To prevent possible hearing damage, do not listen at high volume levels for long periods

- Use the device in dry indoor environments only.
- Protect the device from humidity.
- This apparatus is for moderate climates areas use, not suitable for use in tropical climates countries.

- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug or an appliance coupler is used as the disconnect device, the disconnect devices shall remain readily operable.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
- Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- When you are necessary to ship the unit store it in its original package. Save the package for this purpose.
- In case of malfunction due to electrostatic discharge or fast transient (burst), remove and reconnect the power supply.
- If the unit is not using for a long period of time, disconnect it from the power supply by unplugging the power plug. This is to avoid the risk of fire.

LOCATION OF CONTROLS

1. Volume knob
2. Handle
3. CD Door
4. FM antenna
5. Tuning knob
6. Function switch (CD/TAPE.OFF/FM/FM.ST)
7. 3.5mm Headphone jack
8. **||** PAUSE (Cassette)
9. **■** / **▲** STOP/EJECT (Cassette)
10. **◀◀** "F.FWD" Button (Cassette)
11. **▶▶** "F REW" Button (Cassette)
12. **▶** PLAY Button (Cassette)
13. "REP" - CD-repeat
14. **■** STOP (CD)
15. Skip previous **◀◀** (CD)
16. Cassette compartment
17. LCD display
18. Skip next **▶▶** (CD)
19. **▶||** , PLAY/PAUSE (CD)
20. "PROG". - CD Program
21. Battery compartment
22. AC socket
23. AC cord (Included)

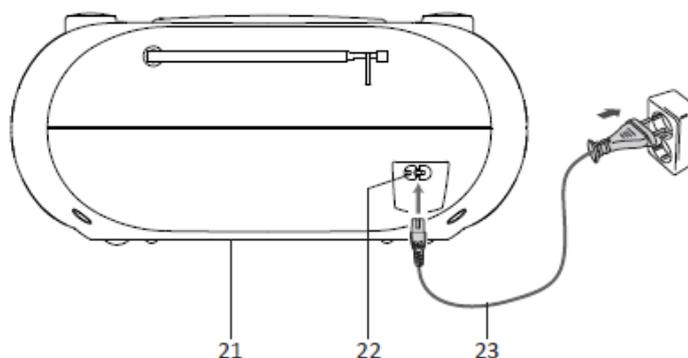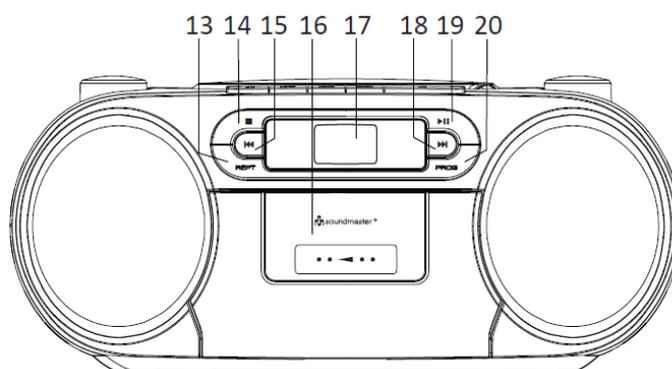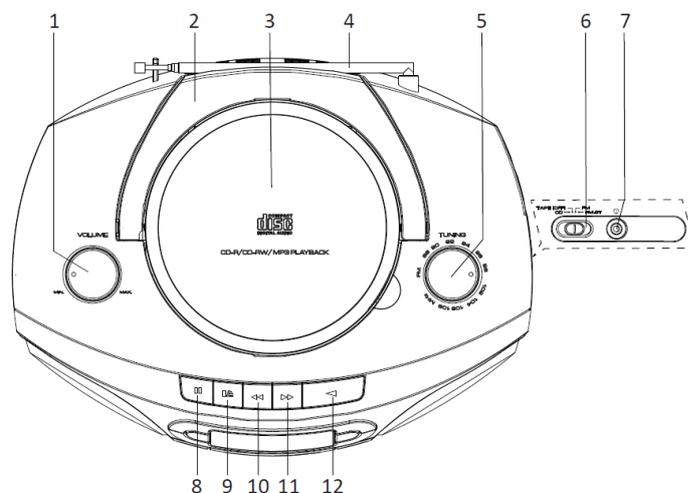

CONNECT POWER

This unit is supplied with an AC mains cable.

1. Make sure that the power supply voltage is the same as needed for the appliance.
2. To connect the power insert the mains cable figure eight plug into the AC socket at the rear of unit.
3. Insert the VDE plug into a household power socket and switch the power ON .


BATTERY installation:

1. Remove the battery compartment cover carefully.
2. Install 6 x “C” size batteries (UM-2 or equivalent) while observing the correct polarities.



: There is an engraved diagram showing battery installation directions inside the battery compartment.

3. Replace the battery compartment cover.

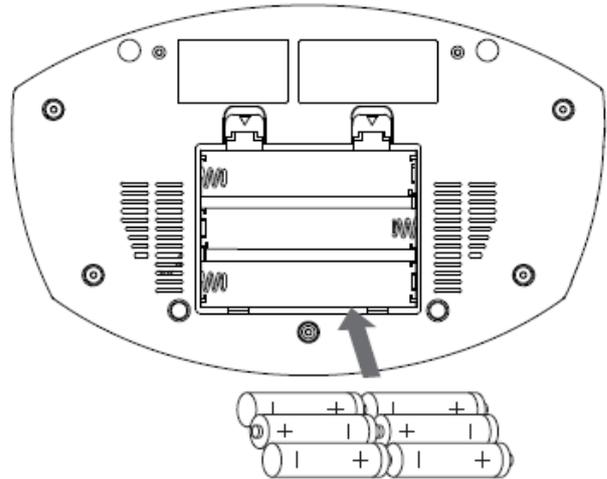

: Only adults should handle the batteries.

Do not allow a child to use this product unless the battery cover is securely attached to the battery compartment.

The mains cable must be detached from the AC mains socket of the player for the batteries to power the unit.

Leaking batteries may damage the battery cabinet and the player as a whole, so they should be removed from the cabinet when becoming flat or when the player is not to be used with batteries for some time.

POWER/ Unit Standby

Follow the below steps to power the unit off or enter standby mode.

1. To switch the unit on, slide the FUNCTION selector in CD, FM/FM Stereo position or start the tape playback.
2. To switch the unit OFF, slide FUNCTION selector to the TAPE OFF position or stop the tape playback.



AUTO STANDBY

Due to new ErP 2 regulation, this product incorporates a power saving feature. When in CD mode once audio playback has ceased and the unit has stood idle for approximately 15-20 minutes, it will switch into a “power-down” power saving mode.

THIS IS NOT A MAL-FUNCTION.

To wake the unit up, press the ►|| button.

VOLUME CONTROL

1. To increase the volume level rotate the “VOLUME” knob clockwise.
2. To decrease the volume level rotate the “VOLUME” control Anti-clockwise.

CD OPERATION

Load a CD

1. Lift up the CD door.
2. Load a CD DISC onto the CD tray with the label facing upwards.
3. Close the CD door.

Playing a CD


1. Slide the "FUNCTION" switch to the CD position.
2. Follow the steps above to load a disc (if not loaded).
3. The player begins to read the disc immediately.
4. When the disc is successfully read the total number of tracks found on the disc will be displayed.
5. Press the ►|| button once to begin playback. Press again to pause the music playback, the playing symbol flashes on the display to indicate the player is in pause mode. Pressing the ►|| button resumes playback.
6. Press the ■ "STOP" button to cease music playback. The display shows the total number of tracks again.

Skip & search tracks

1. Press the ►► button once during playback to skip to the next track. To skip to a specific track ahead, press this button several times until you reach the track number required.
2. Press the ◀◀ button once during playback to return to the beginning of the current track. Press the ◀◀ button twice repeatedly to skip to the previous track. To skip back to a specific track, press this button several times.
3. Hold the ►► button during playback to fast forward the current track.
4. Hold the ◀◀ button during playback to fast rewind the current track.

Repeat playback

1. During playback of a CD, press the "REP" button once to repeat the single track. The "REPEAT 1" indicator will illuminate.
2. Press the "REP" button twice to repeat the whole disc. The "REPEAT ALL" indicator will illuminate.
3. To return to normal playback, press the REP button repeatedly until the "REPEAT" indicator disappears.

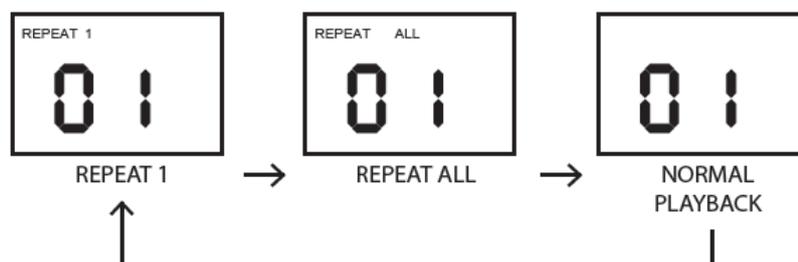

Programmed playback

To program an alternative playback order of tracks follow the below steps.

1. Make sure the unit is not playing a disc.
2. Press and hold the "PROG" button to activate programming. "00" and "PROG" indicators will flash on the display.
3. Select the first track to be programmed using either ◀◀ or ▶▶ button.
4. Press the "PROG" button again to store and advance to the next programmed track. The program sequence indication changes to "02" momentarily waiting for your next input.
5. Repeat the steps above to program more tracks. A maximum of 20 CD tracks can be programmed.
6. Press the ▶|| button to begin the programmed playback in the preferred order.
7. You can press the ■ "STOP" button to terminate programmed playback.
8. To erasing a program, during stop mode press ■ "STOP2 button twice or open the CD door.

CASSETTE PLAYER

Cassette playback

1. Adjust the "FUNCTION" selector to "TAPE.OFF"
2. Press the cassette knob ■▲ button to open the cassette door, insert a cassette tape then close the compartment door.
3. Press cassette knob ◀ button to start playback.
4. To pause playback, press the cassette knob || button. To resume, press the button again.
5. To stop the tape, press the cassette knob ■▲ button.

Cassette tape Forwarding / Rewinding

1. Press the cassette knob ◀◀ "F.FWD" button / ▶▶ "F. REW" buttons until you reach your desired passage.
2. Press the cassette knob ■▲ button to stop fast forwarding/rewinding.

Remark:

1. Please note the tape playback direction symbol on cassette door.
2. During fast forwarding/rewinding, the buttons will not be released at the end of a cassette.
3. To switch off the unit, make sure the cassette buttons are all released by pressing the cassette knob ■▲ button.



FM RADIO OPERATION

1. Slide the "FUNCTION" switch to the "FM" (mono) or "FM.ST" (Stereo).
2. Extend the antenna fully and adjust the angle for best reception.
3. Tune to the required station using the "TUNING" knob.
4. When the FM – Stereo reception is disturbed slide the switch to FM.

USING EARPHONES

Turn down the volume before connecting the earphones (not included).
When the earphones are connected, the speaker is automatically disabled (MUTE).
Slowly raise the volume with the earphones in until you reach your desired volume.

Earphones or headphones must comply with European regulation to ensure continue protection from excessive sound pressure. Don't listen with earphone with high volume over long time.

TROUBLE SHOOTING

FAQ	Possible Cause
No power	Make sure the plug is connected and switch the power on.
No Sound CD /FM	Increase the volume Disconnect earphone cable
Sound is distorted	Reduce the volume
Unable to play	Insert a compatible disc check the disc loaded Clean the disc
Static Sound (TUNER)	Re-locate the antenna (FM); switch to FM Mono
Unit switched off after 15-20 minutes of inactivity	This unit is designed to enter STANDBY mode automatically after 20 MINUTES of inactivity. Press the PLAY/PAUSE button to wake the unit.
Poor cassette sound quality	Dust and dirt on the heads, etc. Clean deck parts.

TECHNICAL SPECIFICATIONS

Output Power	2x1.5W RMS
Support Disc	CD,CD-R,CD-RW
FM frequency	87,5 - 108 MHz
AC Power	AC 230V~50Hz
DC Power	9V  6x LR14/C (1.5V)
Operation power Consumption	14W
Standby power Consumption	< 0,5 W

IMPORTER

Wörlein GmbH	Tel.:	+49 9103 71 67 0
Gewerbestr. 12	Fax.:	+49 9103 71 67 12
D 90556 Cadolzburg	Email:	service@woerlein.com
Germany	Web:	www.woerlein.com

Technische Änderungen und Druckfehler vorbehalten

Copyright by Woerlein GmbH, 90556 Cadolzburg, www.woerlein.com

Vervielfältigung nur mit ausdrücklicher Genehmigung der Woerlein GmbH

