

 soundmaster®




**DEUTSCH  
ENGLISH  
FRANÇAIS**

**NEDERLANDS**

**ESPAÑOL**

**SCD 5650**

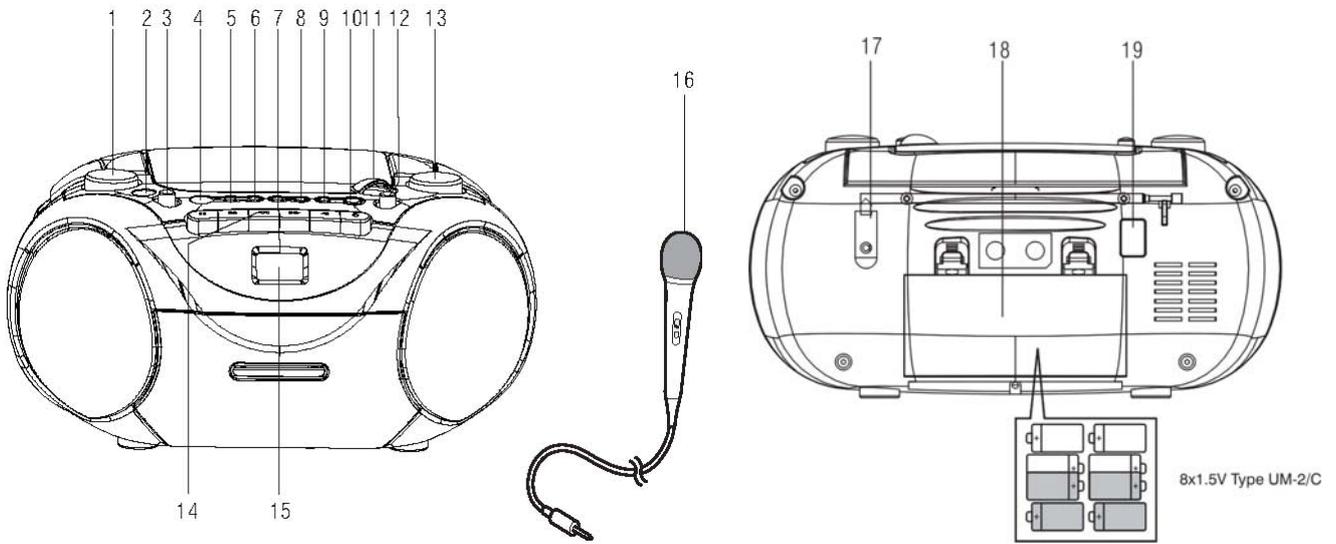

1. Volume
2. Headphone jack
3. Function selector
4. Microphone jack
5. CD Program
6. CD Repeat
7. CD SKIP backwards |<<
8. CD SKIP forward >>|
9. CD STOP
10. CD PLAY/Pause ► ||

11. CD compartment
12. Band switch FM/FM-ST
13. Tuning control
14. Cassette recorder keys
15. LCD display
16. Microphone
17. FM telescopic antenna
18. Battery compartment
19. AC mains

**Power Supply**

Check if the power voltage, as shown on the type plate located on the bottom of the set, corresponds to your local AC power supply. Connect the power cord to the AC MAINS inlet and the wall outlet. Set the main-power switch (20) to position "I". The power supply is now connected and ready for use.

**Batteries (not incl.)**

Open the battery compartment and insert 8x 1,5V UM-2/C Batteries with the correct polarity as indicated by the + and – symbols inside the compartment.

Do not mix battery types: e.g. alkaline with carbon zing. Only use batteries of the same type for the set. When inserting new batteries, do not try to mix old batteries with the new ones. Remove the batteries if the set is not to be used for a long time.

**Economic Standby mode**

If the unit is idle for 15 minutes, it will automatically switch to STANDBY mode. Press the >|| **PLAY/PAUSE** button to resume.

**Volume**

Adjust the sound with the Volume switch

**Microphone**

1. Slide the **FUNCTION** selector to (CD, MIC, TAPE , RADIO) position. *Note: In TAPE mode, the mic function operate, with playing tape.*
2. Insert the microphone plugs into Mic jack, and then the microphones can be connecting.
3. Rotate the **VOLUME** button to adjust sound

**Radio**

1. Slide the FUNCTION selector to RADIO
  2. Slide the BAND selector to FM STEREO; FM
  3. Rotate the TUNING control to find the desired stations
- **For FM:** pull out the telescopic antenna. Incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter)

**Cassette**

1. Select Tape source
2. Press STOP EJECT to open the cassette door
3. Insert a recorded cassette and close the cassette door
4. Press PLAY to start playback
5. To interrupt playback, press PAUSE. To resume, press the key again
6. By pressing |<< or >>| on the set, fast winding of the tape is possible in both directions#
7. To Stop the tape, press STOP EJECT

**Recording from the radio**

1. Tune to the desired radio station (see TUNING TO RADIO STATIONS)
2. Press STOP EJECT to open the cassette door
3. Insert a suitable cassette into the cassette deck and close the cassette door.
4. Press RECORD to start recording
5. For brief interruptions, press PAUSE. To resume recording, press PAUSE again.
6. To Stop recording, press STOP EJECT

**Maintenance**

To ensure quality recording and playback of the tape deck, clean record- and audio head after approx. 50 hours of operation, or on average once a month. Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid to clean the deck. Note: Before clean the parts must be sure that no power supply is available.

**CD Player**

1. Adjust the source selector to CD
2. To open the CD door, press the CD door at the edge marked open
3. Insert a CD, CD-R/RW with the printed side facing up and press the CD door gently close
4. Press PLAY/PAUSE on the set to start playback.
5. To pause playback press PLAY/PAUSE, to resume press PLAY/PAUSE again.
6. To stop CD playback, press STOP

**Recording from CD**

1. Press STOP/EJECT button to open the door, insert a cassette and close it.
2. Press RECORD button and CD PLAY/PAUSE button to start the recording
3. To stop the recording, press STOP/EJECT

**CD Repeat**

Press 1 x repeat button: Current track will be repeat  
 Press 2 x repeat button: Complete CD will be repeat  
 Press 3 x repeat button: Will be in normal playback mode

**CD Program (max. 20 Title)**

1. In the STOP mode, press |<< or >>| for your desired track
2. When your chosen track number appears, press PROG once to store the track. The display shows prog and prog briefly followed by your selected track number
3. Repeat steps 1 to 2 to select and store all desired tracks in this way
4. To play your program, press PLAY
5. Erasing a program: Press STOP button twice

**Specifications**

FM Frequency: 87.5 – 108 MHz  
 Power consumption: 15 Watt  
 AC Power Supply: AC 230V~240V, 50Hz  
 DC Power Supply: 8 x 1.5V Type UM-2/C