

 soundmaster®



**DEUTSCH
ENGLISH
FRANÇAIS**

**NEDERLANDS
ESPAÑOL**



SCD 5850MP3

ENVIRONMENTAL PROTECTION



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging.

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

CAUTION - INVISIBLE LASER RADIATION WHEN OPENING THE COVER OR PRESSING THE SAFETY INTERLOCK. AVOID EXPOSURE TO THE LASER BEAM.

	WARNING Risk of electric shock Do not open!	
Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.		



This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.



This symbol indicates the presence of important operating and maintenance instructions for the device.

Safety, Environmental and Setup Instructions

- Use the device in dry indoor environments only.
- Protect the device from humidity.
- Do not open the device. **RISK OF ELECTRIC SHOCK!** Refer opening and servicing to qualified personnel.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- The device is equipped with a "Class 1 Laser". Avoid exposure to the laser beam as this could cause eye injuries.
- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!! Return the batteries to your dealer or to collection points in your community.
- Keep batteries away from children. Children might swallow batteries. Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.




Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are **legally obligated** to return **all batteries** for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*).

Return batteries free of charge to public collection points in your community or to shops selling batteries of the respective kind.

Only return fully discharged batteries.

*) marked Cd = cadmium, Hg = mercury, Pb = lead

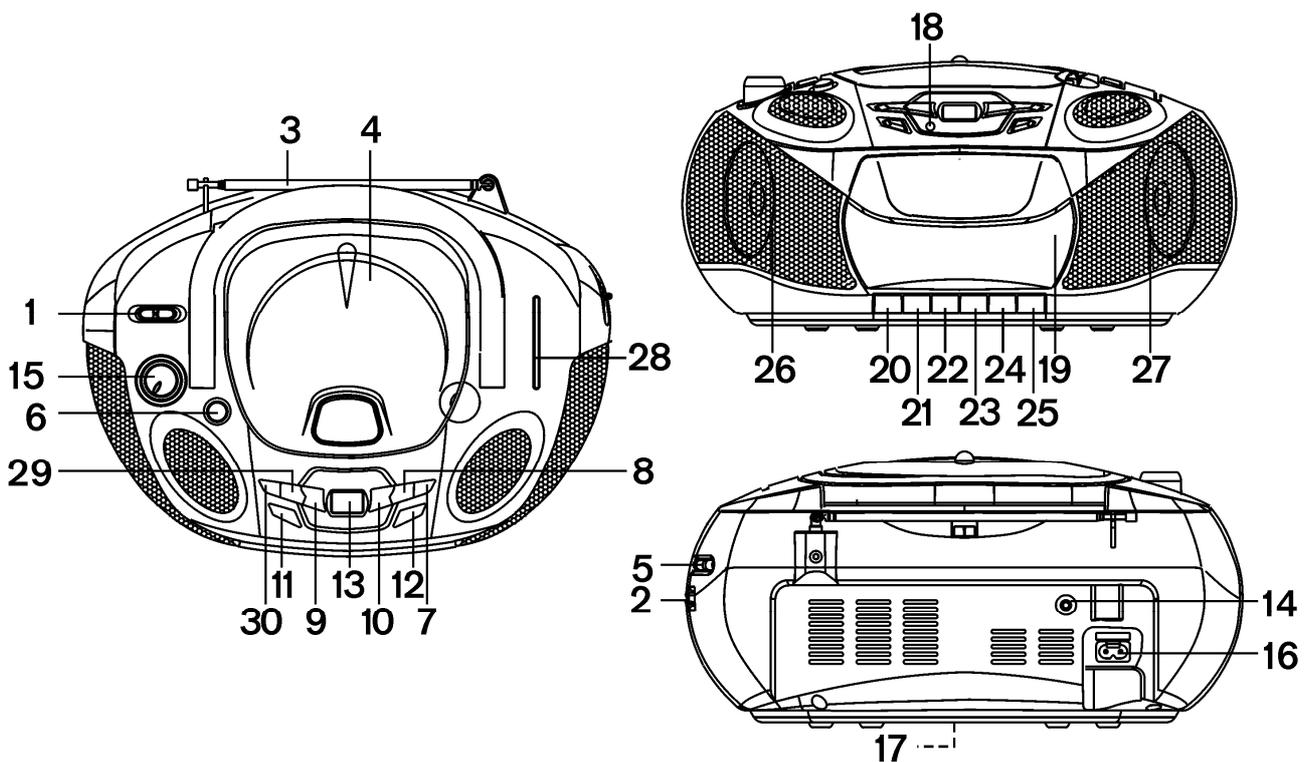

- | | |
|---|-------------------------------------|
| 1. FUNCTION SWITCH
CD/TAPE (OFF)/RADIO | 16. AC SOCKET |
| 2. BAND SWITCH | 17. BATTERY DOOR |
| 3. FM ANTENNA | 18. FM STEREO LED INDICATOR |
| 4. CD DOOR | 19. CASSETTE COMPARTMENT |
| 5. TUNING KNOB | 20. NO FUNCTION |
| 6. BASS BOOST BUTTON | 21. CASSETTE PLAY BUTTON |
| 7. CD SKIP/SEARCH FORWARD
BUTTON ►► | 22. CASSETTE REWIND BUTTON |
| 8. CD SKIP/SEARCH BACKWARD
BUTTON ◀◀ | 23. CASSETTE FAST FORWARD
BUTTON |
| 9. CD PROGRAM BUTTON | 24. CASSETTE STOP/EJECT BUTTON |
| 10. CD MODE BUTTON | 25. CASSETTE PAUSE BUTTON |
| 11. CD STOP BUTTON | 26. SPEAKER LEFT |
| 12. CD PLAY/PAUSE BUTTON | 27. SPEAKER RIGHT |
| 13. LCD DISPLAY | 28. DIAL POINTER |
| 14. STEREO HEADPHONE JACK | 29. FOLDER UP BUTTON |
| 15. VOLUME CONTROL KNOB | 30. FOLDER DOWN BUTTON |

AC OPERATION

Before operation please ensure voltage on the set corresponds to voltage of your local area. Unravel AC line cord; insert one end into AC socket on the set while the other end into a standard AC outlet.

Remarks:

In case of malfunction due to electrostatic discharge (ESD), reset the unit by reconnecting AC cord again to resume to normal operation.

When not in use – Unplug AC power cord completely from AC power socket.

Warning:

The power cable/disconnect device shall remain easy to operate/disconnect. When you are not going to use the unit for a long period of time, disconnect the AC power cord. Where the mains plug or an appliance coupler is used as disconnecting device, the disconnecting device shall remain operable.

BATTERY OPERATION

Disconnect AC cord set completely. Open the BATTERY DOOR and insert UM-2/ "C" size x 8 batteries (**not supplied**) making sure the indicated battery polarity is observed.

When not in use – Remove all batteries if the unit will not be used for few months or more.

RADIO OPERATION

1. Slide FUNCTION SWITCH to "RADIO" position.
2. Slide BAND SWITCH to the desired waveband.
3. Turn the TUNING KNOB to your desired radio station.
4. Adjust sound level by rotating VOLUME CONTROL KNOB.
5. To turn off radio, simply slide FUNCTION SWITCH to "TAPE (OFF)" position.

FM stereo indicator

When tuned to FM Stereo broadcast "FM ST. LED INDICATOR" will light up. In some weak signal areas, FM Stereo signal may not be strong enough and can cause excessive background noise. In this case, slide the BAND SWITCH to "FM" position.

Antennas

For best reception, fully extend FM ANTENNA to receive FM stations.

For AM reception, the unit has a built-in antenna, turn the whole unit for best reception.

BASS BOOST

To increase bass at all volume levels, push BASS BOOST BUTTON to "ON" position to boost low frequency tone for an emphasized bass sound.
To release super bass sound, simply push this button to "OFF" position.

STEREO HEADPHONE JACK

For private listening, insert the plug of a stereo headphone (**not included**) into STEREO HEADPHONE JACK and adjust VOLUME CONTROL KNOB accordingly.
During the use of headphone, speakers are disconnected automatically.

CASSETTE OPERATION

Tape Playback

Depress STOP/EJECT BUTTON to open cassette door.
Insert a cassette tape into CASSETTE COMPARTMENT and close the door.
Slide FUNCTION SWITCH to TAPE position.
Depress the PLAY BUTTON.
Adjust VOLUME CONTROL KNOB to your desired listening level.
To stop tape playback, depress STOP/EJECT BUTTON.

Fast Forward and Rewind

The tape can be fast forward or rewound by depressing FAST FORWARD or REWIND BUTTON respectively.

Pause function

During playback, the tape can be stopped temporarily by depressing PAUSE BUTTON.
To continue playback, press PAUSE BUTTON once again.

Auto stop system

When the tape runs to its end during playback or recording, cassette operation will be stopped automatically.

Caution

To avoid damage to cassette mechanism or cassette tape, always depress STOP/EJECT BUTTON between each operation!

CD OPERATION

PLAYING COMPACT DISC (CD-R/RW PLAYBACK COMPATIBLE)

Getting started

Note: Should skipping of tracks occur during CD playing try reduce the volume.

When CD is playing, do not open CD DOOR.


1. Pull up CD DOOR. Put a CD disc into CD Compartment and close the door. Set the FUNCTION SWITCH to "CD" position.

Note: Ensure CD DOOR is closed properly and locked in place.

2. When CD DOOR is closed with a CD inside, total track number in the disc will be shown on LCD DISPLAY and go to stop mode. (Ex. Total 17 tracks inside the disc).


3. If there is no disc inside, LCD DISPLAY will show "NO" and go to stop mode.

4. If CD DOOR is not closed, LCD DISPLAY will show " _ _ _ _ ".

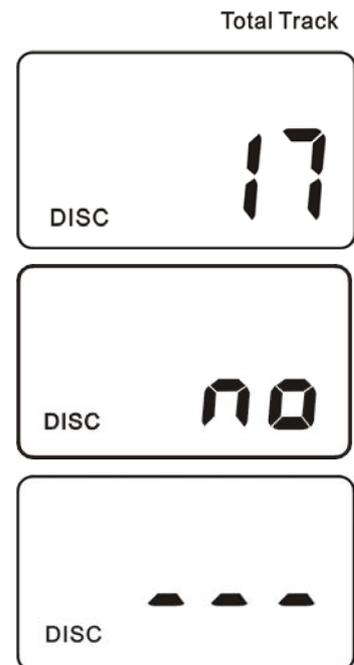


Play/Pause mode

1. When PLAY/PAUSE BUTTON is pressed during CD stop mode, the first track will be played. The Play indicator "▶" and specific number of track is being played will be shown on LCD DISPLAY

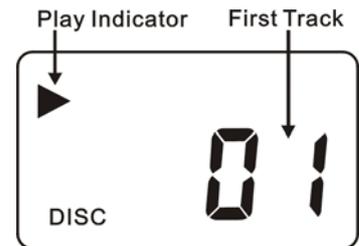

2. For interruption while CD is playing, press CD PLAY/PAUSE BUTTON once. The Play indicator "▶" will blink continuously on LCD DISPLAY.

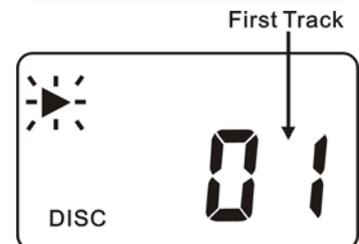


3. Though the sound stops, disc will continue to spin. To resume playback, press CD PLAY/PAUSE BUTTON once again. Music will start from the exact position where it was interrupted.
4. To stop CD playback, press CD STOP BUTTON once whether CD is in Play or Pause mode; LCD DISPLAY will show the total number of tracks in the disc again.
5. To turn off the unit, slide FUNCTION SWITCH to "TAPE (OFF)" position.

Skip and Search mode

1. During play or pause mode, when CD SKIP/SEARCH FORWARD ►► or BACKWARD ◄◄ BUTTON is pressed once, it will go to next track or go back to the beginning of the track respectively.
2. During play mode, when CD SKIP/SEARCH FORWARD ►► or BACKWARD ◄◄ BUTTON is pressed and held, it will search the track with audible high-speed forward or backward playback.

Repeat mode


1. Repeat 1:
When MODE BUTTON is pressed once, Repeat indicator "REP." will be shown on LCD DISPLAY. This single track of music will be repeated.
2. Repeat All:
When MODE BUTTON is pressed twice, Repeat All indicator "◀REP." will be shown on LCD DISPLAY. The whole disc can be played continuously.
3. To cancel repeat function
Press MODE BUTTON repeatedly until Repeat indicator disappears from LCD DISPLAY.

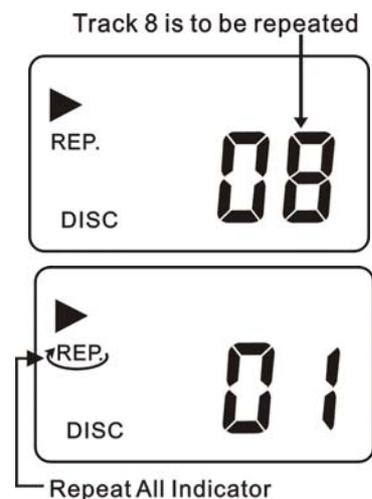

Random play mode


This feature allows tracks on the disc to be played in random order.

1. During CD stop mode, press MODE BUTTON three times. The "RANDOM" indicator will be shown on LCD DISPLAY and play automatically.
2. To cancel random play function, press MODE BUTTON again. The "RANDOM" indicator will disappear from LCD DISPLAY.

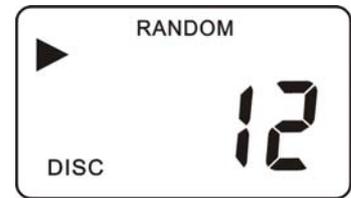

Program mode


1. During CD stop mode, press PROGRAM BUTTON once. The "PROGRAM" indicator and number of Program to be memorized starts from the first program "P01" will light up and blink continuously. Press CD SKIP/SEARCH FORWARD ►► or BACKWARD ◄◄ BUTTON to your desired musical track, LCD DISPLAY will show the appropriate track number. Press PROGRAM BUTTON to store this track in memory.

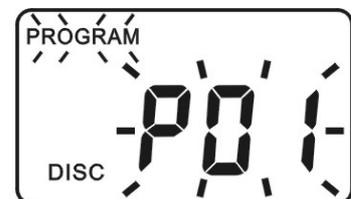

2. Repeat above procedure until all desired tracks have been programmed. A total of 20 tracks can be stored in memory.

Remarks:

Whenever CD SKIP/SEARCH FORWARD ►► or BACKWARD ◄◄ BUTTON is pressed, it will always show the last programmed track first to recall your memory.

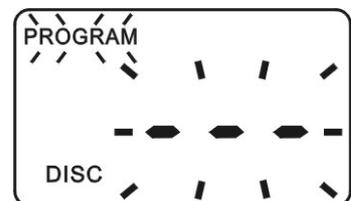

After complete programming, LCD DISPLAY will show "PROG. _ _ _" and flash continuously.

3. Press CD PLAY/PAUSE BUTTON once to start program playback and CD Play indicator "▶" will light up.
4. To check the program you have stored after complete programming, press PROGRAM BUTTON once during CD stop mode; then press CD SKIP/SEARCH FORWARD ►► BUTTON once, LCD DISPLAY will show the first programmed track number. Repeat above procedure to read all programmed memory.
5. To cancel programmed memory:
 - During CD stop mode, press CD STOP BUTTON once.
 - or
 - Open CD DOOR during CD stop mode.The "PROGRAM" indicator will disappear from LCD DISPLAY.



PLAYING MP3 DISC

Getting started

Note: Should skipping of tracks occur during MP3 disc playing, try reduce the volume.

When MP3 disc is playing, do not open CD DOOR.


1. Pull up CD DOOR. Put a MP3 disc into CD compartment and close the door. Set FUNCTION SWITCH to "CD" position.

Note: Ensure CD DOOR is closed properly and locked in place.

2. When CD DOOR is closed with a MP3 disc inside, total track number in the disc will be shown on LCD DISPLAY and go to stop mode.


3. If there is no disc inside, LCD DISPLAY will show "no" and go to stop mode.

4. If CD DOOR is not closed, LCD DISPLAY will show " _ _ _ ".

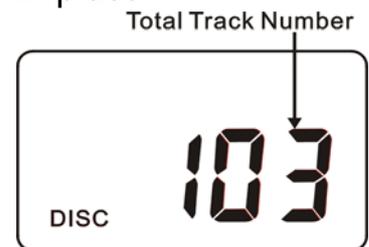

Play/Pause mode


1. When PLAY/PAUSE BUTTON is pressed during CD stop mode, the first track will be played. The Play indicator "▶" and "MP3" indicator will be shown to indicate MP3 disc is being played. LCD DISPLAY will show specific track number is being played.

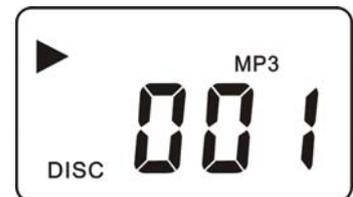

2. To select specific musical track inside the MP3 disc.

MP3 music can be stored into CD disc with or without folder according to your "MP3 burning method".

- a. If MP3 disc is downloaded without dividing into folder, all track number will be shown directly in LCD DISPLAY. The Album number will only show

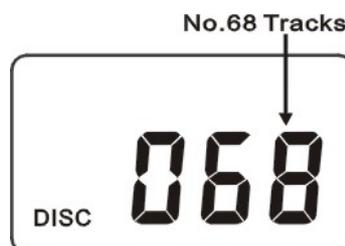

001 after pressing FOLDER UP or DOWN BUTTON.



- b. If music is stored into different folders, you've to select specific Album number first by pressing FOLDER UP or DOWN BUTTON; afterwards press CD SKIP/SEARCH FORWARD ▶▶ or BACKWARD ◀◀ BUTTON to select specific track number of music inside this Album.

Example: To select Album # 4, track # 3

Step – 1: Press FOLDER UP or DOWN BUTTON to select Album # 4.




Step – 2: Press CD SKIP/SEARCH FORWARD ►► or BACKWARD ◀◀ BUTTON to select Track # 3 inside this Album # 4



3. For interruption while MP3 disc is playing press CD PLAY/PAUSE BUTTON once. The Play indicator "▶" will blink continuously on LCD DISPLAY.
4. Though the sound stops, disc will continue to spin. To resume playback, press CD PLAY/PAUSE BUTTON once again. Music will start from the exact position where it was interrupted.
5. To stop MP3 disc, press CD STOP BUTTON once whether MP3 disc is in Play or Pause mode.
6. To turn off the unit, slide FUNCTION SWITCH to "TAPE (OFF)" position.

Repeat mode


1. Repeat 1:
When MODE BUTTON is pressed once, Repeat indicator "**REP.**" will light. This single track of music will be repeated.
2. Repeat Folder:
When MODE BUTTON is pressed twice, "**REP.**" and "**ALBUM**" indicators will be shown. This specific folder will be played repeatedly.

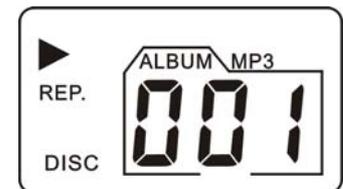

Remarks:

The folder and track number will be shown every 2 seconds alternatively.


3. Repeat All:
When REPEAT BUTTON is pressed three times, Repeat All indicator "**REP.**" will be shown. The whole disc can be played continuously.
4. To cancel repeat function
Press MODE BUTTON repeatedly until Repeat indicator disappears from LCD DISPLAY.

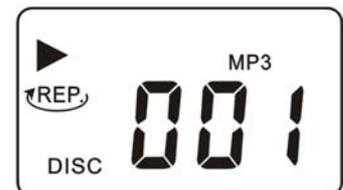

Random play mode


This feature allows tracks on the disc to be played in random order.

1. During CD stop mode, press MODE BUTTON four times, "RANDOM" indicator will be shown on LCD DISPLAY. Press PLAY/PAUSE BUTTON once to start the playback.
2. To cancel Random play function, press MODE BUTTON again, "RANDOM" indicator will disappear from LCD DISPLAY.

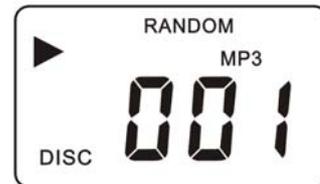

Program mode

1. During CD stop mode, press PROGRAM BUTTON once. The "PROGRAM" indicator and number of Program to be memorized starting from the first program "P01" will light up and blink continuously. Press FOLDER UP or DOWN BUTTON, then press CD SKIP/SEARCH FORWARD ►► or BACKWARD ◀◀ BUTTON to select your desired musical track. LCD DISPLAY will show track number of this specific Album to be programmed. Press PROGRAM BUTTON to store this track in memory.
2. Repeat above procedure until all desired tracks have been programmed.

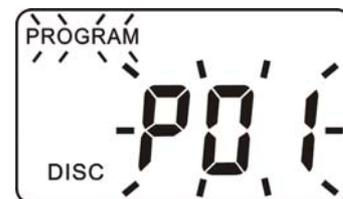


Remarks:

Whenever FOLDER UP or DOWN BUTTON is pressed, it will always show the last programmed Album number first to recall your memory.

A total of 20 tracks can be stored in memory. After complete programming, LCD DISPLAY will show "PROGRAM _ _ _" and blink continuously.

3. To start Programmed playback, press CD PLAY/PAUSE BUTTON once. CD Play indicator "▶", "PROGRAM" and track number of the specific Album will light up.

Example: Album # 3, Track # 2.

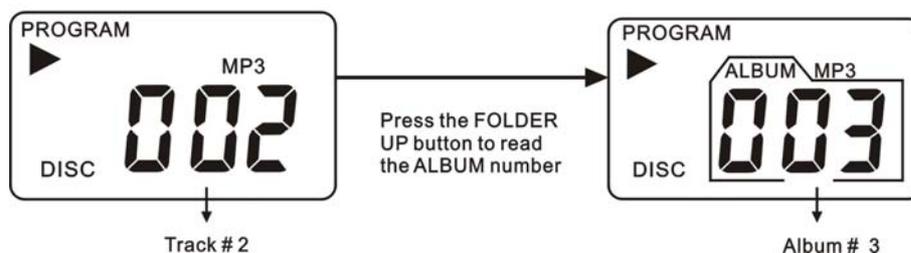

4. To check the program you have stored after complete programming, press PROGRAM BUTTON once during CD stop mode. LCD DISPLAY will show "P01" and blink continuously. Press FOLDER UP or DOWN

BUTTON to read the Album number, then press CD SKIP/SEARCH FORWARD ►► or BACKWARD ◄◄ BUTTON to read the specific track number of said Album. Press PROGRAM BUTTON again, LCD DISPLAY will show "P02" and blink continuously. Repeat above procedure to check all programs being stored.

5. To cancel programmed memory:

➤ During CD stop mode, press CD STOP BUTTON once.

or

➤ Open CD Door during CD stop mode.

The "PROGRAM" indicator will disappear from LCD DISPLAY.

MAINTENANCE

Cleaning the Tape head

Clean the head frequently to remove dust and tape residue. Dirt on the head will impair sound quality of playback.