

 soundmaster®



DEUTSCH
ENGLISH
FRANÇAIS

NEDERLANDS
ESPAÑOL



SCD6500USB

SAFETY PRECAUTIONS

To ensure safe, appropriate use of your personal CD player, please follow the advice below:

Location

- Do not use the product in extremely hot, cold, dusty or damp conditions.
- Place the product on a smooth, flat surface.
- Ensure that air is free to circulate through the product. Do not use it in a poorly ventilated place, cover it with a cloth or place it on carpet.
- Before using the product, check that its rated voltage is suitable for your mains supply.

Safety precautions

- When you plug in or unplug the power cord, always hold the plug rather than the cable. Pulling the cord could damage it and create a hazard.
- Always unplug the product from the mains if you do not intend to use it for an extended period.
- The On/Off button does not disconnect the product from the mains power supply. To disconnect the product from the power supply, you must unplug the power cord.
- This product should only be used in a horizontal position.

Condensation

- Water droplets or condensation may form inside the CD player if it is left in a warm, damp atmosphere.
- The product may not operate correctly if condensation forms inside it.
- Leave the product in a warm, dry room for 1 to 2 hours to allow the condensation to evaporate.

In the event of a problem, unplug the power cord and contact a qualified repair technician.

Warning: Ventilation




Your personal CD player has ventilation holes, which should never be obstructed.

Liquid warning:

Never allow liquids to splash or drip onto the product. Never place a liquid-filled container (e.g. vase, jar, etc.) above it.

- The apparatus shall not be exposed to dripping or splashing liquids, no objects filled with liquids, such as vases, shall be placed on the apparatus
- The mains plug is used as the disconnect device and it shall remain readily operable. To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
- The apparatus will be use in open area
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No open flame sources such as lighted candles should be placed on the apparatus;
- Attention should be drawn to the environmental aspects of battery disposal;
- Only use the apparatus in moderate climates.

FUNCTION OVERVIEW

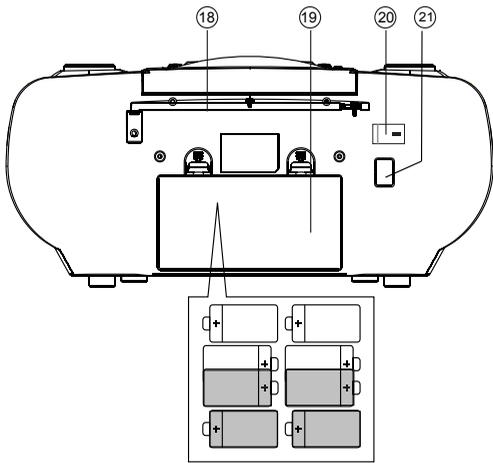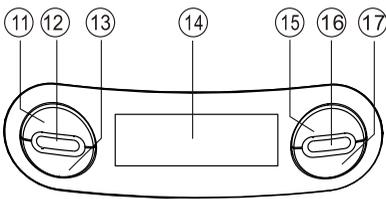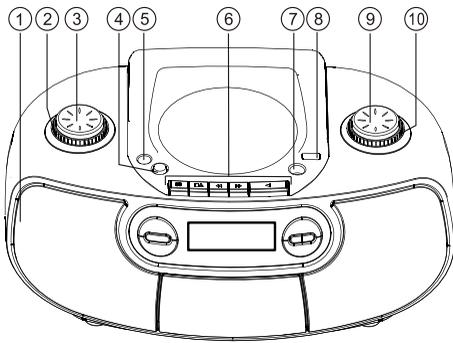

FUNCTION OVERVIEW

FRONT AND REAR

1. **SPEAKER**
2. **FUNCTION** switch
selects the function *RADIO, TAPE or CD/AUX*
3. **VOLUME** control
adjusts volume level.
4. **BASS BOOST** switch
5. **STEREO EARPHONE JACK**
6. **CASSETTE:**

PLAY: starts playback

F.FWD/REW: fast winds / rewinds the tape

STOP/EJECT: stops the tape and opens the cassette compartment

PAUSE: interrupts playback

7. **AUX-IN JACK**
8. **USB PORT**
9. **TUNING CONTROL**
selects AM/FM stations.
10. **BAND** switch
selects AM/FM/FM STEREO band
11. **>>/>>>**
press once to skip to next track, press & hold to search forward.
12. **FOLDER/ +10**
Select the ALBUM or skip the tracks in 10 multiple.
13. **|</<<**
press once to skip to previous track, press & hold to search backward.
14. **LCD Display**
15. **PLAY/ PAUSE, USB**
Play or pause playback; Press and hold to switch in CD mode or USB mode.
16. **PLAY MODE**
(Repeat mode, Random, Program)
17. **STOP**
stop playback/ erases a program.
18. **TELESCOPIC ANTENNA**
19. **Battery compartment**

20. **ON/ OFF Switch**
to switch ON or OFF the unit.
21. **AC MAINS**
inlet for power cord.

Whenever convenient, use the power supply if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

Batteries (not included):

Open the battery compartment and insert eight batteries, type MONO, R-20, UM-1 or D-cells, (preferably Alkaline) with the correct polarity as indicated by the „+“ and „-“ symbols inside the compartment.

Batteries contain chemical substances, so they should be disposed of properly.

Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:

Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.

When inserting new batteries, do not try to mix old batteries with the new ones.

Remove the batteries if the set is not to be used for a long time.

Using AC Power

1. Check if the power voltage, as shown on the type plate located on the bottom of the set corresponds to your local AC power supply. If it does not, consult your dealer or service centre.
2. Connect the power cord to the AC MAINS inlet and the wall outlet. Slide the ON/OFF switch to “—” position.
3. To switch off completely, unplug the power cord from the wall outlet.

Unplug the power cord from the wall outlet to protect your set during heavy thunderstorms.

BASIC OPERATION

Switching on/off: Save energy

Whether you are using mains or battery supply, to avoid unnecessary energy consumption always adjust the **ON/OFF switch** to *OFF*.

1. To select your sound source, adjust the **FUNCTION** selector to *RADIO*, *TAPE* or *CD/USB*.
2. Adjust the sound with **VOLUME**.
3. To switch off the power, set the **ON/OFF switch** to *OFF* position.

Radio reception

1. Turn the function selector to *RADIO*.
2. Turn the **BAND** selector to a desired setting (FM ST., FM or AM)
3. Rotate the **TUNING** control to find the desired stations, the frequency will show on display.
4. If the **BAND** selector is set to FM ST. and a station with stereo broadcast is received accurately.

When you have finished listening, slide the **ON/OFF switch** to the *OFF* position.

- If FM reception is weak, stereo may be indicated but the sound may not be good. In this case, set the **BAND** selector to *FM* to receive in *mono* only.
- For FM, pull out the telescopic antenna. Incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter).
- For AM the set is provided with a built-in antenna so the telescopic antenna is not needed. Direct the antenna by turning the set itself.

PLAYING A CASSETTE

1. Select *TAPE* source.
2. Press **STOP/EJECT** to open the cassette door.
3. Insert a cassette and close the cassette door.
4. Press **PLAY** to start playback.
5. To interrupt playback, press **PAUSE**. To resume, press **PAUSE** again.
6. by pressing **FF** or **REW** on the set, fast winding of the tape is possible in both directions.
7. To stop the tape, press **STOP/EJECT**.

The keys are automatically released at the end of the tape, except if **PAUSE** has been activated.

This CD-player can play Audio Discs, MP3, CD-R and CD-RW. Do not try to play CD-ROM, CDi, VCD, DVD or Computer CD.

1. Slide the **FUNCTION** selector to *CD/USB*, the display becomes active.
2. To open the CD door, press the CD door at the edge marked OPEN/CLOSE.
3. Insert a CD/MP3, CD-R or CD-RW with the label side facing up and gently close the CD door.
4. Press **PLAY/PAUSE** on the set to start playback
5. To pause playback, press **PLAY/PAUSE**. To resume, press **PLAY/PAUSE** again.
6. To stop playback, press **STOP**

NOTE: playback will also stop when

- you open the CD compartment,
- you select *RADIO* function,
- the CD has reached the end

Selecting a different track

During playback you can use **◀◀** or **▶▶** to select a particular track.

- If you have selected a track number in the stop or pause mode, press **PLAY/PAUSE** to start playback.
- Press **▶▶** once briefly to advance forward to the next track, press repeatedly until the desired track number appears in the display.
- Press **◀◀** once briefly to return to the beginning of the current track.
- Press repeatedly to select a previous track.

Fast finding MP3 track

1. Press and hold the FOLDER/+ 10 key, the MP3 track will skip in 10 multiple.
2. Press the FOLDER/+ 10 key in once, to select the desired ALBUM.

Different play modes: REPEAT

REPEAT: plays the current track continuously.

REPEAT ALL: plays the entire CD continuously.

Programming track numbers

You may store up to 32 tracks in the desired sequence. If you like, store any track more than once.

1. In the program mode, press **◀◀** or **▶▶** for your desired track.
2. When your chosen track number appears, press **PROGRAM** once to store the track. The display shows **PROG** and your selected track number.
3. Repeat steps 1 and 2 to select and store all desired tracks this way.
4. To play your program, press **PLAY/PAUSE**

Erasing a program

You can erase the contents of the memory by


- opening the CD door
- selecting *RADIO* function
- in *STOP* mode, press the **STOP** button twice

Notice for CD-R/CD-RW users:

Depending on the type of CD writer, disc brand and writing speed, some reading problems may occur.

• PLAY MODE

Press the PLAY MODE button during play. A single track, single folder (MP3 only) or all the tracks can be repeated. Press the button for the repeat mode as follows:

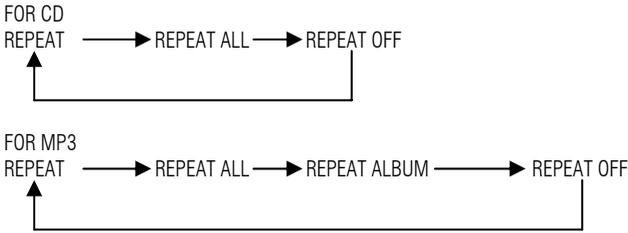

REPEAT MODE	REPEAT INDICATOR ON DISPLAY
REPEAT SINGLE TRACK	REPEAT
REPEAT ALL TRACKS	REPEAT ALL
REPEAT CURRENT ALBUM (MP3 only)	REPEAT ALBUM

• RANDOM PLAY

You can listen all the tracks in a random order using this function.

1. Press PLAY MODE button until the *RANDOM* lights up on the LCD.
2. All tracks will start playback in a random order automatically.
3. Press **STOP** button to cancel the random mode.

CD PROGRAMMING

Up to 32 tracks can be programmed for disc play in any sequence. Before using, be sure to press the **STOP** button first.

1. Set in CD mode.
2. Press the PLAY MODE button. PROG will appear on the LCD display. The PRO--G, "P" and the digits for track number are displayed and flash.
3. Select a desired track by pressing >>/>> | or | <</<< buttons.
4. Press the PLAY MODE button to store the track into memory.
5. Repeat steps 3 and 4 to enter additional tracks into the memory if necessary.
6. When all the desired tracks have been programmed, press the **PLAY/PAUSE** button to play the disc in the order you have programmed.
7. Press the **STOP** button to terminate program playing.
 - Press the STOP button in twice to erases the programed tracks.

USB PLAYBACK

1. Select the FUNCTION selector to CD/ USB mode
2. Press and hold the PLAY PAUSE/ USB button for 2 secs until the display show "USB"
3. Plug in USB Memory Stick into USB Port
4. Display will show total track number
5. Press **PLAY/PAUSE** to start music playing
6. Press **◀◀** or **▶▶** to select tracks
7. Repeat function can be selected identical to CD/MP3 playback
8. Press **STOP** to end playback

Note : Due to fast changing IT technology, this unit may not be compatible with some USB or SD/MMC flash storage device.

*** USB support Specification : USB V1.1/V2.0**

MAINTENANCE


Precautions & General Maintenance

- Place the set on a hard and flat surface so that the system does not tilt.
- Do not expose the set, batteries or CDs to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- Do not cover the set. Adequate ventilation with a minimum gap of 6 inches between the ventilation holes and surrounding surfaces is necessary to prevent heat build-up.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.
- To clean the set, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.



CD AND PLAYER HANDLING

- The Lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation to form and the lens of your CD player to cloud over. Playing a CD in this condition is impossible. Do not attempt to clean the lens. Leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to keep the CD compartment dust-free. To clean, dust the compartment with a soft dry cloth.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

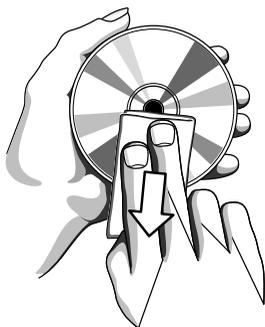

If a fault occurs, first check the points listed below before taking the set for repair.

Do not open the set as there is a risk of electric shock.

If you are unable to remedy the problem by following these hints, call service and support at the phone number shown below.

Warning:

Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty

Problem	Cause	Solution
No sound / power	Volume not adjusted	Adjust the Volume
	Power cord not securely connected	Connect the AC cord properly
	Batteries dead / incorrectly inserted	Insert (fresh) batteries correctly
Display does not function properly / No reaction to operation of any of the controls	Electrostatic discharge	Switch off and unplug the cord. Reconnect after a few seconds
Poor cassette sound quality	Dust and dirt on the head, etc.	Clean deck parts , etc.
The CD skips tracks	CD damaged or dirty	Replace or clean CD
	Program is active	Quit program mode
No disc indication	No CD inserted	Insert a CD, CD-R or CD-RW
	CD badly scratched or dirty	Replace or clean CD
	Laser lens has steamed up	Wait until lens has cleared
	CD-R is blank or the disc is not finalized	Use a finalized CD-R
CD Playback does not work	CD badly scratched or dirty	Replace or clean CD
	Laser lens steamed up	Wait until lens has adjusted to room temperature

SPECIFICATIONS

GENERAL

Power Supply:	AC 230V ~ 50Hz
Battery Operation:	12V DC (8x 1,5V Type UM-1 / R-20 / D-CELL / MONO)
Power consumption:	25 W
Dimensions of unit:	380(w) x 176(h) x 238 (d) mm
Weight:	2,80 kg
Frequency range:	AM 522 - 1620 kHz FM 87.5 - 108.5 MHz

AUDIO

Output power:	2x 3W RMS
Speaker:	8 Ohms

COMPACT DISC

Frequency range:	125 Hz - 20.000 Hz
------------------	--------------------

CASSETTE RECORDER

Frequency range:	125 Hz - 6.300 Hz
------------------	-------------------

MP3 PLAYER

Format:	ISO9660
Bitrate:	8 - 320 kBit/s
MP3 and WMA compatible	

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE



Disposal of old electrical appliances

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out 'wheeled bin' symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.