


**CAUTION**

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



WARNING: SHOCK HAZARD - DO NOT OPEN  
AVIS: RISQUE DE CHOC ÉLECTRONIQUE - NE PAS OUVRIR  
WARNUNG: ELEKTROSHOCK GEFAHR - NICHT ÖFFNEN

**LASERSCHUTZKLASSE 1 PRODUKT  
CLASS 1 LASER PRODUCT  
APPAREIL A LASER DE CLASSE 1**

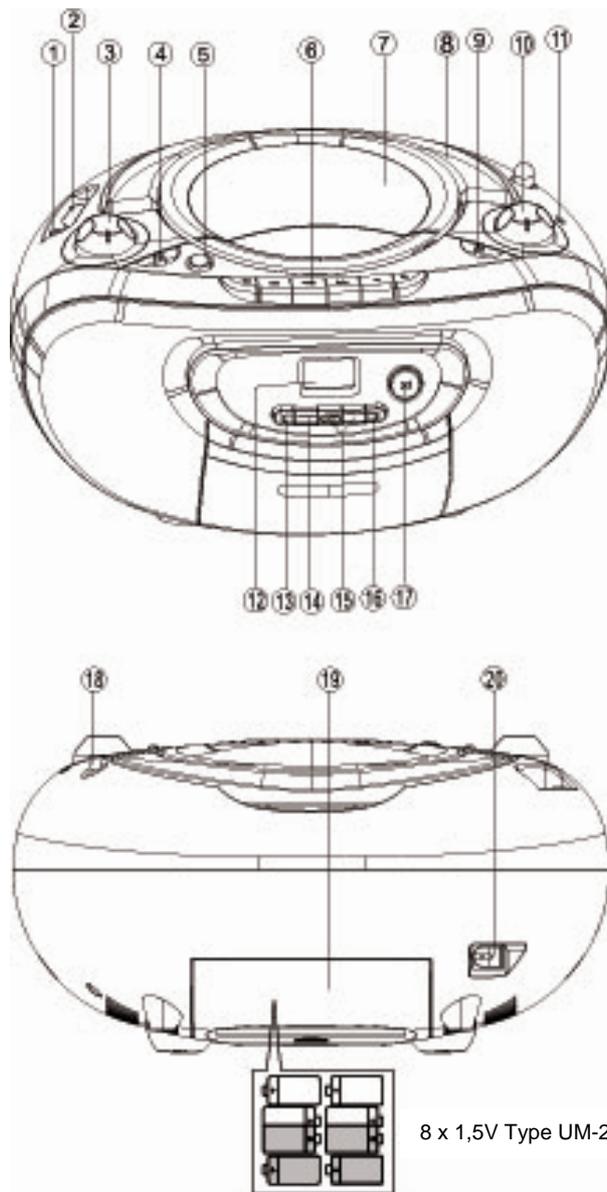

- |                                  |                         |
|----------------------------------|-------------------------|
| 1.) 3,5 mm STEREO HEADPHONE JACK | 11.) FM STEREO ICON     |
| 2.) DUMB                         | 12.) DISPLAY            |
| 3.) VOLUME                       | 13.) PROGRAM            |
| 4.) FUNCTION SELECTOR            | 14.) MODE               |
| 5.) DYNAMIC BASS BOOST           | 15.) SKIP  <<</>>>      |
| 6.) CASSETTE RECORDER KEYS       | 16.) STOP/FOLDER        |
| 7.) CD DOOR                      | 17.) PLAY/PAUSE         |
| 8.) HANDLE                       | 18.) TELESCOPIC ANTENNA |
| 9.) BAND SELECTOR                | 19.) BATTERY DOOR       |
| 10.) TUNING CONTROL              | 20.) AC MAINS           |

## **Power Supply**

Whenever convenient, use the power supply if you want to conserve battery life. Make sure you remove the plug from the set and wall outlet before inserting batteries.

## **Batteries (not included):**

Open the battery compartment and insert eight batteries, type 1,5V UM-2 or C-cells, (preferably alkaline) with the correct polarity as indicated by the “ + “ and “ – “ symbols inside the compartment.

Batteries contain chemical substances, so they should be disposed of properly. Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:

- Do not mix battery types: e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- Remove the batteries if the set is not to be used for a long time.

## **AC Power:**

- 1) Check if the power voltage, as shown on the type plate located on the bottom of the set, corresponds to your local AC power supply. If it does not, consult your dealer or service centre.
- 2) Connect the power cord to the AC MAINS inlet and the wall outlet. The power supply is now connected and ready for use.
- 3) To switch off completely, unplug the power cord from the wall outlet. Unplug the power cord from the wall outlet to protect your set during heavy thunderstorms.

## **General operation:**

- 1) To select your sound source adjust the source selector to MP3.CD/TAPE (OFF)/RADIO
- 2) Adjust the sound with the VOLUME controls
- 3) To switch off the set, adjust the source selector (4) to TAPE (OFF) position.

## **Radio operation:**

- 1) Slide the FUNCTION selector (4) to RADIO
- 2) Select waveband FM ST. / FM / AM with Band selector (9)
- 3) Rotate the TUNING control (10) to find the desired stations
- 4) When you have finished listening, slide the FUNCTION selector (4) to the OFF position
- For FM, pull out the telescopic antenna. Incline and turn the antenna. Reduce its length if the signal is too strong (very close to a transmitter)
- For AM the set is provided with a built-in antenna so the telescopic antenna is not needed. Direct the antenna by turning the whole set.

## **Cassette operation**

- 1) Slide the FUNCTION selector (4) to TAPE (OFF)
- 2) Press STOP/EJECT (6) to open the cassette door
- 3) Insert a recorded cassette and close the cassette door
- 4) Press PLAY (6) to start playback
- 5) To interrupt playback, press PAUSE (6). To resume, press the key again
- 6) By pressing << or >> on the set, fast winding of the tape is possible in both directions
- 7) To stop the tape, press STOP/EJECT (6)
- The keys are automatically released at the end of the tape, except if PAUSE has been activated

## **Recording from the radio:**

- 1) Tune to the desired radio station (see TUNING TO RADIO STATIONS)
- 2) Press STOP/EJECT (6) to open the cassette door
- 3) Insert a suitable cassette into the cassette deck and close the cassette door
- 4) Press RECORD (6) to start recording
- 5) For brief interruptions, press PAUSE (6). To resume recording, press PAUSE again.
- 6) To stop recording, press STOP/EJECT (6)

## **Playing a CD/MP3**

This CD-player can play Audio Discs, CD-R, CD-RW, CD-MP3.

- 1) Adjust the source selector (4) to CD/MP3. Display: shows “ - - - “ Briefly.
- 2) To open the CD door (7), press the CD door at the edge marked OPEN
- 3) Insert a CD with the printed side facing up and press the CD door gently close
- 4) Press PLAY/PAUSE (17) on the set to start play back
- 5) To pause playback press PLAY/PAUSE (17) to resume, press PLAY/PAUSE again
- 6) To stop CD playback, press STOP (16)

During playback you can use |<< or >>| to select a particular track

- If you have selected a track number in the stop or pause position, press PLAY/PAUSE to start playback
- Press >>| (15) once briefly for the next track, or press repeatedly until the desired track number appears in the display
- Press |<< (15) once briefly to return to the beginning of a current track
- Press |<< (15) more than once briefly for a previous track
- Press STOP/FOLDER (16) to adjust album

## **REPEAT/RANDOM**

### **CD-MODE**

Press 1x MODE (14) to repeat the current track

Press 2x MODE (14) to repeat all tracks

Press 3x MODE (14) to start RANDOM function

Press 4x MODE (14) to cancel the function

### **MP3-MODE**

Press 1x MODE (14) to repeat the current track

Press 2x MODE (14) to repeat the selected album

Press 3x MODE (14) to repeat all tracks

Press 4x MODE (14) to start RANDOM function

Press 5x MODE (14) to cancel the function

## **PROGRAMMING TRACK NUMBERS**

You may store up to 20 tracks in the desired sequence.

- 1) Press PROG. (13) , display will shown PO1 and flash
- 2) Press |<< or >>| (15) for select your desired track or pressing STOP/FOLDER (16) to select your desired ALBUM. And then press |<< or >>| to select your desired track
- 3) When your chosen track number appears, press PROG (13) once to store the track. The display shows prog and prog briefly followed by your selected track number.
- 4) Repeat steps 1 to 2 to select and store all desired tracks in this way
- 5) To play your program, press PLAY/PAUSE (17)

### **Erasing a program:**

You can erase the contents of the memory by:

- Press 2x STOP button (16)
- opening the CD door
- slide the function selector of OFF source

### **Specifications:**

FM Frequency: 87,5 – 108 MHz

AM Frequency: 540 – 1600 KHz

Power Consumption: 18 W

AC Power Supply: AC 230V 50Hz

DC Power Supply: 8 x 1,5V Type UM-2/C

Specification subjects to be changed without notice

Copyright by Woerlein GmbH, 90556 Cadolzburg, [www.woerlein.com](http://www.woerlein.com)