

# Bedienungsanleitung INSTRUCTION MANUAL Mode d'emploi


 **Soundmaster®**  
Exclusiv Line

## TR 7



# Location of Controls and Indicators

## Diagram of Back and Front Panel.

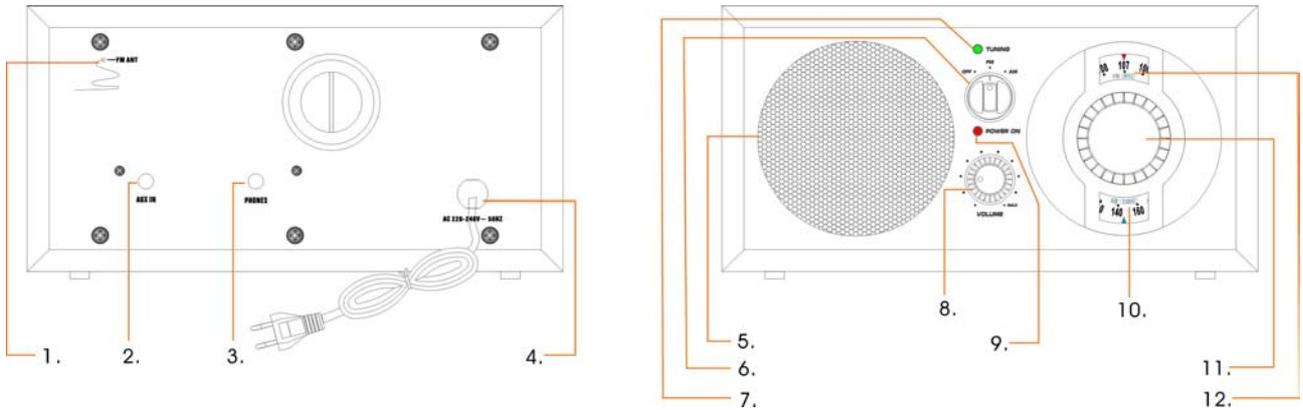

### Back Panel

#### 1. FM Antenna

Place the FM wire antenna in a proper location for best reception

#### 2. Aux In Socket

Connect a stereo or mono audio source to this stereo input socket i.e. CD player or a TV

#### 3. Headphone Socket

Connect a separate headphone jack to this socket to listen the unit, and the main speaker will be turned off

#### 4. Main Lead

Connect to the power sources

### Front Panel

#### 5. Main Speaker

3" speaker drive is built-in

#### 6. Mode Switch

OFF - Turn the knob left to turn off the unit  
 FM - Turn the knob to middle to switch on FM band  
 AM - Turn the knob to right to switch on AM band

#### 7. Tuning Indicator

This indicator will glow brightest when the best reception is achieved

#### 8. Volume Knob

Turn clockwise to increase volume  
 Turn anti-clockwise to decrease volume

#### 9. Power On Indicator

The indicator will glow when the power is on

#### 10. AM Frequency Dial Window

Show the AM frequency range

#### 11. Frequency Tuning Knob

Turn clockwise to turn the FM /AM Frequency range from 88-108KHz /530-1700KHz

#### 12. FM Frequency Dial Window

Show the FM frequency range

# Operating Instructions

- Make sure the AC power cords from system are properly connected to AC 220-240V~50Hz house
- 1) Power on the unit by turning the Mode Switch.
- 2) Power On Indicator will glow at the same time.
- 3) Select FM or AM band.
- 4) Adjust the desired station as follows:  
Turn the frequency tuning knob in clockwise to select the best reception and stop on the station. At this moment, the tuning indicator will glow brightest. Repeat this procedure until reaching on your desired station.
- 5) If you achieve the station, the tuning indicator will glow on the main unit.
- 6) Adjust the volume control as desired by volume knob.
- 7) Turn the Mode Switch to OFF when finish listening.

## **ANTENNA INFORMATION**

### **FM**

Make sure the FM lead wire antenna is unwound and extended to its full length. It may be necessary to vary the direction of this wire antenna until you find the position that provides the best reception for your favorite FM station.

### **AM**

The AM ferrite bar antenna is inside the main unit. If AM reception is unsatisfactory, you may have to turn the main unit slightly until you find the position that provides the best reception.

## **ROBBER FEET INSTALLATION**

Before installation, use a polishing cloth or dry cloth to wipe off dust and dirt on the bottom of the units. The rubber feet come with self-adhesive tape. Put the rubber feet on the four corners of the bottom of the unit.

# Care and Maintenance

## **Care of the Radio Set**

If the radio set becomes dusty wipe it with a soft dust cloth. Do not use any wax, polish sprays, or abrasive cleaners on the set.

## **Caution**

Never allow any water or other liquid to get inside the unit while cleaning.

The radio shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the radio.

# Specifications

<b>FM Frequency</b>	87.5 – 108MHz
<b>AM Frequency</b>	540 – 1600 KHz
<b>Speaker Output Power</b>	6W RMS / 50W P.M.P.O
<b>Power Supply</b>	230V~50Hz

Specification and the design are subject to possible modifications without notice due to improvement.