




UR-104



D-E-F-NL-SP-RO-PO

	<p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p>WARNING: SHOCK HAZARD - DO NOT OPEN AVIS: RISQUE DE CHOC ÉLECTRONIQUE - NE PAS OUVRIR WARNUNG: ELEKTROSHOCK GEFAHR - NICHT ÖFFNEN</p>		

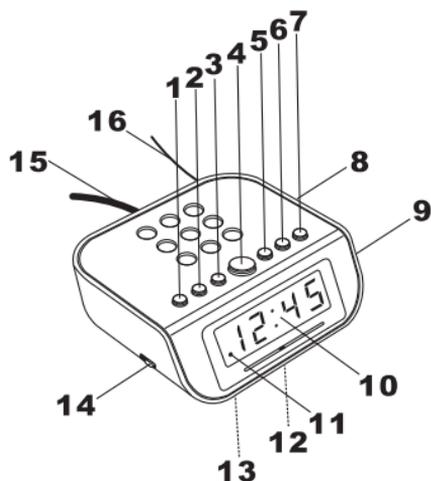

Locations of control

1. Alarm off
2. Time set
3. Alarm set
4. Snooze
5. Hour set
6. Minute set
7. Sleep
8. Volume / buzzer control
9. Tuning radio
10. LED display
11. Auto – indicator
12. Ratinglabel
13. Batterycompartment back-up 9V
14. ON / OFF / AUTO function switch
15. AC power cord
16. FM wire antenna

Powerconnection

Ensure that your powersupply is 230V 50Hz and connect plug (15) to your poweroutlet.

Battery back-up

Insert a 9V battery (not incl.) into batterycompartment (13) and pay attention on polarity. It maintains the clock continue function whenever the AC power is interrupted.

Note: display will not exhibit time during power failure

Radio operation

FM wire antenna (16) must be fully extended !!

1. Set switch (14) to position ON.
2. Tune desired station by wheel (9) Tuning control.
3. Adjust volume level (8).
4. Radio off: switch (14) to pos. OFF.

Setting time

Press and hold button (2) and adjust hour with button (5) and minute with button (6) After time is set, release button (2).

Setting alarmtime

Press and hold button (1) and adjust hour with button (5) and minute within button (6) After alarmtime is set, release button (2).

Wake-up by radio

Tune station and adjust volume level before !

1. Set switch (14) to pos. AUTO (Auto-indicator 11 lights up) and radio will be activated to setted time.
2. Switch off alarm after activation
 - a. Alarm activated for next day: Press button (1)
 - b. Alarm not activated for next day: Switch (14) to pos. OFF

Wake-up by buzzer

1. Set switch (14) to pos. AUTO (Auto-indicator 11 lights up)
2. Set volume (8) to minimum level
3. Alarm off (activation/deactivation next day) see "Wake-up radio 2."

Interrupt the alarm (snooze function)

The alarm can be interrupted for 9 minutes by pressing SNOOZE (4) after which time the radio or the alarm will come again. This function can be repeated several times.

Sleeptimer

Allows you to switch off the radio automatically after a preselected period from 01-59 min.

1. Press SLEEP (7), the display show 0:59 and and same time radio start to work.
2. To shorter the time, press and hold SLEEP (7) and MIN (6) together until the desired time is shown on display.
3. After preselected time has been elapsed, the radio will switch off.
4. To switch off before the preselected time has elapsed, press SNOOZE (4).

Specifications

FM frequency	87,5 – 108MHz
Outputpower	400mW
Powerconsumption	5W
Battery back-up	9V battery
AC	230V 50Hz