




# INSTRUCTION MANUAL

## ALARM CLOCK RADIO CD PLAYER

### URD-770

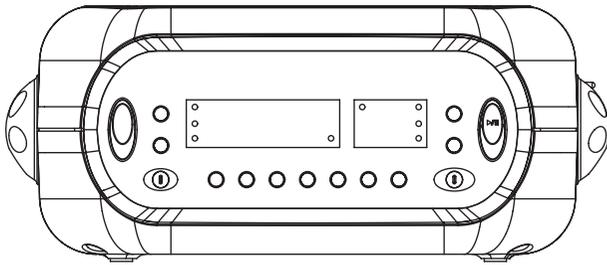

Please read and follow these instructions before using your unit

#### CAUTIONS FOR SAFETY

Do not take the unit apart. The laser beam used in the unit could harm your eyes.

- ❶ Do not insert pins or other objects inside the unit. This unit is equipped with a safety device which automatically turns the laser beam off when the disc compartment is opened. If a pin or other metal object should get inside the unit, however, this safety device may be deactivated.
- ❷ Do not drop the unit or subject it to strong shocks. Doing so could result in damage.

Do not place the unit in the following locations:

- ❶ Locations where the temperature is high. The unit's cabinet may warp or the unit may otherwise be damaged if it is placed in direct sunlight, near heaters (where the temperature is 140°F/60°C or greater) or in cars with the windows closed. (In the summer, the temperature may get as high as 212°F/110°C or more.)
- ❷ Use the unit within a temperature range of 41°F/5°C to 95°F/35°C.
- ❸ In humid or dusty locations.
- ❹ In locations exposed to heavy vibrations.
- ❺ On unstable or tilted surfaces.

#### CONDENSATION

If cold water is poured into a glass, water droplets form on the outside of the glass. This is called condensation. Condensation may occur on internal operating parts of the laser pickup.

Condensation occurs:







- ❶ When the unit is brought from the outdoors into a warm room, or if it is in a cold room which is heated quickly.
- ❷ In the summer, if the unit is moved suddenly from an air-conditioned room or car to a hot or humid location.

Should condensation occur:

The unit may not operate properly if condensation occurs. Wait for 1 to 2 hours (to allow the internal parts to adjust to the surrounding temperature) before using the unit.

**Dripping Warning:** The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.

**Ventilation Warning:** The normal ventilation of the product shall not be impeded for intended use.

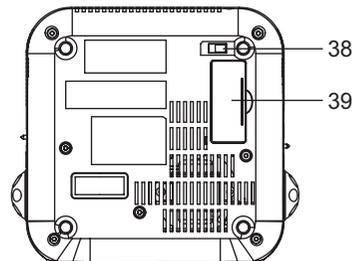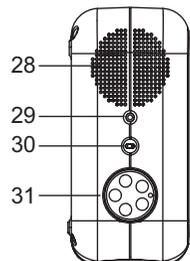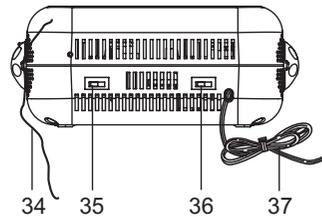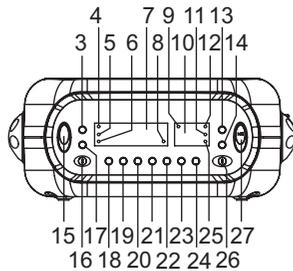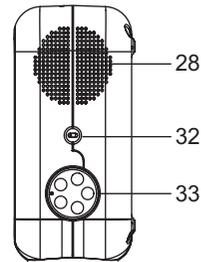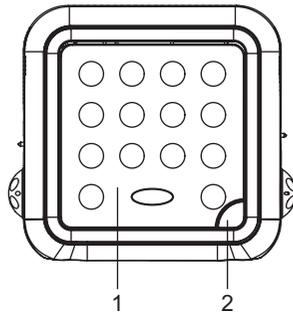

### LOCATION OF CONTROLS

- |                                   |  |
|-----------------------------------|--|
| 1. CD DOOR                        | 22. CD REPEAT BUTTON                               |
| 2. CD DOOR OPEN BUTTON            | 23. CD PROGRAM BUTTON                              |
| 3. ALARM/SLEEP OFF BUTTON         | 24. CD STOP BUTTON                                 |
| 4. PM INDICATOR (OPTIONAL)        | 25. CD REPEAT INDICATOR                            |
| 5. ALARM 1 INDICATOR              | 26. FUNCTION SWITCH<br>(BUZZER/AUTO/OFF/ON)        |
| 6. ALARM 2 INDICATOR              | 27. CD PLAY/PAUSE BUTTON                           |
| 7. CLOCK DISPLAY                  | 28. SPEAKERS                                       |
| 8. SLEEP INDICATOR                | 29. PHONES JACK                                    |
| 9. FM STEREO INDICATOR            | 30. CD/RADIO SWITCH                                |
| 10. CD TRACK DISPLAY              | 31. VOLUME CONTROL                                 |
| 11. PROGRAM INDICATOR             | 32. BAND SWITCH                                    |
| 12. PLAY/PAUSE INDICATOR          | 33. TUNING CONTROL                                 |
| 13. CD SKIP/SEARCH UP BUTTON      | 34. FM AERIAL                                      |
| 14. CD SKIP/SEARCH DOWN<br>BUTTON | 35. DIMMER SWITCH                                  |
| 15. SNOOZE BUTTON                 | 36. ALARM LOUDNESS SWITCH                          |
| 16. ALARM SELECT SWITCH           | 37. AC POWER CORD                                  |
| 17. SLEEP BUTTON                  | 38. AC VOLTAGE SELECTOR<br>(OPTIONAL)              |
| 18. TIME BUTTON                   | 39. BATTERY COMPARTMENT<br>(FOR 9V BACKUP BATTERY) |
| 19. ALARM BUTTON                  |  |
| 20. REVERSE BUTTON                |  |
| 21. FORWARD BUTTON                |  |

### POWER CONNECTION

- Plug the AC Power Cord into an AC household outlet.  
**NOTE:** Please make sure that AC Voltage Selector is switched to your local voltage (optional).
  - If you want battery back up, connect one 9 Volt battery (not included) to the battery terminals of the Battery compartment.
  - This battery will maintain time and memory function during a power cut, but not display it.
  - Normal display and function will resume when power is restored, replace the battery periodically.
- NOTE:** This is an optional feature, no battery is required for normal operation.

### POWER FAILURE

When AC power is interrupted, time and alarm settings will be lost (unless 9 volt optional battery was installed) after power is restored. The digital display will blink to show your power was interrupted. You must reset time and alarm.

### BATTERY BACK UP

To keep alarm time and time of day settings in memory during a brief power failure or if the power cord is accidentally unplugged, install a 9V battery into the Battery Compartment at rear of unit.

## RADIO OPERATION


1. Slide the CD/RADIO switch to the RADIO position.
2. Slide the Band switch to a specified band.
3. Rotate the Tuning control to the desired station.
4. Adjust the Volume control to a comfortable listening sound level.
5. For AM(MW) band, better reception can be obtained by rotating the set. For FM band, the FM Aerial Wire (thin black wire) which serves as FM aerial, must be stretched to its full length.

**NOTE:** When you are receiving FM Stereo program, the FM Stereo indicator will be steady on.

**NOTE:** If a particular FM (STEREO) station is weak, or you hear too much background noise, try moving the position of the band selector switch to the FM (MONO) position. This can often result in a much clearer reception.

6. The radio can be switched off by setting FUNCTION switch to OFF position.

## COMPACT DISC OPERATION

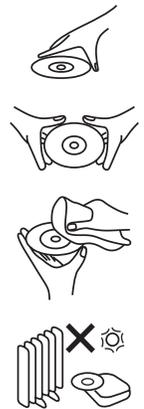

- Always protect a disc against scratches, soil and dust etc. It is recommended that during non-use periods the discs should be retained in the original case. If a disc is treated with reasonable care, the only maintenance likely to be needed to retain the excellent sound reproduction is wiped off with a cloth as indicated.
- To handle a disc use only one of the two manners illustrated. (Do not touch the rainbow - colored side)
- To wipe a disc, use only a soft cloth. Do not use benzene or thinner which will damage the disc. The disc should always be wiped in a straight line from the center to the edge. It should never be wiped in a circular motion.
- Never place the disc on other equipment or near any heat source. Avoid positions where the disc would be subjected to direct sunlight for long periods.

## LISTENING TO A COMPACT DISC

1. Set the CD/RADIO switch to CD position.
2. Press the Open button to open the CD Door, place a CD with the printed side up into the CD compartment
3. Press the corner of the CD door to close the lid, the disc will rotate and the LED Display will show the disc's total number of tracks.
4. Press the CD Play/Pause Button:
  - Press once the play starts from the first track.
  - Press this button in play mode and the playback will be paused. To resume playback from the same point, press the button again.

5. Press the CD Skip/Search buttons during play to skip to the desired track. Press the CD Skip/Search up button to skip to the next track on the disc. Press the CD Skip/Search Down button to skip to the beginning of the track currently playing.
  - Press and hold the CD Skip/Search buttons during play to scan the disc at high speed. When the desired section of the disc is found, release the button, normal play will resume.
6. Press CD Stop button to stop CD playing.

## PROGRAMME PLAY

Up to 20 tracks can be programmed for disc play in the order you like or the same track (song) can be repeated up to 20 times.

**NOTE:** Programming can only be done during stop mode.

1. Press the PROGRAM button in stop mode.
2. The display will show " 0 " flashing and the PROGRAM indicator will flash.
3. Press the SKIP/SEARCH buttons until the desired track shows in the display. The PROGRAM indicator keeps flashing.
4. Press the PROGRAM button. The first track is now stored into memory, and " 0 " flashes in the display again waiting for your next selection.
5. Repeat steps 3 and 4 until all the desired tracks are programmed.
6. When you have finished programming, press the PLAY/PAUSE button.
7. The display will show the track number being played, and the PROGRAM indicator will keep flashing during program play.
8. All songs will be played in the order you programmed.
9. If you want to hear the next song while playing, press the SKIP/SEARCH buttons.
10. When all the songs have finished, the set will stop. The PROGRAM indicator will turn off. To play the programmed tracks again, press the PROGRAM button, then press the PLAY/PAUSE button.
11. To erase the programme, press the PROGRAM button and then press STOP button.

## REPEAT PLAY OPERATION

### SINGLE TRACK REPEAT

To repeat the SAME track over and over again, do the following.

1. Press the Skip/Search Button during playback to select the track you want to repeat.
2. Press the Repeat Button. The Repeat Lamp will flash.
3. The track you selected will play over and over, till you press Stop Button.
4. To stop the repeat function, press Repeat Button twice.

### ALL TRACKS REPEAT

To repeat ALL TRACKS on a disc and then play them again and again, do the following.

1. Press Repeat Button twice during playback. The Repeat Lamp will be constantly on.
2. All the tracks on the CD will play in order and then start all over again. To stop the repeat function, press Repeat Button once.

### TO SET CLOCK TIME 24 HOURS

1. Press and hold Time set button.
2. While holding down Time set button ,press FORWARD and REVERSE buttons until correct time is displayed.
3. Release these buttons when the correct time is reached.

**NOTE:** When setting the time, be careful not to touch Snooze or Sleep button. Touching this button will change the display time.

**NOTE:** The PM Indicator (Optional) will be on for a 12-hour version when you have reached 12 o'clock and enter PM time setting.

### TO SET ALARM TIME

This set has dual alarms, you may set Alarm 1, to wake you at a certain time or Alarm 2 to wake you at a different time or Alarm 1+2 to wake you at both these different time you set.

To set Alarm 1, slide the Alarm selector to position 1.

To set Alarm 2, slide the Alarm selector to position 2.

**NOTE:** To check alarm time, press Alarm Set button. The display will show alarm time.

To wake at Alarm 1 time, slide Alarm selector to position 1; To wake at Alarm 2 time, slide Alarm selector to position 2; To wake at both time, slide to Alarm 1+2.

**NOTE:** When setting time, be careful not to touch Snooze and/or Sleep button. Touching these buttons will change the time.

### WAKE TO RADIO

1. Turn radio on (slide Band switch to MW or FM or FM ST. position) and adjust the Tuning and Volume control.
2. Set the alarm time or check if the pre-set alarm time is correct by pressing the Alarm set button.
3. Slide the FUNCTION switch to AUTO.
  - The radio will start playing automatically at the set alarm time.

### WAKE TO CD MUSIC

1. Open CD Door by pressing CD Open button and place a CD into the CD compartment.
2. Slide the CD/RADIO switch to CD.
3. Set the alarm time or check if the pre-set alarm time is correct by pressing the Alarm set button.
4. Slide the FUNCTION switch to AUTO.
  - The CD will then start playing from the first track at the pre-set alarm time.

### WAKE TO ALARM

1. Set the alarm time or check if the pre-set alarm time is correct by pressing the Alarm set button.
2. Slide the FUNCTION switch to BUZZER position.
3. Buzzer will sound at the pre-set alarm time.
4. Select High/Mid/Low ALARM Volume position.
5. Slide the FUNCTION switch to OFF to silence the alarm.

### SNOOZE FUNCTION

To sleep an extra 7 minutes when the Radio/Buzzer/CD comes on, lightly touch the Snooze button, the radio or alarm or CD will stop for 7 minutes and come on again.

The display for clock shows the minutes and seconds of the real-time clock. Let's say, the time is 12:36; press SNOOZE button; the display shows 6:00, with "6" as the minutes and "00" as the seconds of the clock. When a period of seven minutes passes, the display says "3:00" (the time now is 12:43); Radio/Buzzer/CD comes on again to wake you up.

### GOING TO SLEEP WITH MUSIC, CD OR RADIO

Pressing the SLEEP button will play your Radio/CD music for the amount of time you specify and then turn off automatically.

1. Press and hold the sleep button. The display will show 59 minutes.
2. While holding the sleep button, press the FORWARD or REVERSE button to increase or decrease the time to the required amount.
3. The RADIO/CD will play for the time you set and shut itself off automatically.

**NOTE:** To avoid influence on alarm pre-set time, make sure FUNCTION switch is set to AUTO or BUZZER for alarm to come on in time.

### MAINTENANCE AND CARE

1. Electronic products should never be subjected to extreme temperatures nor high humidity to ensure good performance and a long life-time. The clock radio should not be placed in bathing areas, or around stoves and radiators, etc. Always leave sufficient space around the unit for ventilation.
2. If necessary, only clean the cabinet of the unit with a soft dampened piece of cloth (be sure the AC power cord is unplugged from the outlet). Never use a polish or a strong detergent for cleaning since this can damage the finish of the cabinet.

### CLEANING THE CABINET

Before cleaning ensure the unit is unplugged from the mains. Wipe with a soft cloth. If the cabinet is very dirty, dampen the cloth with a weak solution of neutral detergent and water, and then wipe clean.

### CLEANING THE LENS

A dirty lens will cause sound skipping and, if the lens is very dirty, the CD may not work. Open the disc cover and clean the lens as follows:

#### Dust or dry particles

Using a camera lens brush/blower, blow on the lens couple times, then wipe it lightly with the brush to remove dust. Then, blow on the lens once more.

#### Finger prints

If the lens cannot be cleaned by using a brush/blower, use a dry cotton swab starting in the middle and working to the outside edge.