


 soundmaster®  
highline

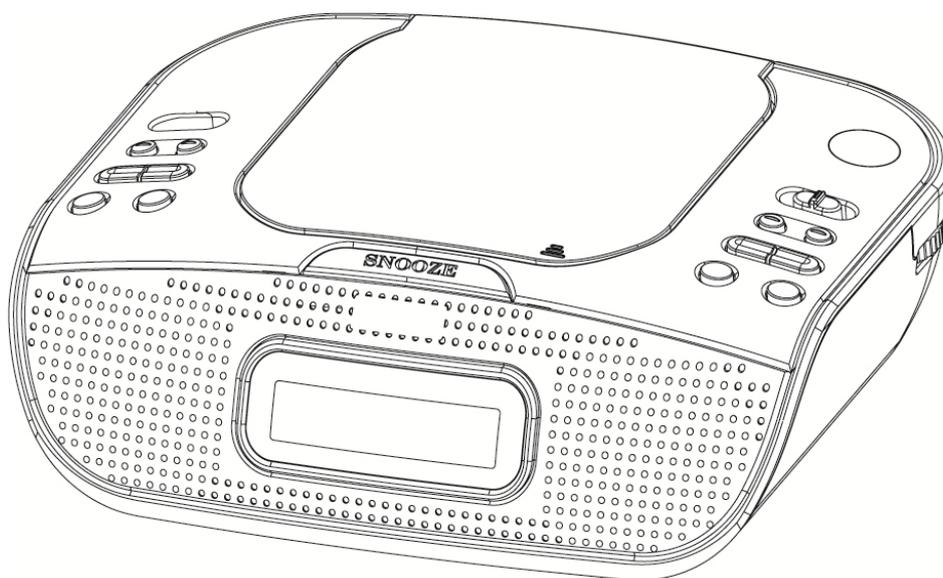

**DEUTSCH**  
**ENGLISH**  
**FRANÇAIS**  
**NEDERLANDS**  
**ESPAÑOL**  
**PORTUGUÊS**

**USB** 

**MP3**  
PLAYBACK

COMPACT  
**disc**  
DIGITAL AUDIO

**URD830USB**

# WARNINGS

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

## EXPLANATION OF GRAPHIC SYMBOLS



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**HAZARD WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**

## CLASS 1 LASER PRODUCT

**CLASS 1 LASER PRODUCT**  
**APPAREIL À LASER DE CLASSE 1**  
**PRODUIT LASER DE CLASSE 1**

### CAUTION

INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM



This product contains a low-power laser emitter.

## PRECAUTIONS FOR USE

To ensure safe, appropriate use of your personal CD player, please follow the advice below:

### Location

- Do not use the product in extremely hot, cold, dusty or damp conditions.
- Place the product on a smooth, flat surface.
- Ensure that air is free to circulate through the product. Do not use it in a poorly ventilated place, cover it with a cloth or place it on carpet.

### Power supply voltage

- Before using the product, check that its rated voltage is suitable for your mains supply.

### Safety precautions

- When you plug in or unplug the power cord, always hold the plug rather than the cable. Pulling the cord could damage it and create a hazard.
- Always unplug the product from the mains if you do not intend to use it for an extended period.
- The On/Off button does not disconnect the product from the mains power supply. To disconnect the product from the power supply, you must unplug the power cord.
- This product should only be used in a horizontal position.

### Condensation

- Water droplets or condensation may form inside the CD player if it is left in a warm, damp atmosphere.
- The product may not operate correctly if condensation forms inside it.
- Leave the product in a warm, dry room for 1 to 2 hours to allow the condensation to evaporate.

In the event of a problem, unplug the power cord and contact a qualified repair technician.

### Warning: Ventilation

Your personal CD player has should never be obstructed.

### Liquid warning

Never allow liquids to splash or drip onto the product. Never place a liquid-filled container (e.g. vase, jar, etc.) above it.

- "The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus"
- "The mains plug is used as the disconnect device and it shall remain readily operable. To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains."
- The apparatus will be use in open area
- the ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc
- no naked flame sources such as lighted candles should be placed on the apparatus;
- attention should be drawn to the environmental aspects of battery disposal;
- the use of apparatus in moderate climates.

## POWER SOURCES

### Power connection

1. Plug the AC 230V Power Cord into an AC household outlet.
2. If you want battery back up, insert two alkaline AAA battery (not included) into the battery compartment on the underside of the unit. Battery life is approximately 12 months.
3. The batteries will remember the time during a power cut, but not display it.
4. Normal display and function will resume when power is restored, replace the batteries annually.

NOTE: No battery is needed for normal operation.

## PLAYER MAINTENANCE

### Cleaning the Cabinet

**IMPORTANT:** Disconnect from Main Supply Before cleaning. Wipe with a soft cloth. If the cabinet is very dirty, dampen the cloth with a weak solution of neutral detergent and water, and then wipe clean.

### Cleaning the Lens


A dirty lens may cause the sound to skip and, If the lens is very dirty, the CD may not work. Open the disc cover and clean the lens as follow:

### Dry Dust Particles


Using a camera lens brush/blower, blow on the lens couple times, then wipe it lightly with the brush to remove dust. Then, blow on the lens once more.

### Fingerprints

If the lens cannot be cleaned by using a brush/blower use a dry cotton swab.

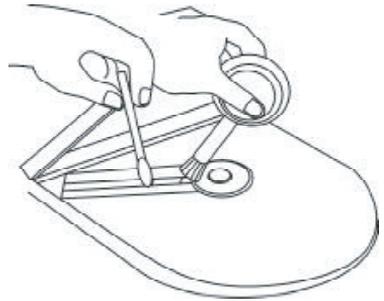

## DISC CLEANING, POWER FAILURE

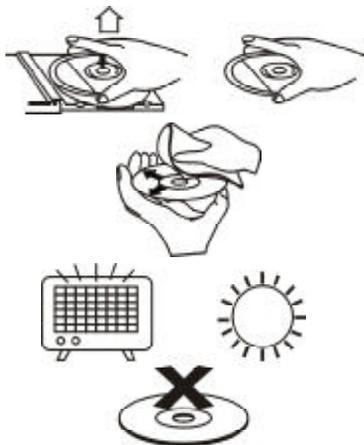

### Cleaning the Disc

1. To handle a disc use only one of the two manners.  
Note: Do not touch the rainbow colored side.
2. To wipe a disc, use only a soft cloth. Do not use benzene or thinner which will damage the disc, the disc should always be wiped in a straight line from the centre to the edge. It should never be wiped in a circular motion.
3. Never place the disc on other equipment or near any heat source. Avoid positions where the disc would be subjected to direct sunlight for long periods.

### Power failure

When AC power is interrupted, both time and alarm settings will be lost (unless 2 x AAA battery (not supplied) is installed) after power is restored. The digital display will blink to show power was interrupted. You must reset time and alarm times.

### Battery back up


To keep alarm and time of day settings in memory during a brief power failure or accidental removal of AC cord from main socket, install 2 x AAA battery (not supplied) into the battery compartment on the underside of the unit.

Corrosion, oxidation, battery-leakage and any other gradually acidic defect of this nature will invalidate the guarantee.

### Maintenance and care




1. Electronic products should never be subjected to extreme temperatures nor high humidity to ensure good performance and a long life-time. The clock radio should not be placed in bathing areas, or around stoves and radiators, etc. Always leave sufficient space around the unit for ventilation.
2. If necessary, only clean the cabinet of the unit with a soft dampened piece of cloth, (be sure the AC power cord is unplugged from the outlet). Never use a polish or a strong detergent for cleaning since this can damage the finish of the cabinet.
3. If the electric cable is damaged, it must be replaced by the manufacturer, or by the qualification persons, in order to avoid a danger.

## LOCATION OF CONTROLS

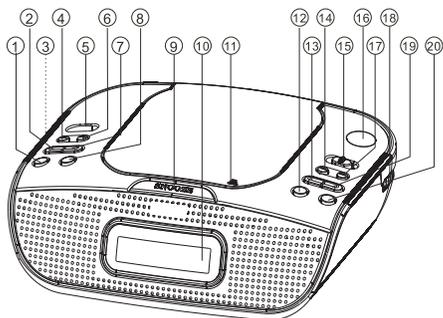

### Function of controls

1. STANDBY / ON button
2. ALBUM- button
3. VOLUME control
4. ALARM 1 button
5. USB inlet
6. ALARM 2 button
7. ALBUM+ button
8. SLEEP button
9. SNOOZE button
10. LED DISPLAY
  - A. ALARM 1 indicator
  - B. ALARM 2 indicator
  - C. SLEEP indicator
  - D. PROGRAM indicator
  - E. REPEAT indicator
  - F. SNOOZE indicator
  - G. PM indicator
  - I. USB indicator
  - J. POWER ON indicator
11. CD door
12. STOP button
13. MINUTE/SKIP ◀◀ button
14. CLOCK ADJ/PROGRAM button
15. FUNCTION (CD/AM/FM/LINE IN) switch
16. Dial Scale
17. REPEAT button
18. TUNING control
19. ▶▶ HOUR button
20. PLAY/PAUSE button
21. FM ANT
22. LINE IN JACK
23. EARPHONE JACK
24. Battery Compartment
25. AC mains

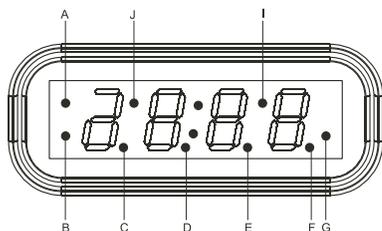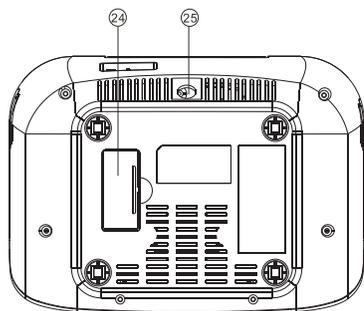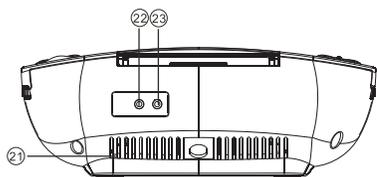

## General operation

1. To turn on the unit, press STANDBY/ON Button. The ON/OFF indicator will appear on the display.
2. Slide the FUNCTION selector to select CD, AM, FM or LINE IN.
3. Adjust the sound with the VOLUME control.
4. To turn off the set, press STANDBY/ON Button again. The ON indicator will disappear from the display.

## SETTING THE CLOCK/TIME

Connect the AC power cord to a wall outlet.

1. 12:00 will be shown on the display and begin to flash.
2. During STANDBY MODE, Press ►► /HOUR button to set the hour and then press MINUTE / ◄◄ button to set the minute.
3. Press the CLOCK ADJ./PROGRAM button to confirm the time, the digits will stop flashing.
4. Press and hold the CLOCK ADJ./PROGRAM button to switch between 12H and 24H.
5. During STANDBY mode, press the CLOCK ADJ./PROGRAM button and repeat steps 2 to 4 to change the time as well.

Note: The clock does not keep time during a power failure.

## LISTEN TO THE RADIO

1. Slide the FUNCTION selector to AM or FM position.
2. Press the STANDBY/ON button, the ON indicator will light up.
3. Tune into a station using the TUNING control. The Dial Scale window can show the current frequency.

FM: Extend the FM aerial wire to improve FM reception.

AM: Turn the unit for better AM reception.

## CD PLAYING

1. Open the CD door.
2. Place a disc in the centre with the label side facing up and close the CD door.
3. Press the STANDBY/ON button to ON status, the ON indicator will light up.
4. Slide the FUNCTION selector to CD position, the display will show flashing " Cd " before the reading process is completed.

## BASIC OPERATION

To stop Playback	Press STOP button
To pause Playback	Press ►/   button. To resume playback, press it again
To search for the beginning of a track	Press the MINUTE/⏮ button briefly
To locate a desired passage	Keep ►►/HOUR or MINUTE/⏮ pressed. Release the button at the start of the desired passage.
To next track or previous track	Press ►►/HOUR button to next track. Press MINUTE/⏮ button more than once briefly to previous track.
To folder up or down (if it contains folder with MP3/WMA files)	Press ALBUM + or ALBUM – to folder up or down.

## REPEAT MODE

Press the REPEAT button before or during playback, play mode will be changed as follow:

- |                               |                                      |                                  |
|-------------------------------|--------------------------------------|----------------------------------|
| 1. REPEAT                     | 2. REPEAT ALL                        | 3. NORMAL                        |
| (Repeat indicator will flash) | (Repeat indicator will be steady on) | (Repeat indicator will turn off) |



## PROGRAMMED DISC PLAY

Up to 20 tracks can be programmed to play in a specific order by following these steps:

1. Slide the FUNCTION selector to CD.
2. Press STANDBY/ON button , the ON indicator will light up.
3. Press CLOCK ADJ./PROGRAM button.
4. Press ALBUM + or ALBUM – to select the desired album (if it contains folder with MP3/WMA files).
5. Press ►►/HOUR or MINUTE/⏮ button to select the desired track.
6. Press the CLOCK ADJ./PROGRAM button to store the track.
7. Repeat steps 4 to 6 to program all tracks in this way.
8. Press ►/|| button to start programmed tracks. The PROGRAM indicator will light up.

To erase the program

- Press the STOP twice when the CD is playing the programmed tracks.
- Opening the CD door will also erase the contents of program memory.
- Slide the FUNCTION selector to FM, AM, or LINE IN position.

## USB FUNCTION

1. Connect your USB device into the USB port. The USB indicator will be shown on the display.
2. Press the STANDBY/ON button to ON status, the ON indicator will light up.
3. Slide the FUNCTION selector to CD position.
4. Press and hold ►/II to enter into USB mode. The display will show flashing “ USB ” before the reading process is completed.

Note: The basic operation of USB mode is the same with CD operation, please refer to the previous instruction.

This unit is compatible with most of the USB devices available in the market. We can not guarantee 100% workable with all USB devices and it is not an indication of malfunction of the unit.

## LINE-IN FUNCTION

You can listen to the sound from external audio sources through this unit.

1. Slide the FUNCTION selector to LINE IN position.
2. Connect the external audio source through 3.5mm cable to the LINE IN jack, located at the rear of unit.
3. Set the external audio player to play.

Note: connection cable is not included

## TO SET THE ALARM TO WAKE TO BUZZER/CD/RADIO

The radio, buzzer or CD automatically sounds at the designated time every day. You can set in total two wake times (ALARM 1, ALARM 2) into this unit.

Note: please do under STANDBY mode, while the ON indicator is off. )

1. Press the ALARM 1 or ALARM 2 button, the digits will flash.
2. Press the ►► /HOUR and MINUTE/◄◄ buttons to set the desired wake up time.
3. Press the ALARM 1 or ALARM 2 button to confirm after setting. The ALARM 1 or ALARM 2 active indicator will light up on the display.
4. Slide the FUNCTION selector to LINE IN/BUZZER position for BUZZER wake up. For CD/AM/FM wake up, slide the FUNCTION selector to CD, AM or FM position and adjust the desired volume.
5. To cancel the ALARM 1 wake up, press the ALARM 1 button once, the active indicator will off (The cancellation of ALARM 2 is the same).

## SNOOZE

The alarm can be postponed by pressing the SNOOZE button: the ALARM 1 or ALARM 2 indicator will flash at this time. The alarm will turn back on automatically 6 minutes later.

## TO ACTIVE THE SLEEP FUNCTION

Turn to your desired radio station or play a CD as previous instruction.

1. Press SLEEP button and the SLEEP indicator will light up on the display.
2. Press the SLEEP button repeatedly to select the desired sleep time 90, 60, 30 or 15 minutes, the SLEEP indicator will remain on the display to indicate the sleep mode is activated.
3. To cancel the sleep time, press the SLEEP button again until the SLEEP indicator goes off.

## PHONES JACK

This unit includes a PHONES Jack on the rear panel. You may connect a earphone (not included) to this jack for private listening without disturbing others. The main speakers are automatically shut off when headphones are connected to the PHONES Jack.

## PRODUCT SPECIFICATIONS

### RADIO

Receiving bands:	AM/FM
Frequency range:	AM 540 – 1600kHz FM 87.5 – 108.5MHz

### GENERAL

Power requirements:	AC230V – 50Hz 2×AAA battery back up(battery not included)
Power consumption:	12W
Demension:	240mm(W)×88mm(H)×174mm(D)
Weight:	1.17kg(not including battery)
LINE IN/ PHONES jack:	3.5mm
STANDBY POWER CONSUMPTION	< 2W



#### Disposal of Used Electrical & Electronic Equipment

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.