soundmaster®

DEUTSCH
ENGLISH
FRANÇAIS

NEDERLANDS
ESPAÑOL
PORTUGUÊS

PLL TUNING | Radio | AUX IN | CD-R/RW Compatible | COMPACT disc DIGITAL AUDIO | mp3

Made for iPod iPhone

URD810iPH

PRECAUTIONS

1. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
2. WARNING: Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc).apply to adaptor
3. WARNING：Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.(apply label on bottom)
4. WARNING：To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
5. WARNING：For the terminals marked with symbol of " ϟ " may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the used of ready-made leads or cords.
6. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
7. WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.
8. WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
9. WARNING: The CRT in this apparatus employs a protective film on the face. This film must not be removed as it serves a safety function and removal will increase the risk of serious injury.
10. WARNING: Excessive sound pressure from earphones and headphones can cause hearing loss.
    -- WARNING: Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels. Headsets should comply with EN 50332-2 requirements (for GS certification)..
11. WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable. readily operable.
    -- The all-pole mains switch located on front panel is used as the disconnect device, the switch shall remain readily operable.
    -- The all-pole mains switch and all-pole circuit breaker are not provided with the apparatus, the installation shall be carried out in accordance with all applicable installation rules.
12. This apparatus is for professional use only.
13. When not in use and during movement, please take care of the power cordset, e.g. tie up the power cordset with cable tie or something like that. It shall be free from sharp edges and the like that can cause abrasion of the power cordset. When put into use again, please make sure the power cordset being not damaged, If any damages found, please look for the service person to replace the power cordset specified by the manufacturer or have the same characteristics as the original one.
14. Explanation of symbol, marking, signal lamp or similar means indicate that apparatus is completely disconnected from the mains.
15. No naked flame sources, such as lighted candles, should be placed on the apparatus.
16. Attention should be drawn to environmental aspects of battery disposal.
17. Use of the apparatus in moderate climates.
18. Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam of laser.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.

They can take this product for environmental safe recycling.

CONTROLS

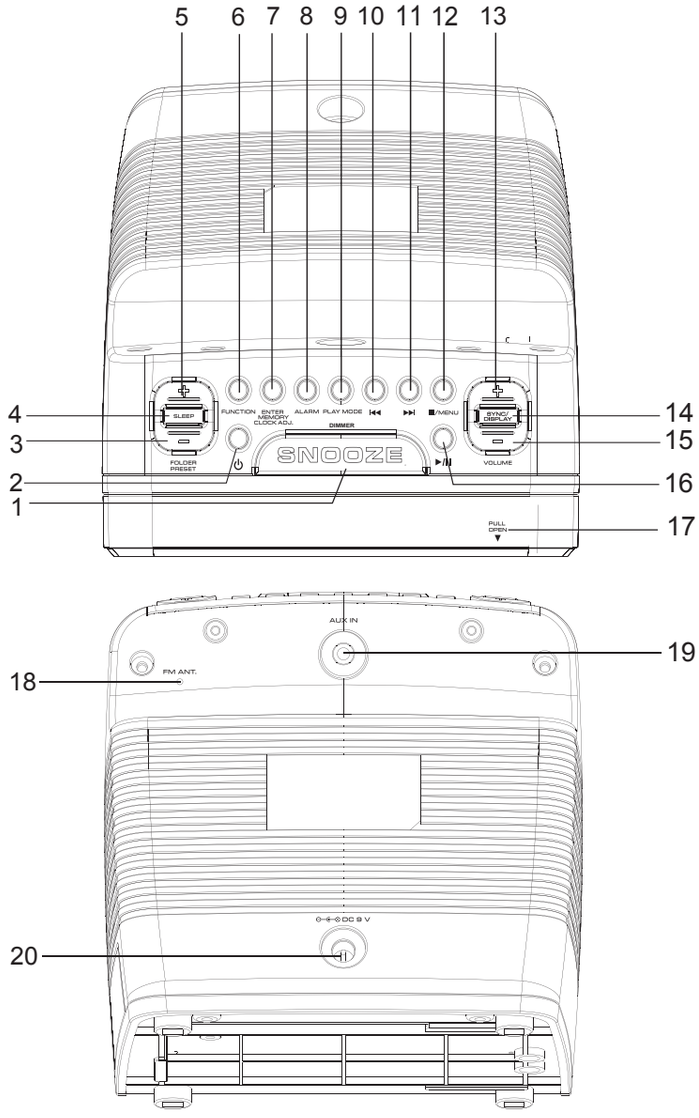

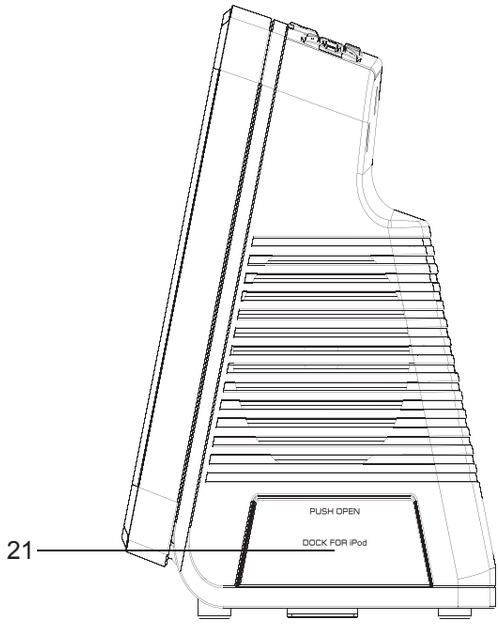

1. SNOOZE/DIMMER BUTTON
2. STANDBY BUTTON
3. FOLDER PRESET - BUTTON
4. SLEEP BUTTON
5. FOLDER PRESET + BUTTON
6. FUNCTION BUTTON
7. CLOCK ADJ./MEMORY/ENTER
8. ALARM BUTTON
9. PLAY MODE BUTTON
10. SKIP ⏮ BUTTON
11. SKIP ⏭ BUTTON
12. ■/MENU BUTTON
13. VOLUME +BUTTON
14. SYNC/DISPLAY
15. VOLUME - BUTTON
16. ▶/II BUTTON
17. CD DOOR
18. FM ANTENNA
19. AUX IN JACK
20. DC MAINS
21. iPhone/iPod DOCK

ADJUSTING THE CLOCK

When the unit is first connected to the AC power line, the clock display blinks on the display.
Example: To set “6:30”.
First, press the STANDBY button to turn the power off. The clock displays.



1. Press the MEMORY/CLOCK button for at least 2 seconds. “12 HOUR” display with the digits 12 flashing. Press the ⏮ or ⏭ button to set 24 hour mode.

2. Press the MEMORY/CLOCK button to confirm. The hours display blinks.

3. Press the ⏮ or ⏭ button to set the “hours”.



4. Press the MEMORY/CLOCK button to confirm. The minutes display blinks.

5. Press the ⏮ or ⏭ button to set the “minutes”.



6. Press the MEMORY/CLOCK button. The current clock displays.

- The clock can be synchronized automatically when inserting the iPhone/iPod at the first time affer 60s. It can also be set later by pressing and holding the SYNC/DISPLAY button at iPod mode with iPhone/iPod docked when a time signal is received affer 60s.
- If a power failure occurs or the mains lead is disconnected, the clock display dims . Reset the time again.
- The clock will be 12 hour mode at the first synchronizing. If you want to set 24 hour mode, please change the hour mode at clock setting at STANDBY mode.

BEFORE OPERATION

Turning the power on and off

Press the STANDBY button to turn on the power, the display lights up.

To turn the power off, press the STANDBY button again. The clock displays.

Select the function

Press the FUNCTION button to select the desired function. Each time the button is pressed, the display changes as follow:
iPod ⟶ AUX ⟶ TUNER ⟶ CD ⟶ ...

Adjusting the volume

press the VOLUME - or + button on the unit or remote controller. The volume level (0~30) appears by numbers on the display.

WHAT TO DO IF ...

If the operation of the unit or display is not normal even thought the appropriate buttons have been pressed,

1. Unplug the mains plug.
2. Plug the mains plug again.
3. Turn on the power and resume the operation.

CD PLAY

Use compact discs bearing the symbol shown below. In addition to conventional 12 cm CDs, this system can be used to play 8 cm CDs.

COMPACT
disc
DIGITAL AUDIO

1. Press the FUNCTION button repeatedly to select the "CD" function. "CD" appears and "READ " blinks for several seconds.
2. Pull the PULL OPEN position toward the way the arrowhead pointed to open it. "OPEN" appears.
3. Place the disc with the label facing outside on the disc turntable. (Place onl one disc at a time.)
4. Pull the CD door toward inside to close it. "READ" blinks for several seconds, then the total number of tracks appears.

   Note:
   If a badly scratched disc is loaded or if the disc is loaded with the label facing downward, "NO DISC" appears. If this occurs, load the disc correctly or replace the damaged disc.
5. Press the PLAY/PAUSE ►/II button. Play starts from the first track. The current track with elapsed playing time are displayed.

6. Press the ■/MENU button to end disc play.

   When the last track has been played, the player stops automatically.

- Do not open the CD compartment during CD play. Always press the ■/MENU button and wait for the disc to stop rotating before opening the CD compartment.

Notes on handling compact discs

- Do not expose the disc to direct sunlight, high humidity or high temperatures for extended periods of time.
- Discs should be returned to their cases after use.
- Do not apply paper or write anything on the disc surface.
- Handle the disc by its edge. Do not touch the playing surface (glossy side).
- Fingerprints and dust should be carefully wiped off the playing surface of the disc with a soft cloth. Wipe in a straight motion from the centre to the outside of the disc.
- Never use chemicals such as record cleaning sprays, antistatic sprays or fluids, benzene or thinner to clean compact discs.

To start play from the desired track

Select the track by using the I◄◄ or ►►I button, then press the PLAY/PAUSE ►/II button.

Temporarily stopping play

Press the PLAY/PAUSE ►/II button, the display shows either current track or elapsed play time. To resume play, press the button again.

Skip play

To skip to track 6 while track 3 is playing, press the ►►I button repeatedly until "06" appears (in the track section) on the display.
To skip back to track 3 while track 6 is playing, press the I◄◄ button repeatedly until "03" appears.

Search (forward/reverse)

If the I◄◄ or ►►I button is pressed during play, the player will search a high speed in the forward or reverse direction while the button is being pressed. When the button is released, normal play will continue.

Repeat and Random

Press the PLAY MODE button repeatedly during play to select various play mode available. Each time the PLAY MODE button is pressed, the play mode changes as shown below:

[CD]

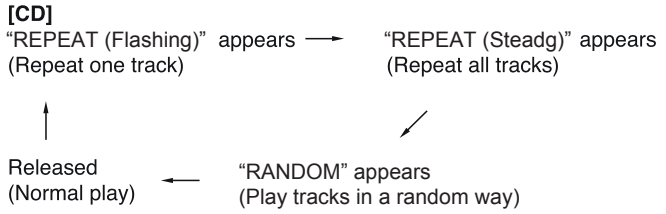

[MP3 CD]

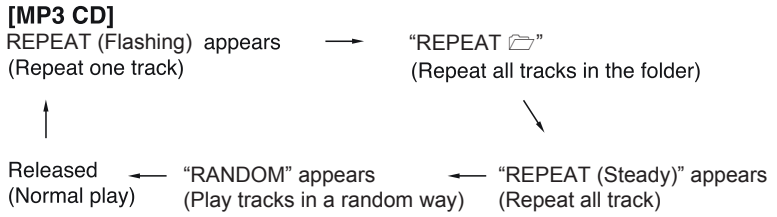

PROGRAMMED PLAY

Up to 64 tracks on a disc can be programmed for play in any order.
- First, select “CD” function and load a disc that you want to programme.
- The tracks must be programmed in the stop mode.
- The same track can be programmed more than once.

1. Press the CLOCK ADJ./MEMORY/ENTER button.

2. Select a track by using the I◄◄ or ►►I button

3. Press the CLOCK ADJ./MEMORY/ENTER button.

4. Repeat steps 2 - 3 to programme additional tracks.
5. Press the PLAY/PAUSE ►/II button to start programmed play.

When all programmed tracks have been played, the player stops automatically.
- The programme contents are retained in memory.
- Any attempt to programme more than 64 tracks will result in first programmed number appears and discontinuance of the programming.

Checking the programme

In stop mode press the CLOCK ADJ./MEMORY/ENTER button repeatedly, programmed details sequentially appear on the display.

Changing a programme

To add a new track to a programme:
1. In the stop mode, press the CLOCK ADJ./MEMORY/ENTER button.
2. Select a track as explained above.
3. Press the CLOCK ADJ./MEMORY/ENTER button.

To change a track:
1. In the stop mode, press the CLOCK ADJ./MEMORY/ENTER repeatedly until the track number to be replaced is displayed.
2. Select a track as explained above.
3. Press the CLOCK ADJ./MEMORY/ENTER button.

Note:
Programmed details cannot be partially deleted or inserted.

MP3/WMA CD OPERATION

This unit can play back the CD-R/RW that has recorded music data, MP3 or WMA (Window Media Audio) files. Before playing back MP3/WMA CD, please read the following.

MP3/WMA CD information

- MP3/WMA CD is the disc that standardized by ISO9660, its file name must have the extension letters, “.MP3” or “.mp3”/ “.WMA” or “.wma”.
- Standard, sampling frequency, and the bit rate:
  MP3 files:
  MPEG-1 Audio
  32 kHz, 44.1 kHz, 48 kHz
  32 kbps ~ 320 kbps (constant bit rate or variable bit rate)
  WMA files:
  WMA version 7, 8 and 9
  32 kHz, 48 kbps ~ 64 kbps
  44.1 kHz, 48 kbps ~ 192 kbps
  48 kHz, 128 kbps ~ 192 kbps
  WMA9 professional files, WMA9 lossless files or DRM (copyright protection) files cannot be played.
- In this model, recommend recording setting for a high-quality sound is 44.1 kHz of sampling frequency and 128 kbps of constant bit rate.
  If files are recorded in other bit rate (for example: 320 kbps) or in variable bit rate, track-jump may sometimes happen according to recording conditions.
- This unit can recognize up to 99 folders or 999 files per disc. The CD with 100 folders or 1000 files and over is not available to this unit.
- This unit can recognize up to 8 directory trees per disc.
- Some MP3/WMA CD may not be played in the recorded order.

Notes on disc writing method
There are three basic methods for writing to a CD: “Track-at-Once ”, “Disc-at-Once”, and “Packet Writing”.
Music files recorded by “Track-at-Once” or “Disc-at-Once” can be played back on this unit. (Note: The unit cannot play back the music files added with “Track-at-Once”.)
Music files recorded by “Packet Writing” cannot be played back.

Limitation on the display
Available letters for display are the following: capital alphabets of A through Z, numbers of 0 through 9.

MP3 CD directory sample:
Play order: song01 → song02 → ... → song14

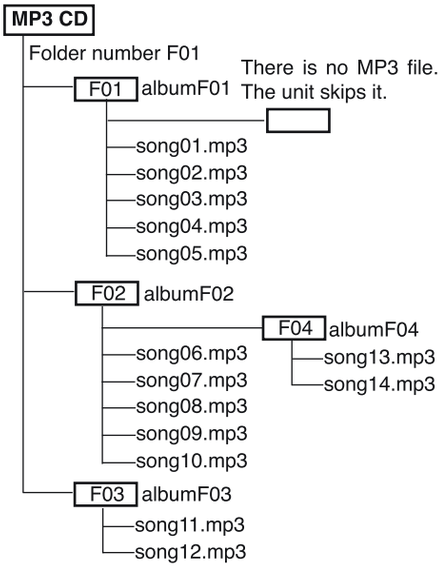

Note:
- Some MP3 CDs can not be played back depending on the recording conditions.
- The CD-R/RW that has no music data or non-MP3 files can not be played back.
- Do not make an empty folder. It may not work correctly.
- In this model, recommend recording setting is 128 kbps of fixing bit rate. If files are recorded in other bit rate (for example: 320 kbps) or in variable bit rate, track-jump may sometimes happen according to recording conditions.

MP3/WMA track Play

1. Load the MP3/WMA CD . "READ" blinks, then the total number of files on the disc appear on the display

2. Press the FOLDER/PRE. UP or DN button to select the desired folder. The first track of selected folder will display.

3. Press the I◄◄ or ►►I button to select the desired track.



4. Press the PLAY/PAUSE ►/II button to start play.

5. Press the ■/MENU button to end playback.

Note:
If there is no music data, "NO " appears.

Programmed playback

1. In stop mode, press the CLOCK ADJ./MEMORY/ENTER button.

2. Press the I◄◄ or ►►I button to select desired folder.



3. Press the CLOCK ADJ./MEMORY/ENTER button.

4. Press the I◄◄ or ►►I button to select desired file.

5. Press the CLOCK ADJ./MEMORY/ENTER button.



6. Repeat 2 ~ 5 steps to programme additional files.
7. Press the PLAY/PAUSE ►/II button to start programmed play.

8. Press the ■/MENU button at any time to stop the programme playback.

iPod /iPhone OPERATION

IMPORTANT INFORMATIONS
Using the iPod Dock you can play music from the iPod /iPhone through the unit's speakers and operate with the remote control. The unit comes with four removable dock adapters to ensure the proper fit your iPod/iPhone and to help reduce stress on the connector when operating the iPod/iPhone.

Warning

When connecting an iPod /iPhone to this iPod Dock, please ensure that the correct dock adapter is used. FAILURE TO DO SO MAY RESULT IN DAMAGE TO THE iPod /iPhone .

Before use

Open the iPod holder, dock the iPod /iPhone correctly .

Note:

The iPod/iPhone will be charged when the unit is powered on. It will stop charging if the unit is set to Standby.

Basic playback

1. Place the dock adapter in the dock and press into position. The adapter will only go in one way.
2. Carefully align and gently insert the iPod /iPhone into the dock. Remove any case or skin from the iPod /iPhone before attempting to dock.
3. Press the FUNCTION button repeatedly on the mains unit to select the iPod function. "iPod" appears on the display.
4. Press the MENU button to enter the main menu.
5. Press the FOLDER/PRE. UP or DN button to select the desired item.
6. Press the ENTER button to start playback.
7. Press the ►►| button to skip to next track.
   Press the |◄◄ button to skip back to the beginning of track currently play, press the button again immediately to skip to previous track.

Temporarily stopping play

Press the PLAY/PAUSE ►/II button. To resume play, press the button again.

This unit operates with the below iPod/iPhone models:

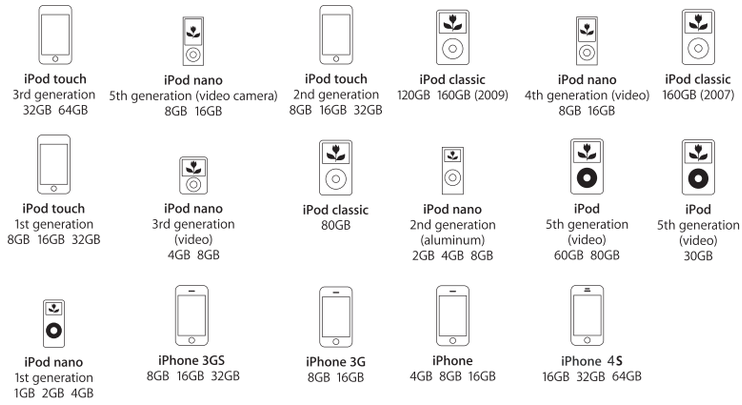

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

LISTENING TO THE RADIO

Automatic/Manual tuning

1. Press the FUNCTION button repeatedly to select tuner function.
2. **Automatic tuning**
   Press the I◄◄ or ►►I button for at least 2 second to tune in a station. The unit will scan up or down the band and receive the next receivable station. Press the button again to continue.
   - When using the remote controller, use the I◄◄ or ►►I button.

   Manual tuning
   Press the I◄◄ or ►►I button briefly until the desired frequency is displayed.

To preset stations

Up to 20 stations for FM band.

1. Tune in the station to be preset as described above.
2. Press the CLOCK ADJ./MEMORY/ENTER button.

3. Press the FOLDER/PRE. UP or DN button on the unit to select the channel to be preset.

4. Press the CLOCK ADJ./MEMORY/ENTER button, " MEMORY " remains lit.

5. Repeat steps above to add more preset stations.

When presetting a new station, the previous preset station is cleared.

Listening to preset stations

1. Press the FOLDER/PRE. UP or DN button on the unit to select the desired channel number.

LISTENING TO OTHER SOURCES

1. Press the FUNCTION button repeatedly to select the line in function. "AUX " appears on the display.
2. Connect a stereo 3.5mm jack cable (supplied) between the headphone or AUX output of the personal audio play and the AUX IN jack on the rear panel.

Auxiliary equipment

- MP3 players
- CD walkman players
- Tape walkman players
- Personal computers or laptops

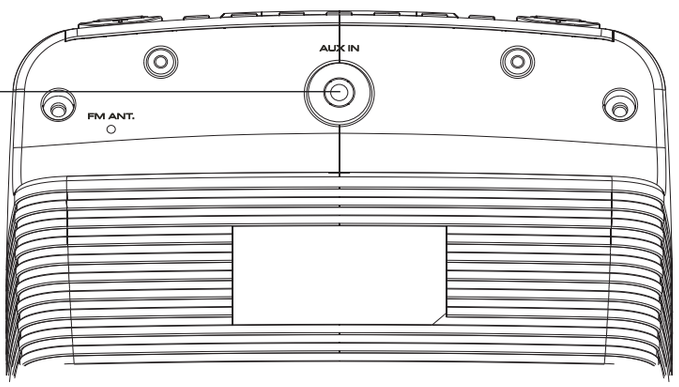

ALARM OPERATION

Wake-up alarm

Set the on-time, and functions to be used. Operation will start with the selected function at the on-time. The sound will be gradually increased from a no-sound level to the current volume setting (fade-in). The alarm will function every day unless it is released.

Note:

The Alarm function can be set at ON mode.

Preparations

Make absolutely sure that the clock is set to the correct time before setting the timer.

- Adjust a available station if choosing tuner.
- Place the disc in advance if choosing “CD”.
- Dock an iPod at first if choosing iPod function.

Example:

Waking up 7:30 everyday

1. Press the "Alarm" button once, "Alarm" appears on the display, the “hour” section blinks.

2. Press the I◄◄ or ►►I button to set the “hours”.

3. Press the ALARM button.
   The minutes display blinks.

4. Press the I◄◄ or ►►I button to set the “minutes”.

5. Press the ALARM button. “TUNER” appears.
6. Press the I◄◄ or ►►I button to select the source.
   TUNER ⟶ CD ⟶ iPod ⟶ BUZZER ⟶ ...
   In this example, tuner function is selected.
7. Press the ALARM button. the sound level blinks on the display.
8. Press the I◄◄ or ►►I button to set the desired volume.
9. Press the ALARM button.
10. Press the ON/STANDBY button to turn off the power. The “ALARM” remains lit.

Note:

- When the timer on-time arrives, the power is turned on automatically and start the preset function.
- To cancel the alarm function press the ALARM button the “ALARM” disappears.
- When you select the iPod for the on-time, however, an iPod doesn’t be docked at first, the function will be switched to TUNER mode automatically when the timer on-time arrives.
- Not to reset timer and use the timer function again please press the ALARM button, the “ALARM ” appears on the display.

USING THE SLEEP TIMER

The sleep timer automatically switches off the power after a preset time has elapsed. There are 5 times periods available:120, 90, 60, 30 and 15 minutes.

Press the SLEEP button repeatedly to select the desired sleep time. “SLEEP” appears and the selected time appears on the display.
After several seconds, the original display returns, “SLEEP” remains lit.

To release the sleep timer while in operation

Press the SLEEP button repeatedly until “ OFF ” disappears from the display. The timer is also released if the power is switched off.

IP300UK.indd 10 2010.5.12 1:26:20 PM

MAINTENANCE

Cleaning the CD player lens

The lens should never be touched. If dust is on the lens, blow it off using a camera lens blower. (Consult your dealer.)

Cleaning the unit

Clean the outside of the unit with a clean soft cloth, moistened with lukewarm water. Do not use benzene, thinner or alcohol since they will mar the finish of the surfaces.

SPECIFICATIONS

Tuner

Reception frequency:
FM: 87.5 - 108 MHz

CD Player

Type:
2-channel stereo

Frequency response:
20Hz - 20KHz

General

Outputs:
SPEAKERS: 8 ohms

Power requirement:
AC 100~230V 50Hz

Dimensions:
139(W) x 150(H) x 128(D) mm

Weight:
Approx. 0.69kg

IP300UK.indd 11 2010.5.12 1:26:20 PM